

Dell Vostro 3300 Hard Drive Replacement

Written By: Johnathan Hammond



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Hard Drive.



TOOLS:

• Phillips #0 Screwdriver (1)

Step 1 — Sliding the Latch



 Slide the battery release latch to the unlock position.

Step 2 — Sliding the Latch



 Slide the other battery release latch to the unlock position.

Step 3 — Slide the Battery




 Slide the battery and remove it from the computer.

Step 4 — Base Cover



 Remove the screws that secure the base cover to the computer.

Step 5 — Lifting the Base Cover

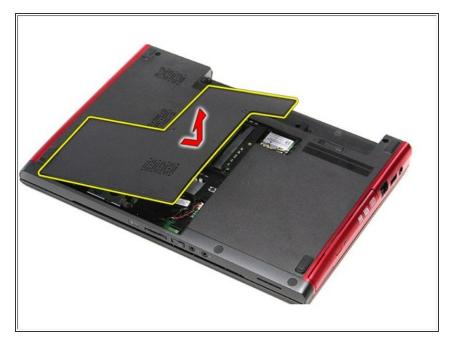

 Lift up the base cover and remove it from the computer.

Step 6 — Remove the Screws




 Remove the screws that secure the hard-drive assembly to the computer.

Step 7 — Lifting the Hard-Drive Assembly




 Pull up on the black hard-drive release tab and lift the hard-drive assembly up and away from the computer.

Step 8 — Remove the Screws

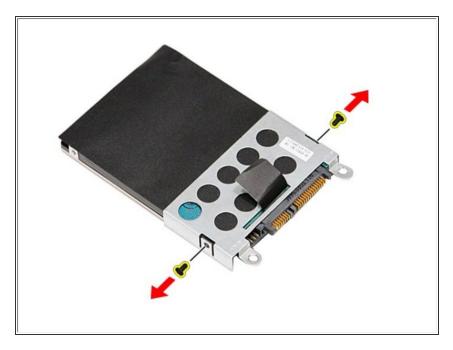

 Remove the screws that secure the hard-drive bracket to the hard drive.

Step 9 — Remove the Hard-Drive Adapter

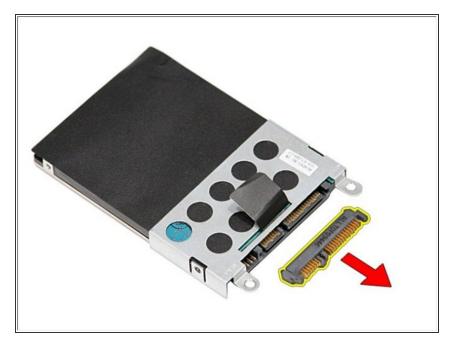

 Remove the hard-drive adapter from the hard-drive assembly.

Step 10 — Lifting the Hard-Drive Bracket



 Lift the hard-drive bracket up and away from the hard drive.