



# replace the HP DM4-3050US Laptop screen

How easy to replace the HP 3050US Laptop screen

Written By: Quang Ly



---

## INTRODUCTION

How easy to replace the HP PAVILION DM4-3050US Laptop screen

---

### TOOLS:

- [Precision Utility Knife](#) (1)
  - [Tweezers](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Laptop screen



- Turn off computer and remove the battery in the back side

## Step 2



- Remove screw covers in both sides with the knife

### Step 3



- Screw cover removed

### Step 4




- Open screws for both sides

## Step 5



- Use guitar pick to unclip the screen bezel

## Step 6

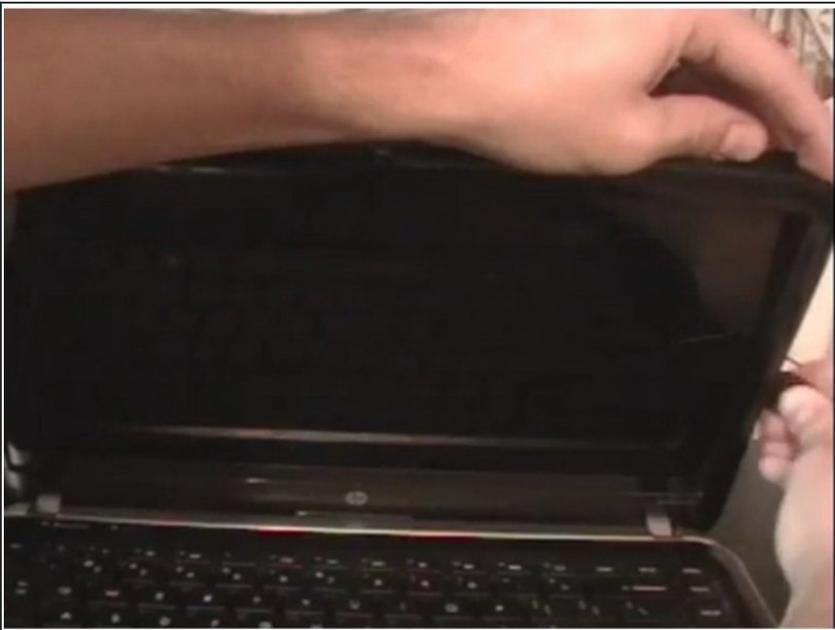


- Use guitar pick to unclip the screen bezel

## Step 7



- Remove the bezel

## Step 8

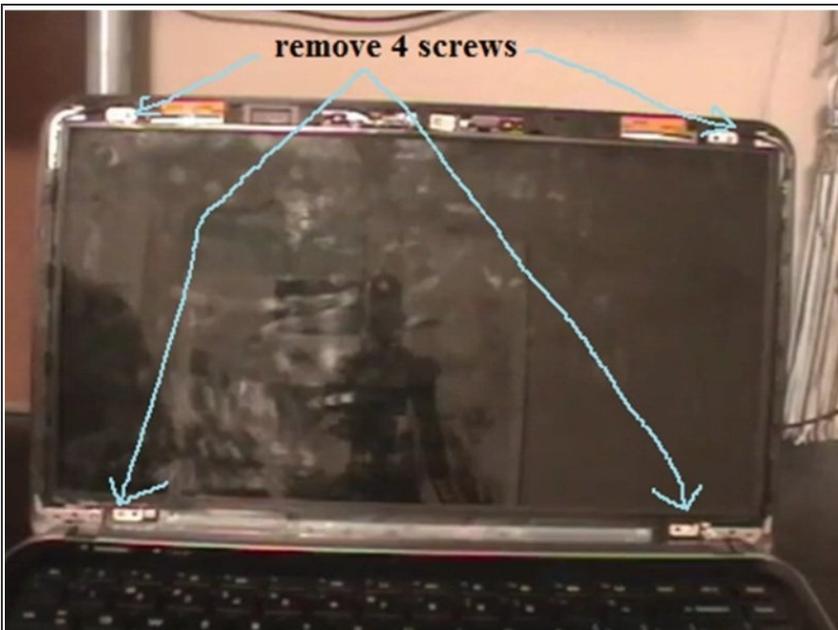


- Remove 4 screws of screen holder

## Step 9




- Remove screen from back panel and lay it on the keyboard

## Step 10

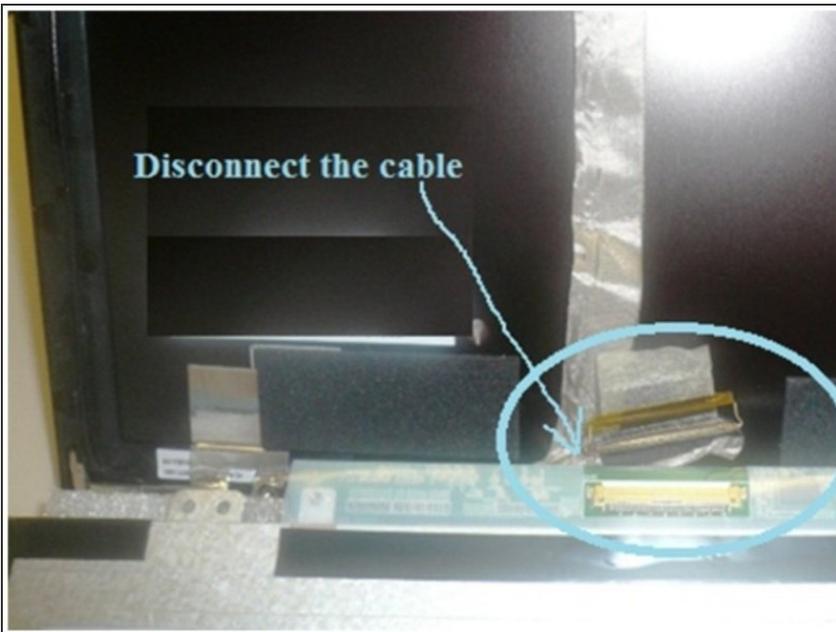

- Use the tweezers to remove the tape and then disconnect the cable

## Step 11

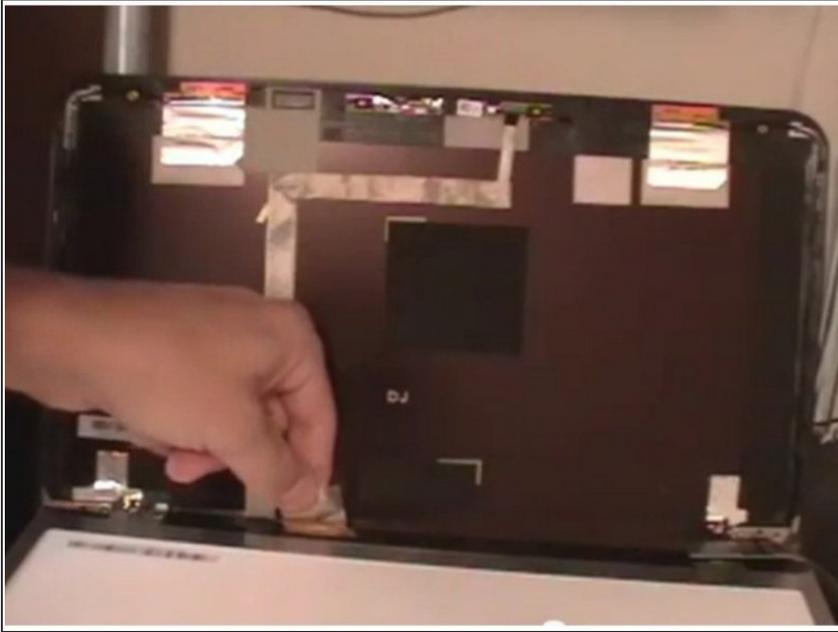

- Place the new screen on the keyboard and connect cable

## Step 12



- Place the screen into the back cover and install 4 screws. Install the bezel, battery, and then turn on computer ENJOY WITH YOUR NEW SCREEN. Go to website link at below to order the new screen <http://www.laptopscreen.com/English/mode...>

To reassemble your device, follow these instructions in reverse order.