




RCA RCR8622 Battery Replacement

This guide will show you how to replace the batteries on the RCA RCR8622.

Written By: Josh Excell

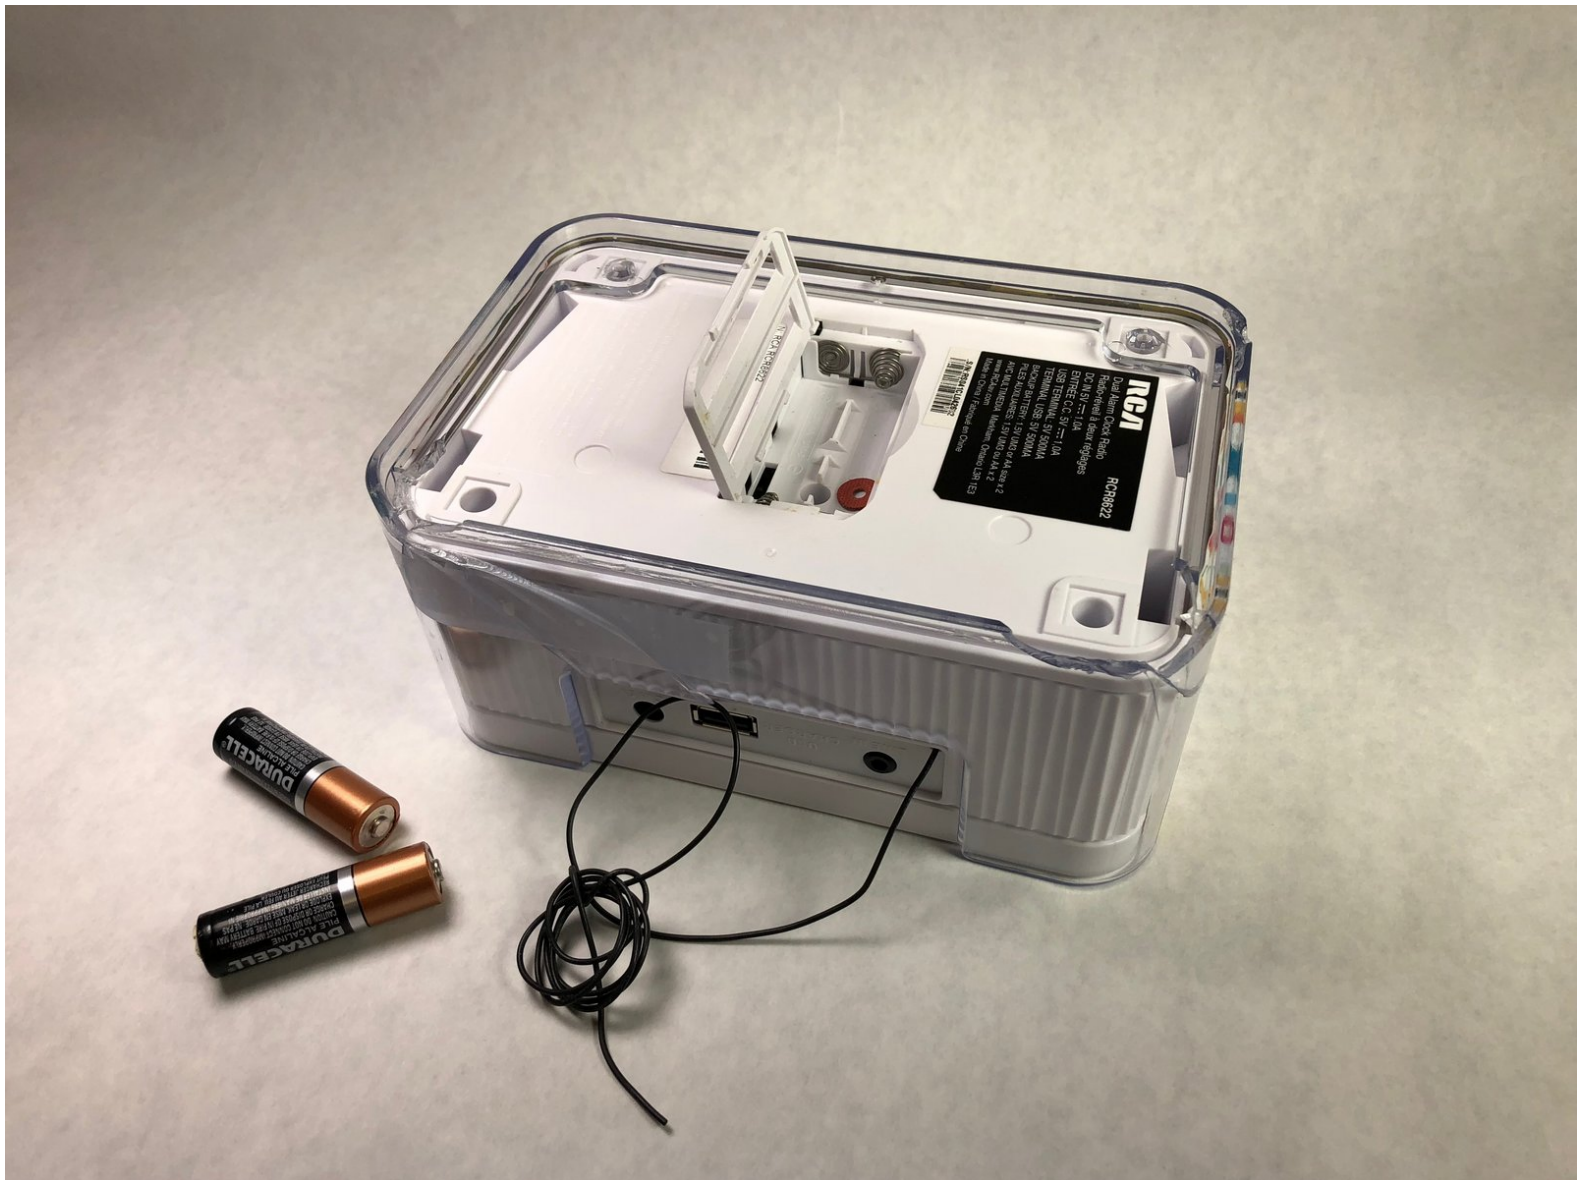

INTRODUCTION



This guide will show you how to replace the batteries on the RCA RCR8622.



TOOLS:

- [Fingers](#) (1)
-

Step 1 — Battery

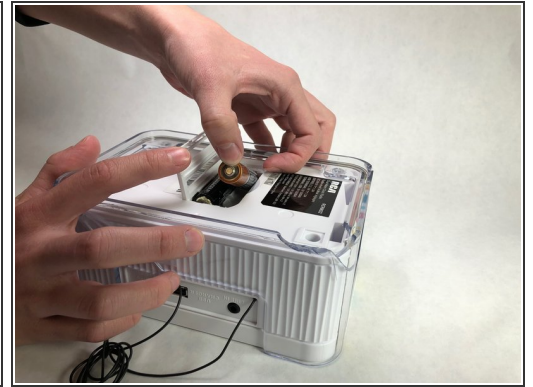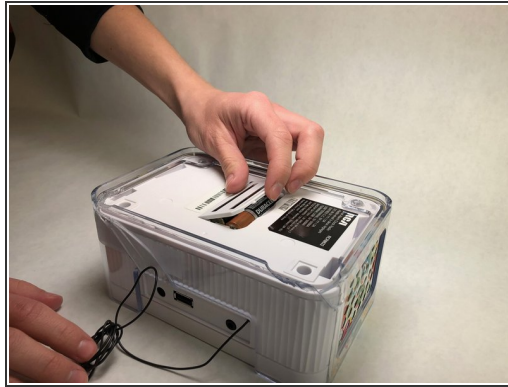

- Flip the radio over and use your fingers to lift the battery cover free.

To reassemble your device, follow these instructions in reverse order.