




# Dell Vostro 2420 Memory Module Replacement

Written By: Johnathan Hammond

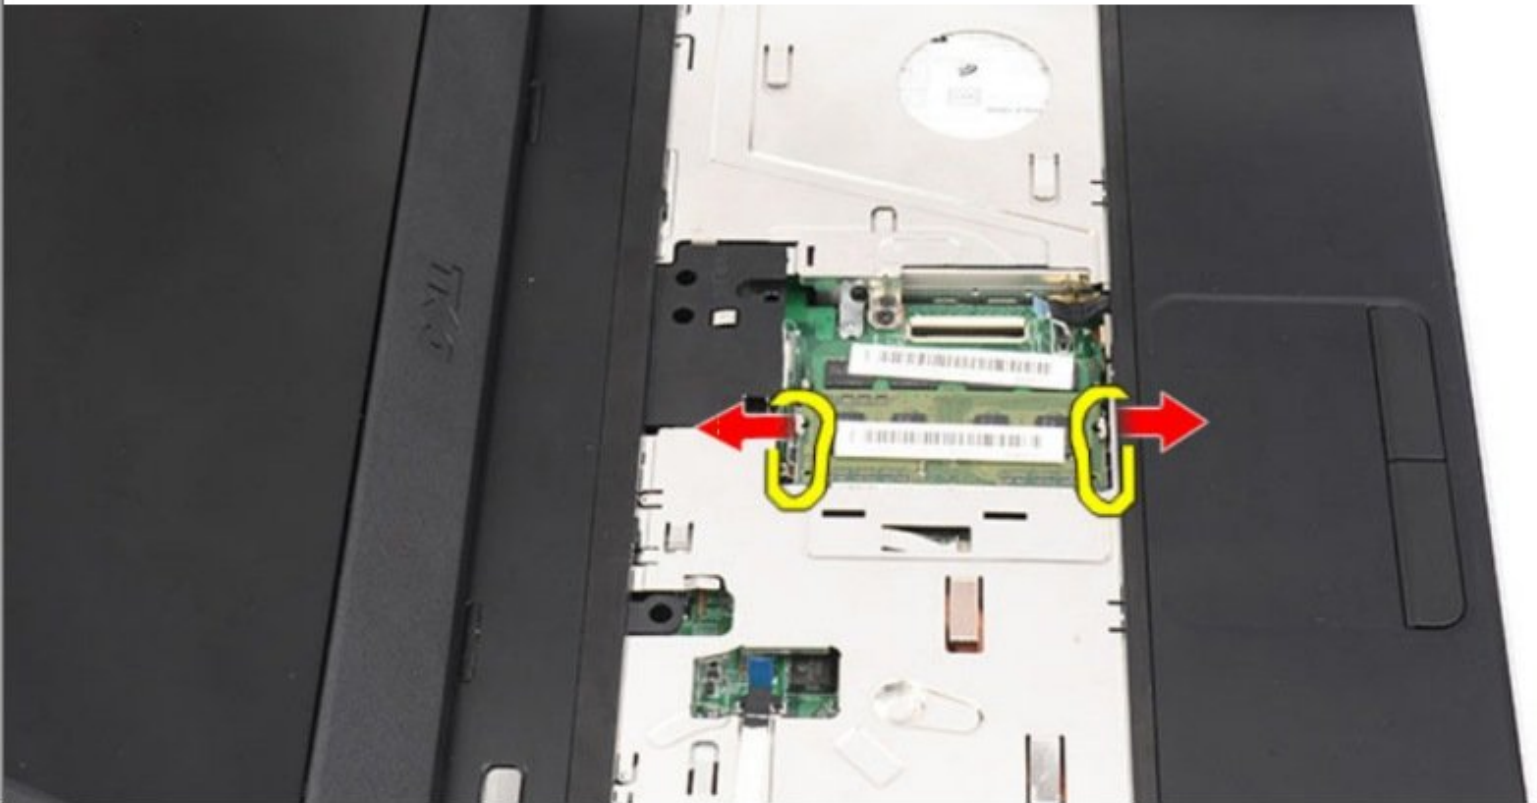

---

# INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Module.



## TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Sliding the Latches



- Slide the release latches to unlock the battery.

## Step 2 — Sliding the Battery



- Slide the battery and remove it from the computer.

### Step 3 — Prying the Keyboard




- Starting on the right, pry up the keyboard from the computer.

### Step 4 — Flip the Keyboard



- Flip the keyboard over and lay it on the palmrest.

## Step 5 — Disconnect the Keyboard Cable

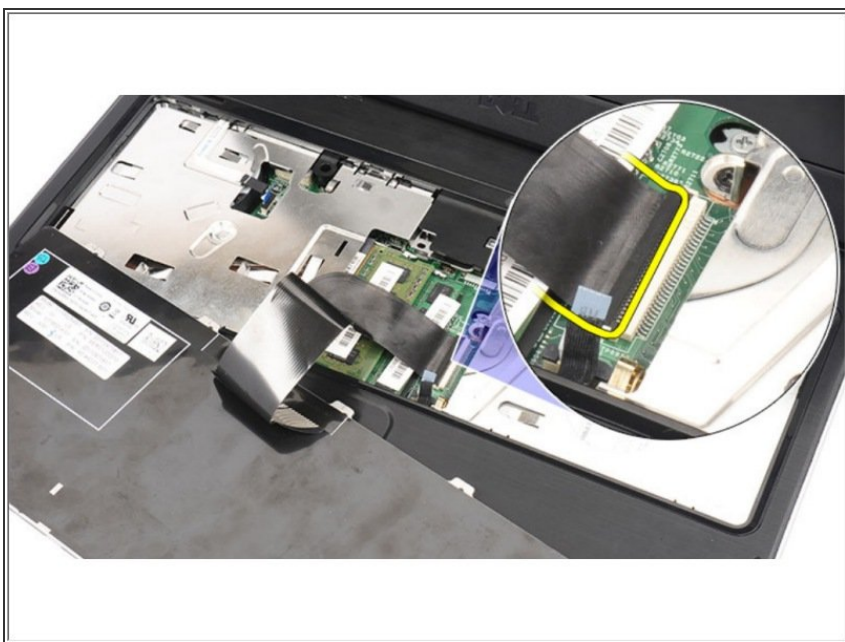


- Disconnect the keyboard cable from the system board.

## Step 6 — Remove the Keyboard




- Remove the keyboard from the computer.

## Step 7 — Prying the Clips

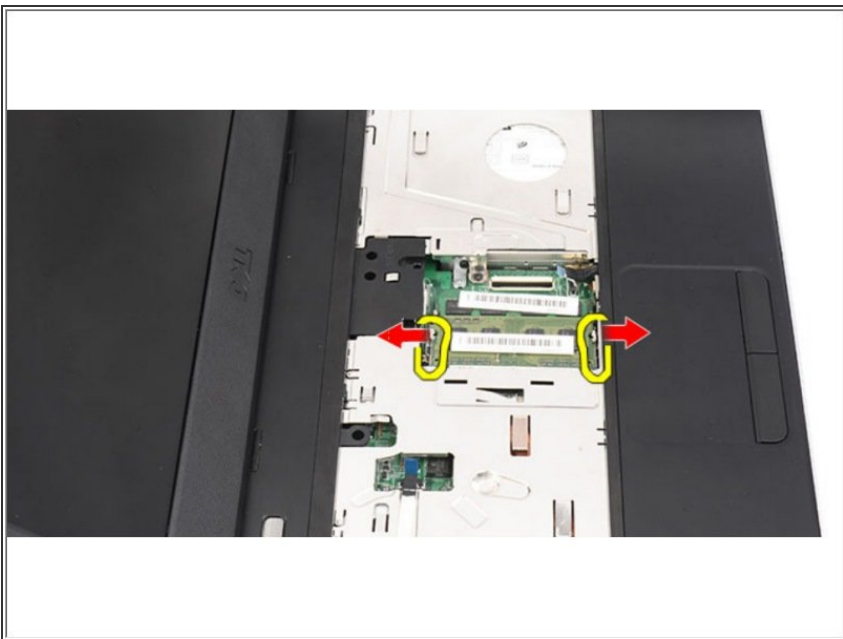

- Pry the retention clips away from the memory module until it pops up.

## Step 8 — Remove the Memory Module

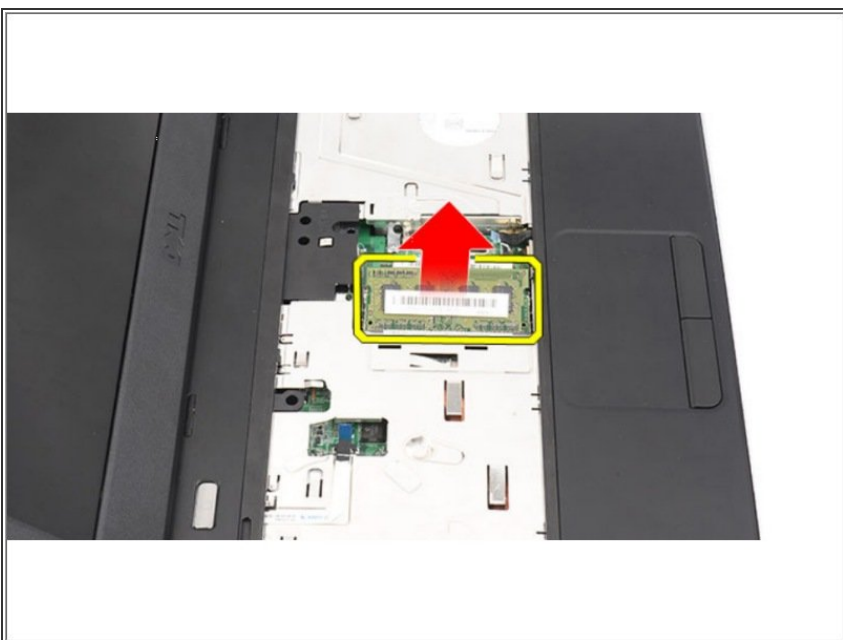

- Remove the memory module from the computer.