




# Trio Stealth-Mini Screen Replacement

How to replace the screen on a Trio Stealth Mini.

Written By: Stewart Jenkins

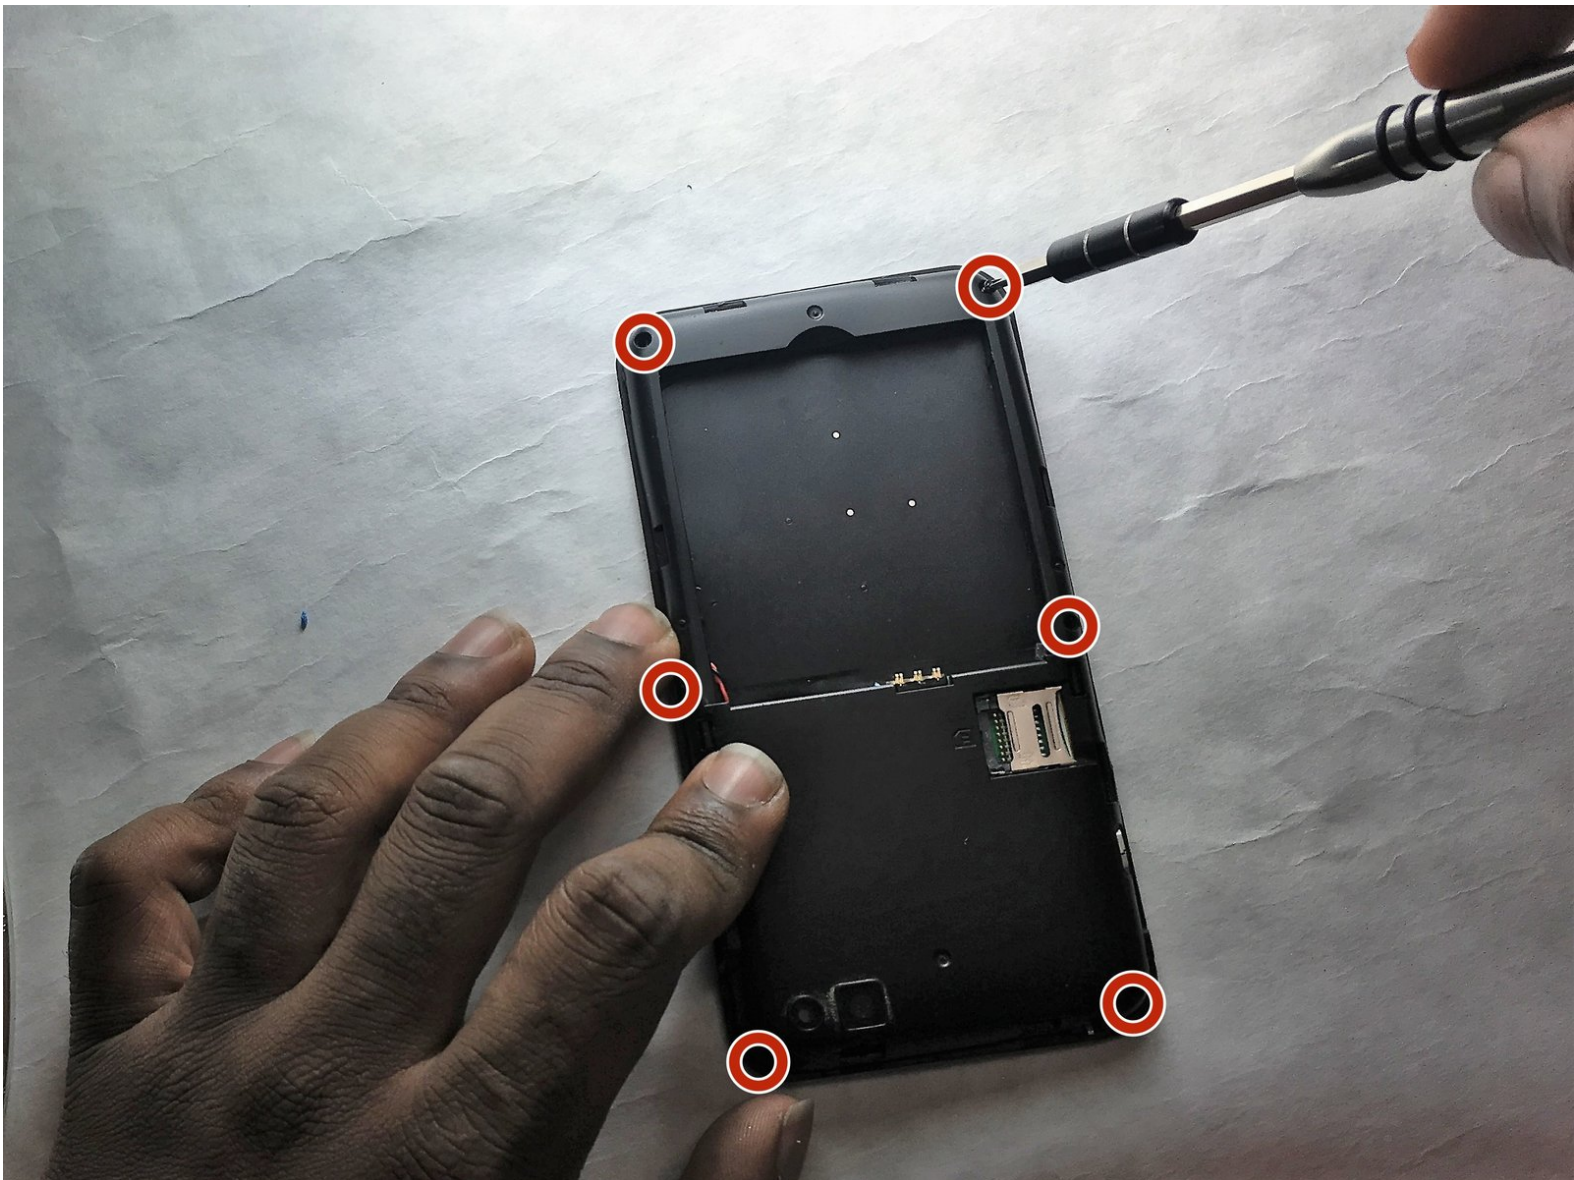

---

## INTRODUCTION

Tablet screens often get damaged, this guide will walk a user through the steps of replacing a damaged screen. It is important to be careful about damaging parts, as most pieces are fragile.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Battery



- Locate the indentation at the bottom of the device.

## Step 2



- Pull on the indentation and take off the casing of the device.




## Step 3



- Remove the faulty battery and insert a replacement in its slot.

## Step 4 — Screen

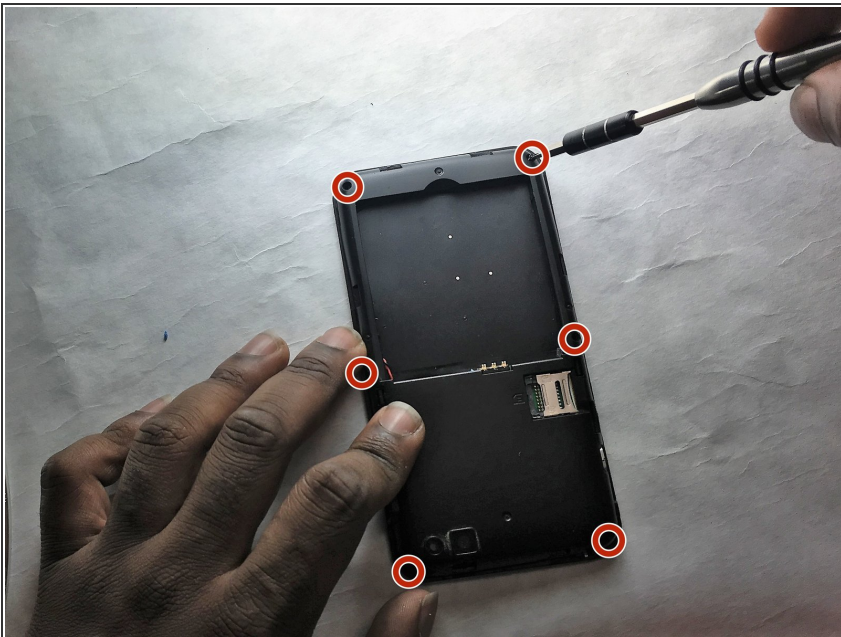



- Remove the six 2.4 mm, Phillips #0 screws circled in the image.

## Step 5



- Remove inner casing exposing the motherboard.


## Step 6

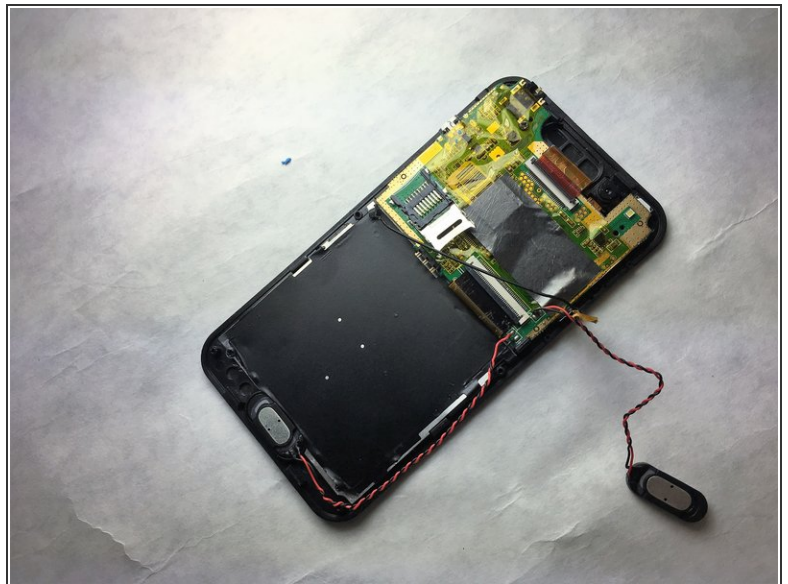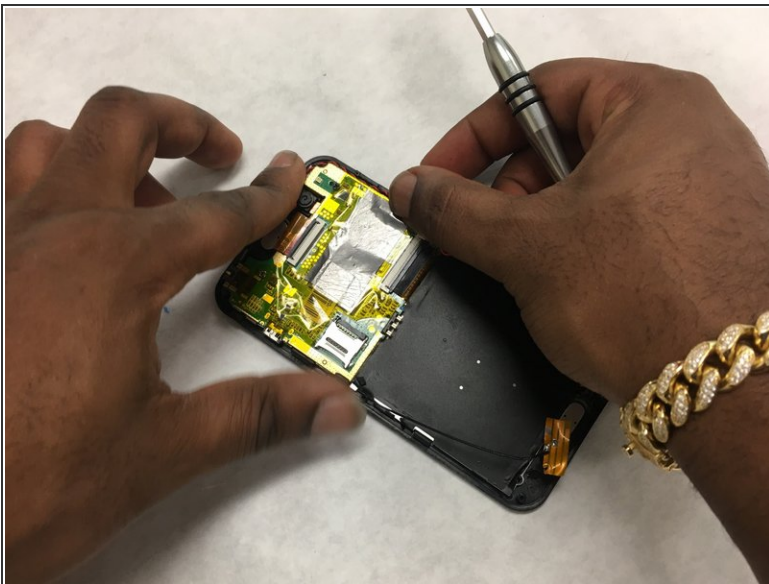

- Remove speakers by peeling back yellow tape.




## Step 7

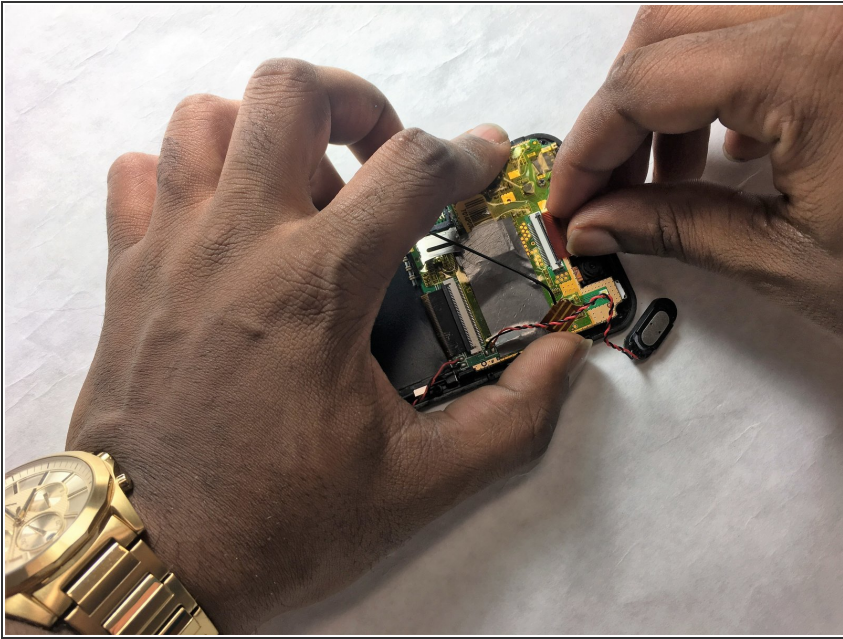


- Remove ribbon cable on top of motherboard.

## Step 8

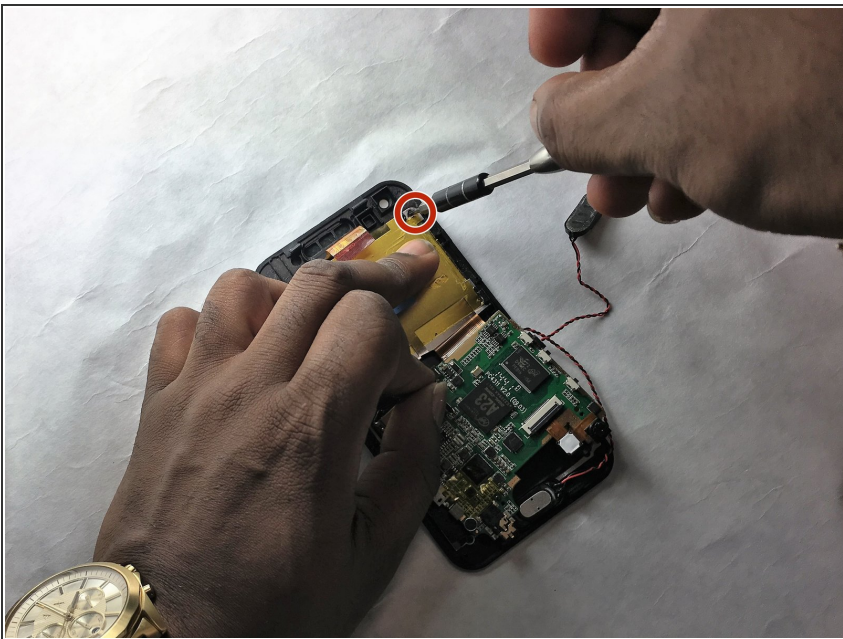


- Peeling back yellow tape, remove the 2.5 mm Phillips #0 screws on top of motherboard.

## Step 9

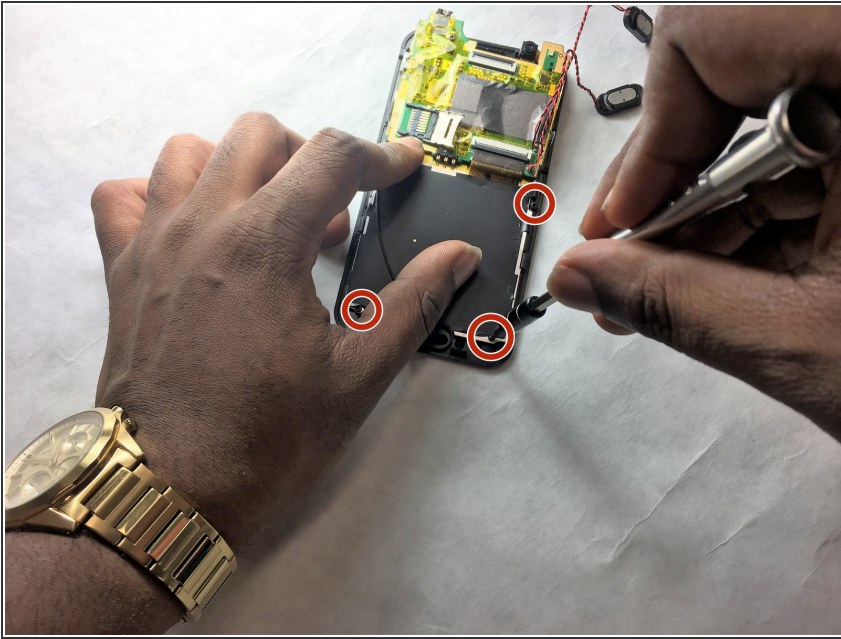

- Remove the three 2.5 mm Phillips #0 screws attaching screen to main assembly.

## Step 10

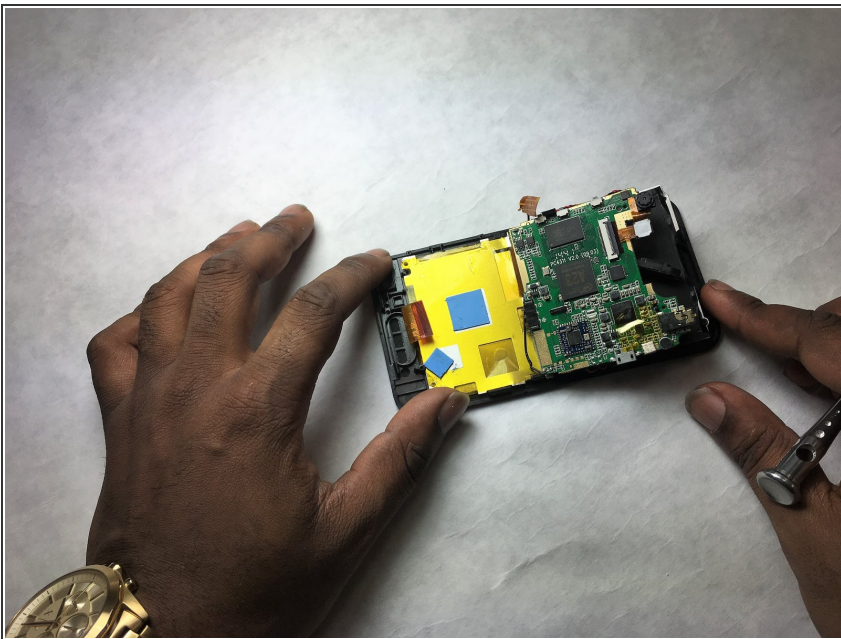

- Verify that all screws are detached from screen.

## Step 11



- Detach screen from main assembly.

To reassemble your device, follow these instructions in reverse order.