



Asus ZenBook UX303U Screen Assembly Replacement

This guide will help you replace your screen. The image on the screen is distorted, or the screen is cracked and/or damaged.

Written By: Dean Anderson



INTRODUCTION

This guide will show you how to replace the screen on an Asus ZenBook UX303U laptop.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Back Panel




- Remove the two round rubber feet at the hinge-edge of the laptop.

Step 2

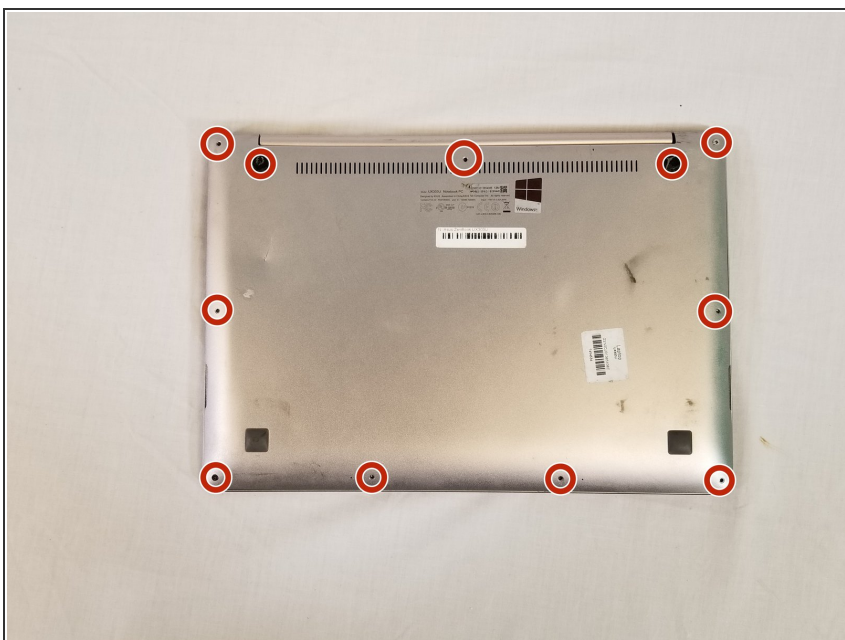


- Remove the eleven 4 mm Phillips #00 screws from the back panel.

Step 3

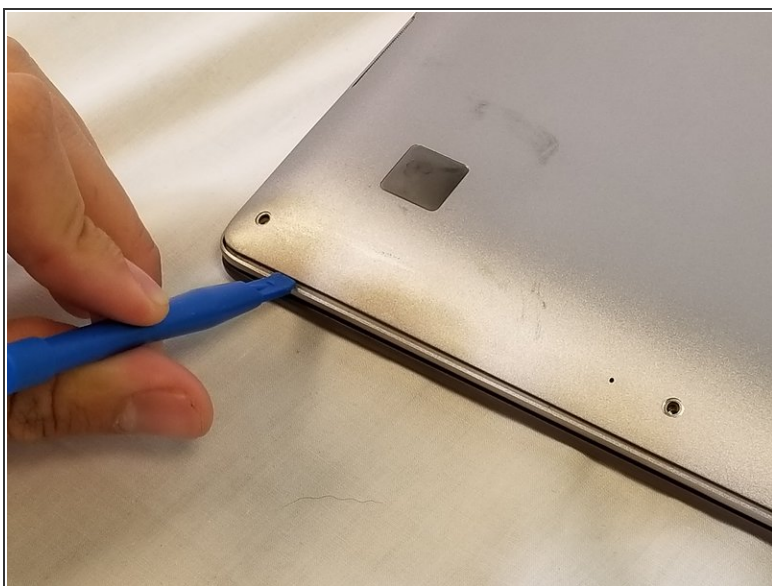


- Using a plastic opening tool pry the back panel off of the laptop.

Step 4 — Screen Assembly

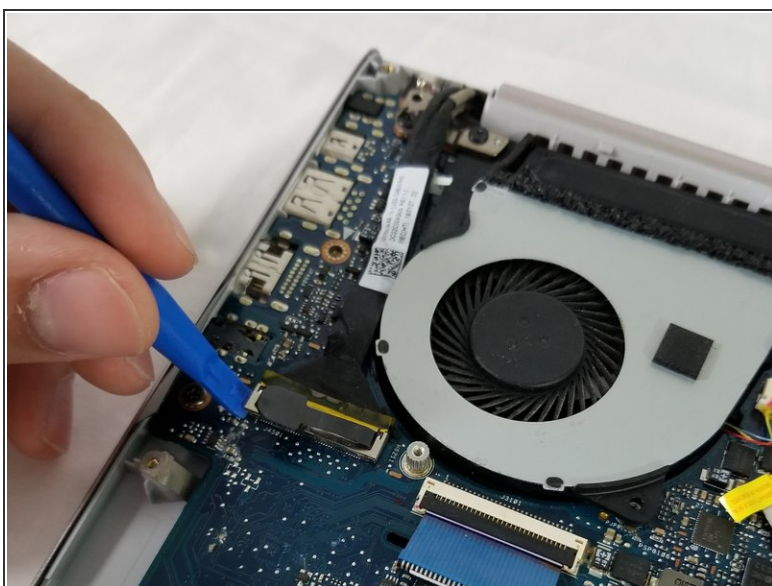

- Remove cable connecting the screen assembly to the the motherboard.

Step 5

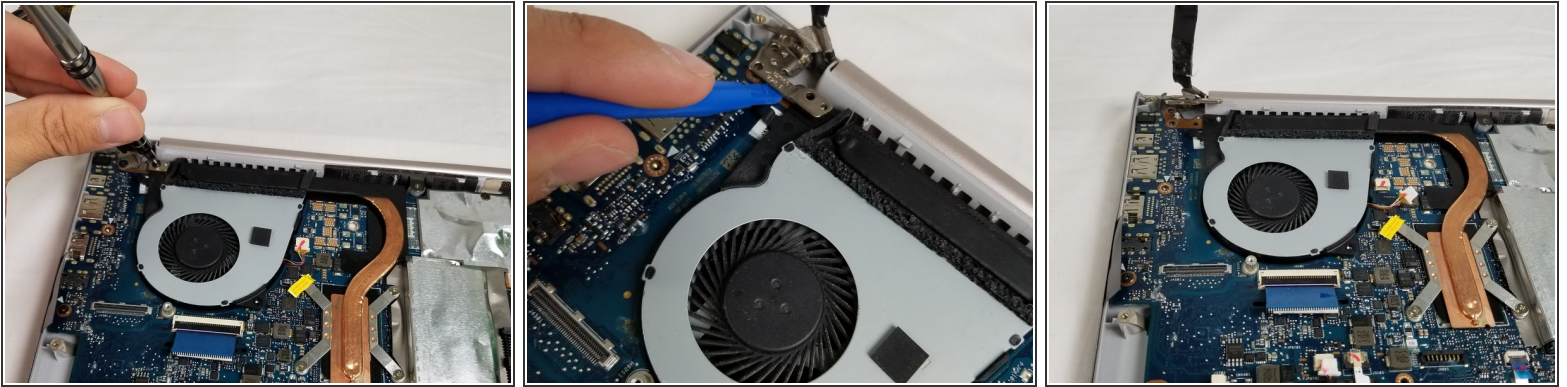


- Remove the three 4mm Phillips #00 screws in the hinge to loosen the motherboard fan.
- Lift the hinge up.
- ⓘ It is not necessary to remove the motherboard fan to replace the screen assembly.

Step 6





- Remove the three Phillips #00 screws securing the hinge to the IO board.

Step 7

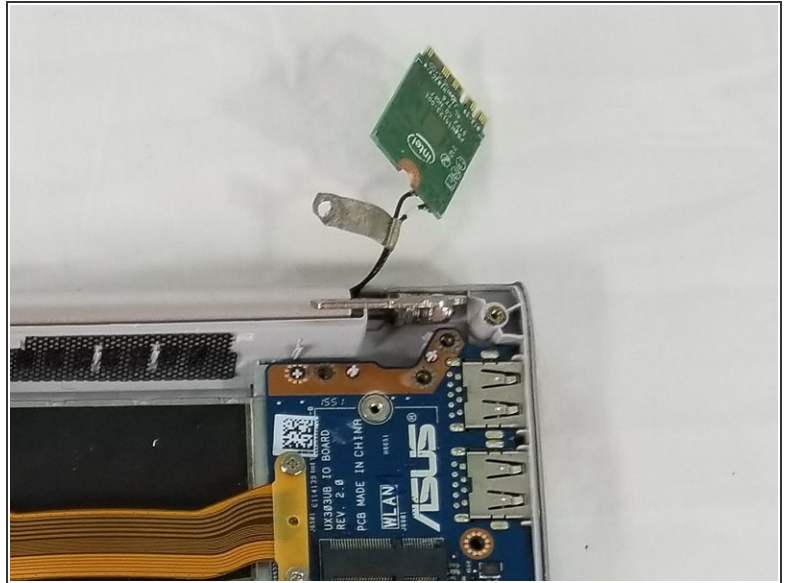

- Remove the Wi-Fi card by pulling it straight out of its connector.

Step 8

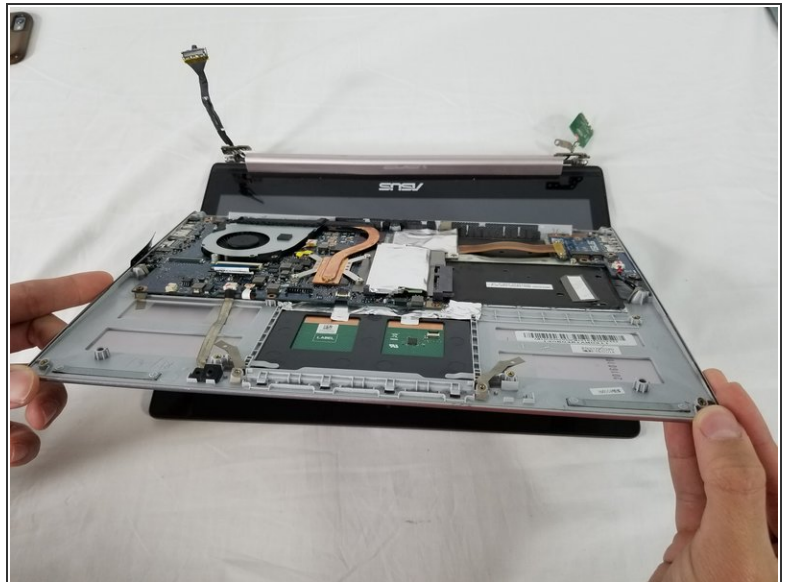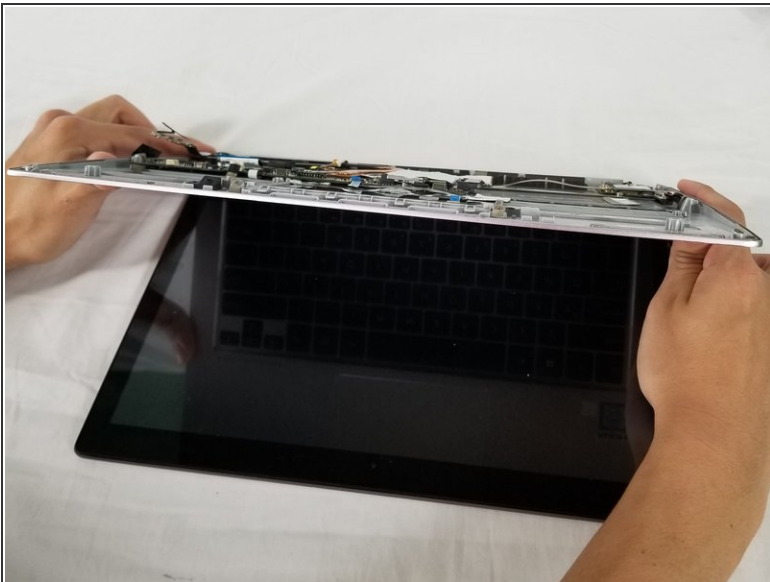

- Lift the entire lower assembly up and off of the hinges securing it into place.

To reassemble your device, follow these instructions in reverse order.