



Dell Inspiron 17-5749 Battery Replacement

This guide will instruct users on the process...


Written By: Christopher Tran



INTRODUCTION


This guide will instruct users on the process of replacing a battery on the Dell Inspiron 5749.

Step 1 — Battery

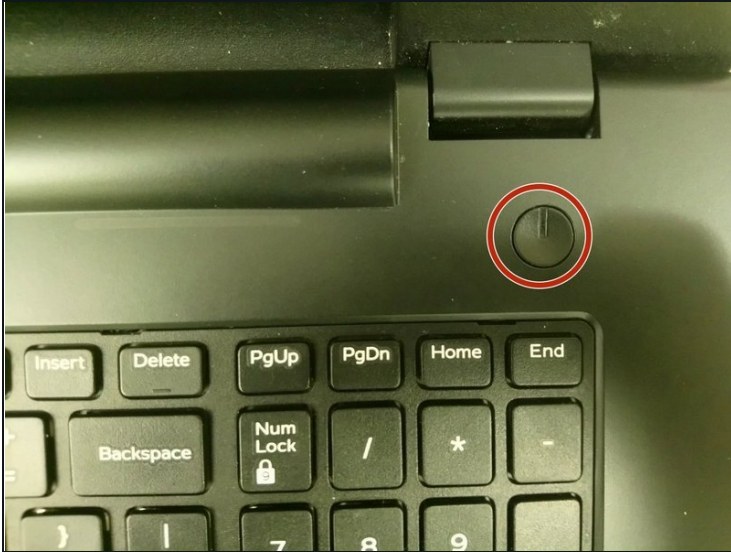

- Turn off power to the laptop.
- Unplug the charging cable from the laptop.
 - ⚠ Failure to unplug the charging cable could result in damaging the computer or seriously injuring yourself.
- ① Wear the [anti-static wrist strap](#) or work in an uncarpeted area to prevent static shocks. Shocks may damage the components.

Step 2

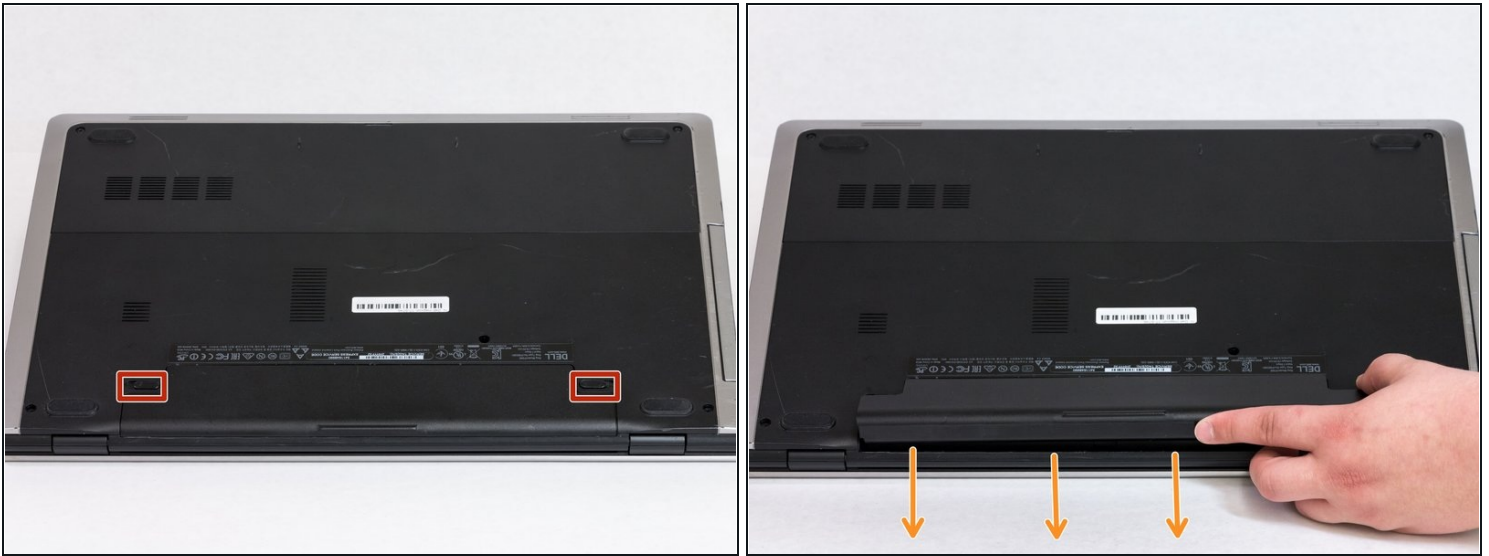

① First carefully turn the laptop over so you can access the battery.

- Switch each of the battery latches to the "unlocked" position.
- Pull battery upwards by the tab to remove from the laptop.

To reassemble your device, follow these instructions in reverse order.