



LG Ultimate 2 Digitizer Replacement

After completing this guide, you will be able to replace the digitizer on your LG Ultimate 2.

Written By: Devin Isenhower



INTRODUCTION

In this guide, you will learn how to replace the digitizer on your LG Ultimate 2. This is going to require you to use a plastic spudger to loosen the screen, your hands to pull the screen off, and a screwdriver to unscrew the screen from the rest of the phone. You need to be careful when removing the screen as it is attached to a data cable that could sustain damage.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery



- Wedge the plastic opening tool into the seam between the plastic backing and the rest of the phone.

Step 2



- Use your hand to pull the plastic cover completely off of the phone.

Step 3



- Insert the plastic opening tool into the wedge near the bottom of the battery.
- Lift the battery out.

Step 4 — Digitizer




- Use a Phillips #0 screwdriver to remove the 11 mid-frame screws.

Step 5



- Insert the plastic opening tool to start wedging the phone apart.
- Trace the plastic opening tool along the edge for the entire perimeter of the phone, pulling it apart as you go.

Step 6

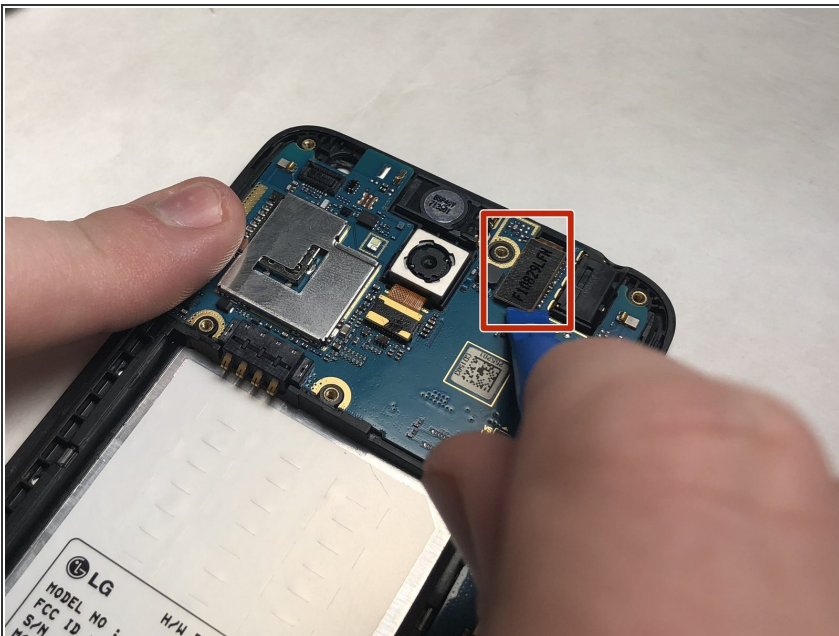


- Use a plastic opening tool or fingernail to separate the zip connector.
- ⚠ The zip connector does not detach completely from the phone, but acts as a flap.

Step 7



- Insert the plastic opening tool between the screen and the base. This may be difficult because of the adhesive, but enough leverage should force an opening.

Step 8

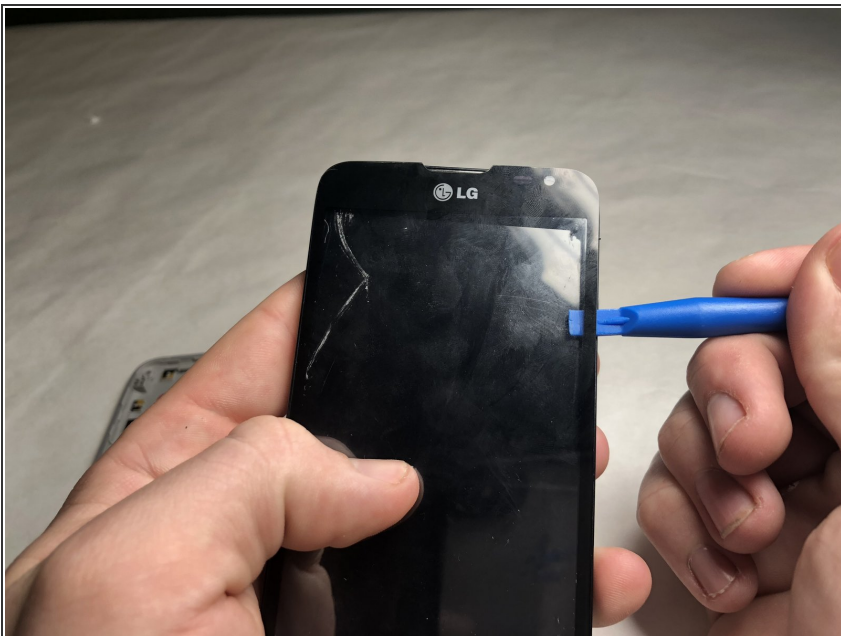

- Continue moving the plastic opening tool along the edge of the screen, separating the pieces from the adhesive.
- ⓘ A hair dryer might be useful to help melt the adhesive.

Step 9



- Pry the screen off after all pieces have been loosened from the adhesive.

To reassemble your device, follow these instructions in reverse order.