




# Dell Inspiron 13 1370 Battery Replacement


Written By: Terrence15

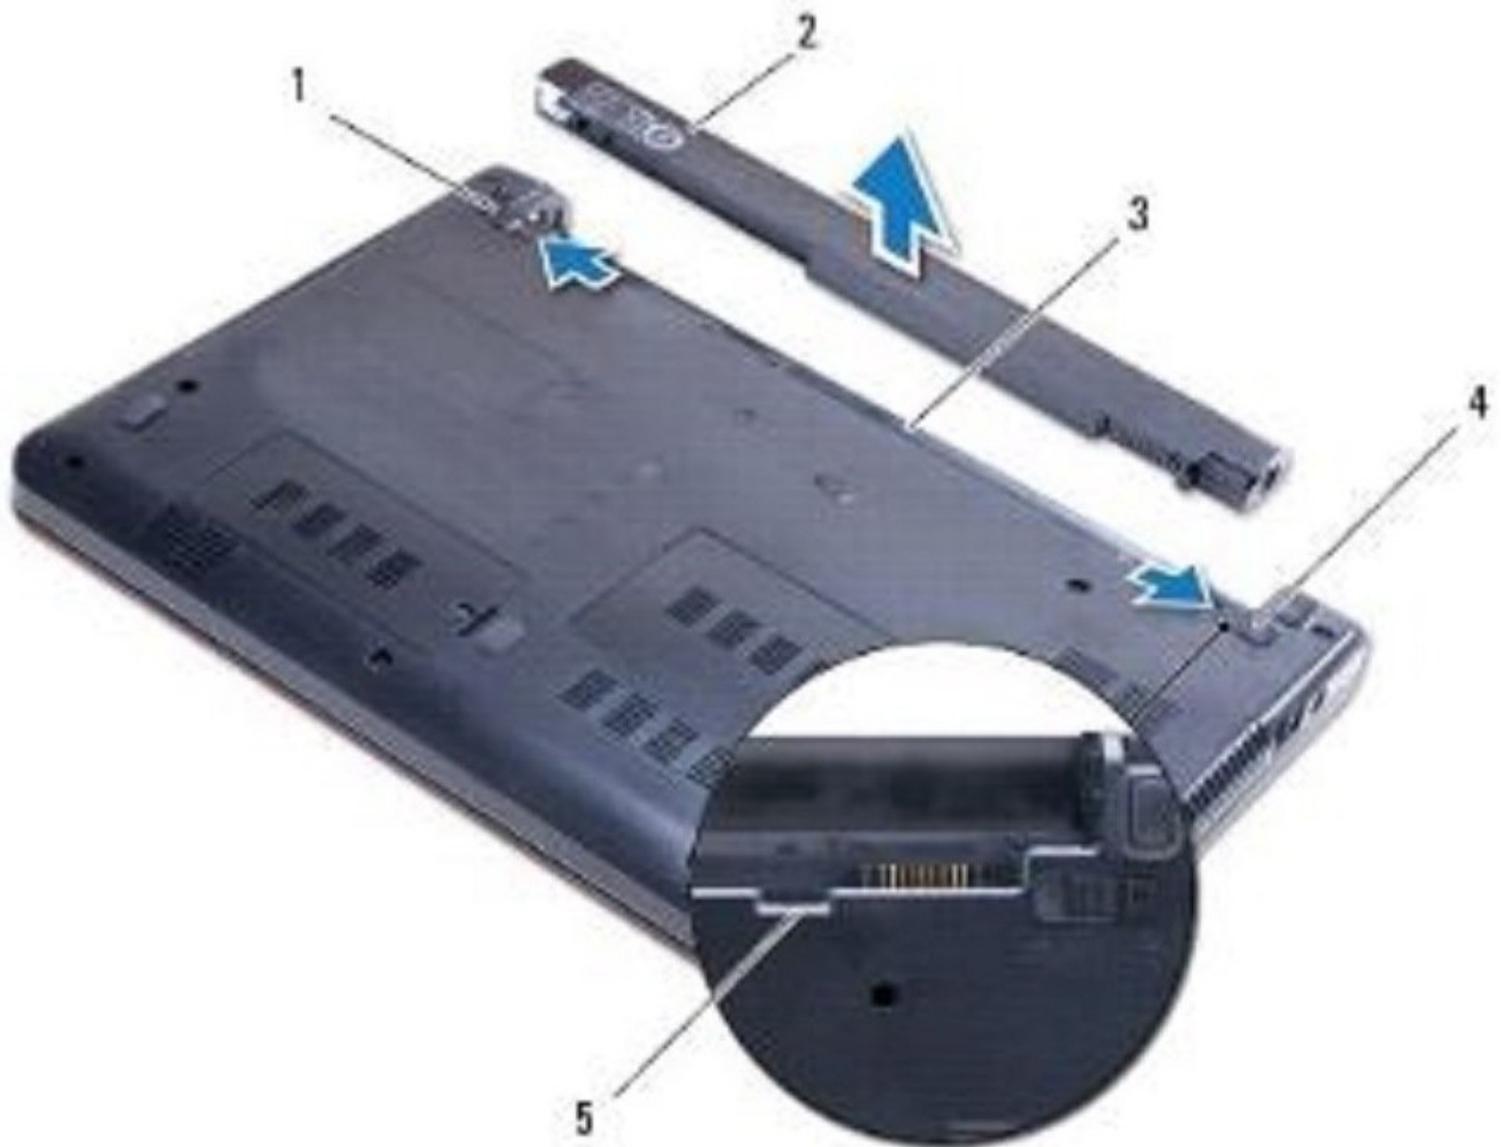

## INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.


## Step 1 — Turn Over the Computer

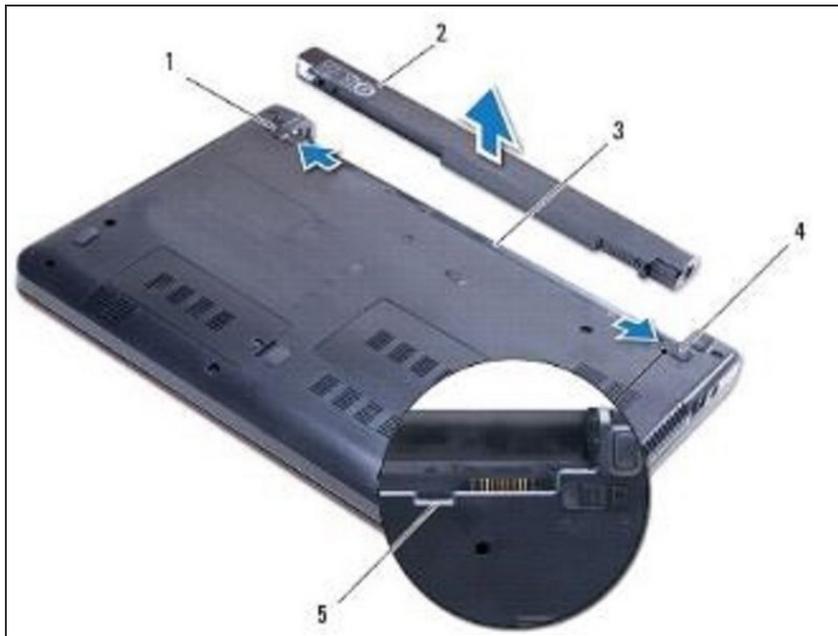

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).

- Turn the computer upside down on a clean, flat surface.


## Step 2 — Sliding the Battery

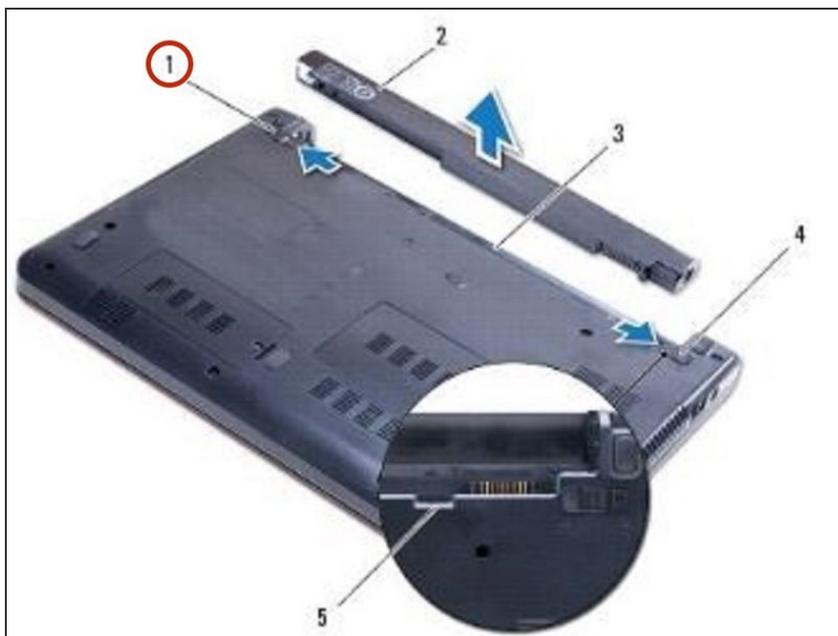

- Slide the battery release latch to the unlock position. The battery release latch automatically shifts to the

locked position when you remove the battery.

### Step 3 — Sliding the Battery Lock Latch

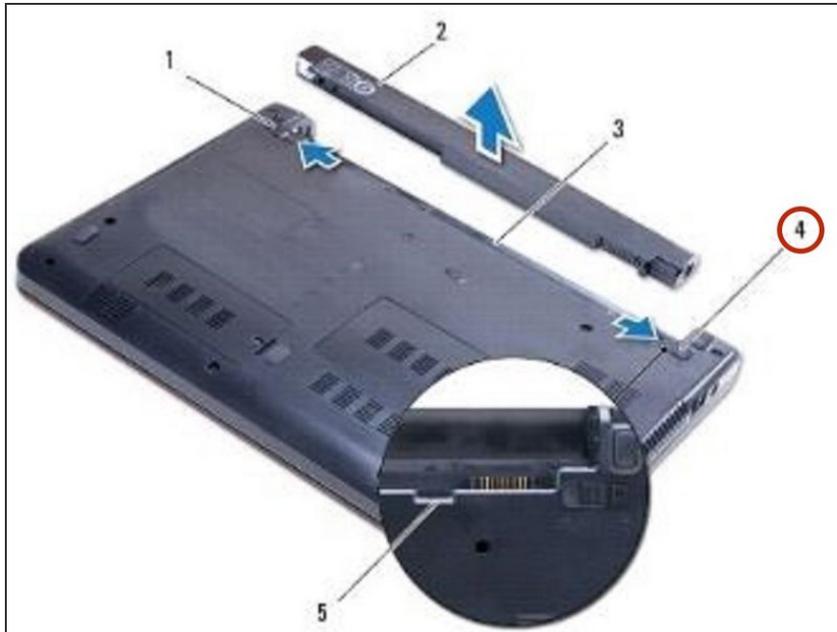



- Slide the battery lock latch to the unlock position.

### Step 4 — Lifting the Battery




- At the notch, lift the battery to remove it from the battery bay.

## Step 5 — Placing the Battery

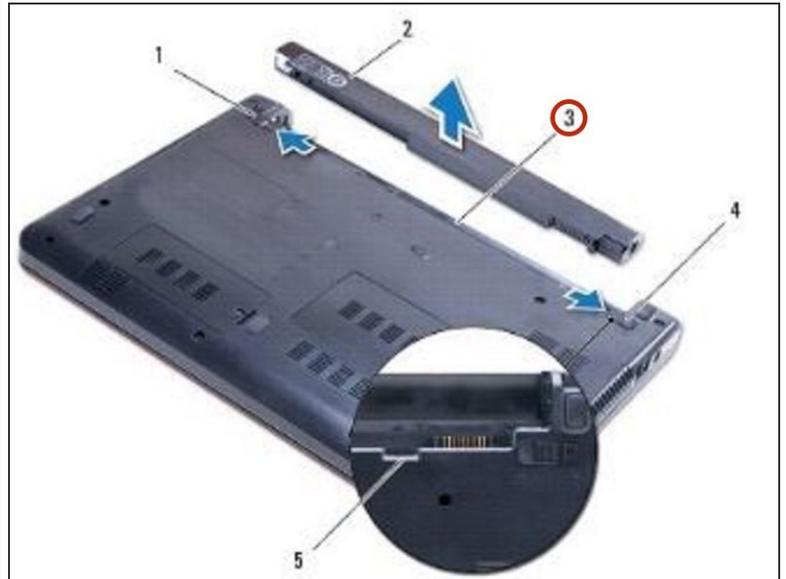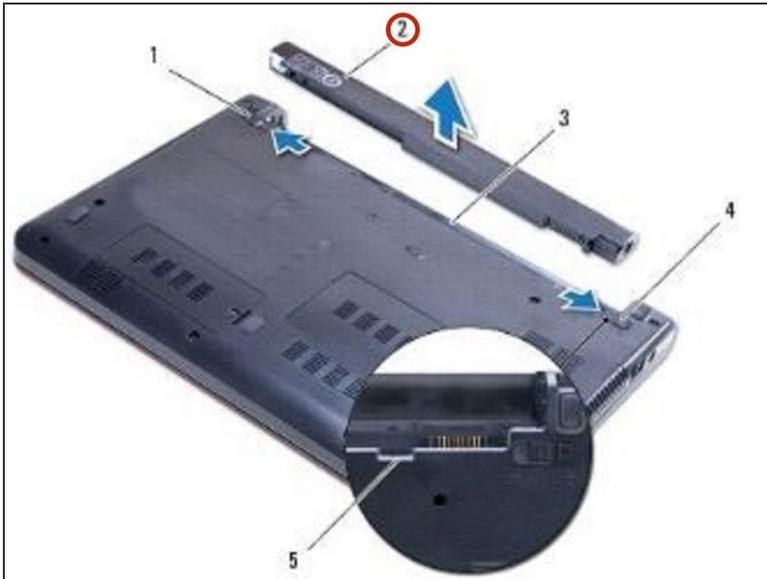


- Place the **NEW** battery in the battery bay.

## Step 6 — Push Down on the Battery

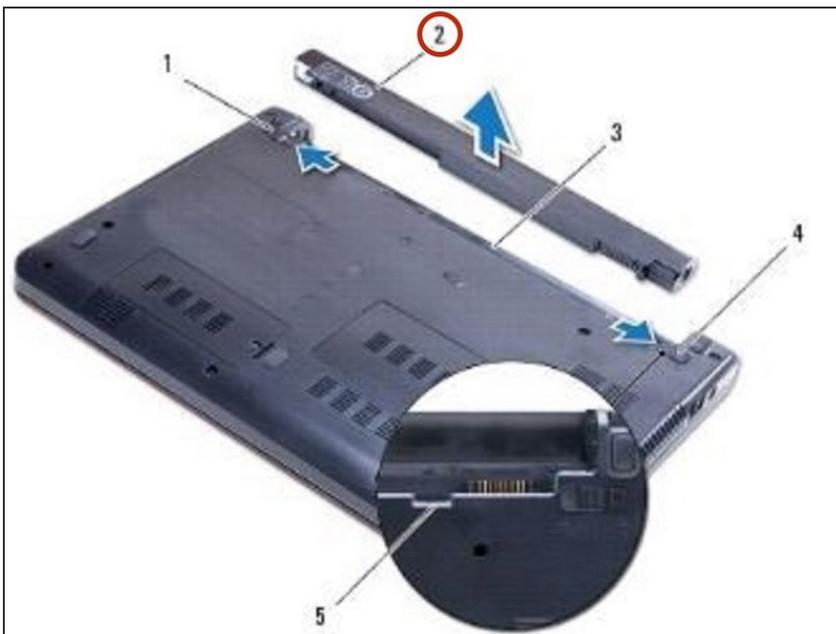

- Push down on the battery to connect it to the computer.

## Step 7 — Sliding the Latch

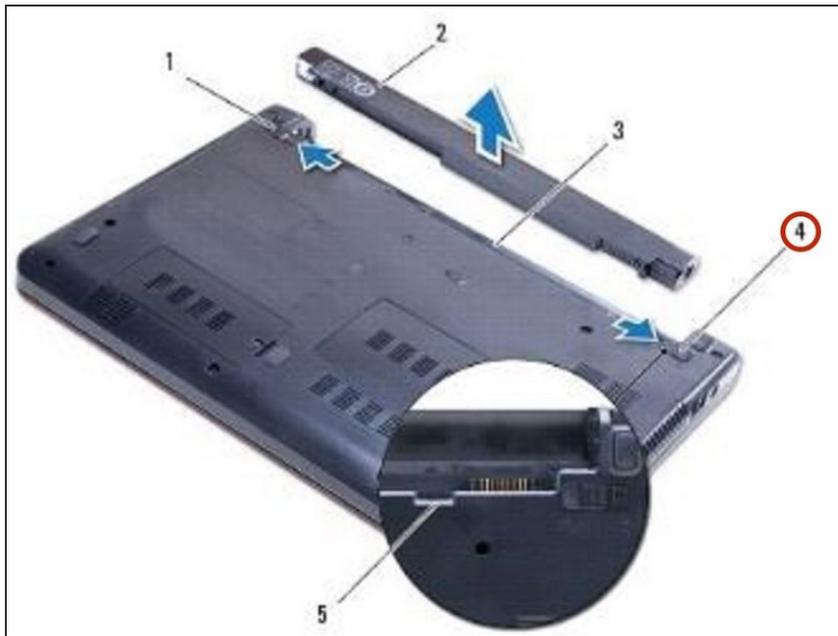

- Slide the battery lock latch to the locked position.