




# Dell XPS 15 L521X Hard Drive Replacement

This is show the user how to remove the hard drive in a Dell XPS computer.

Written By: SHELDON SANTOS

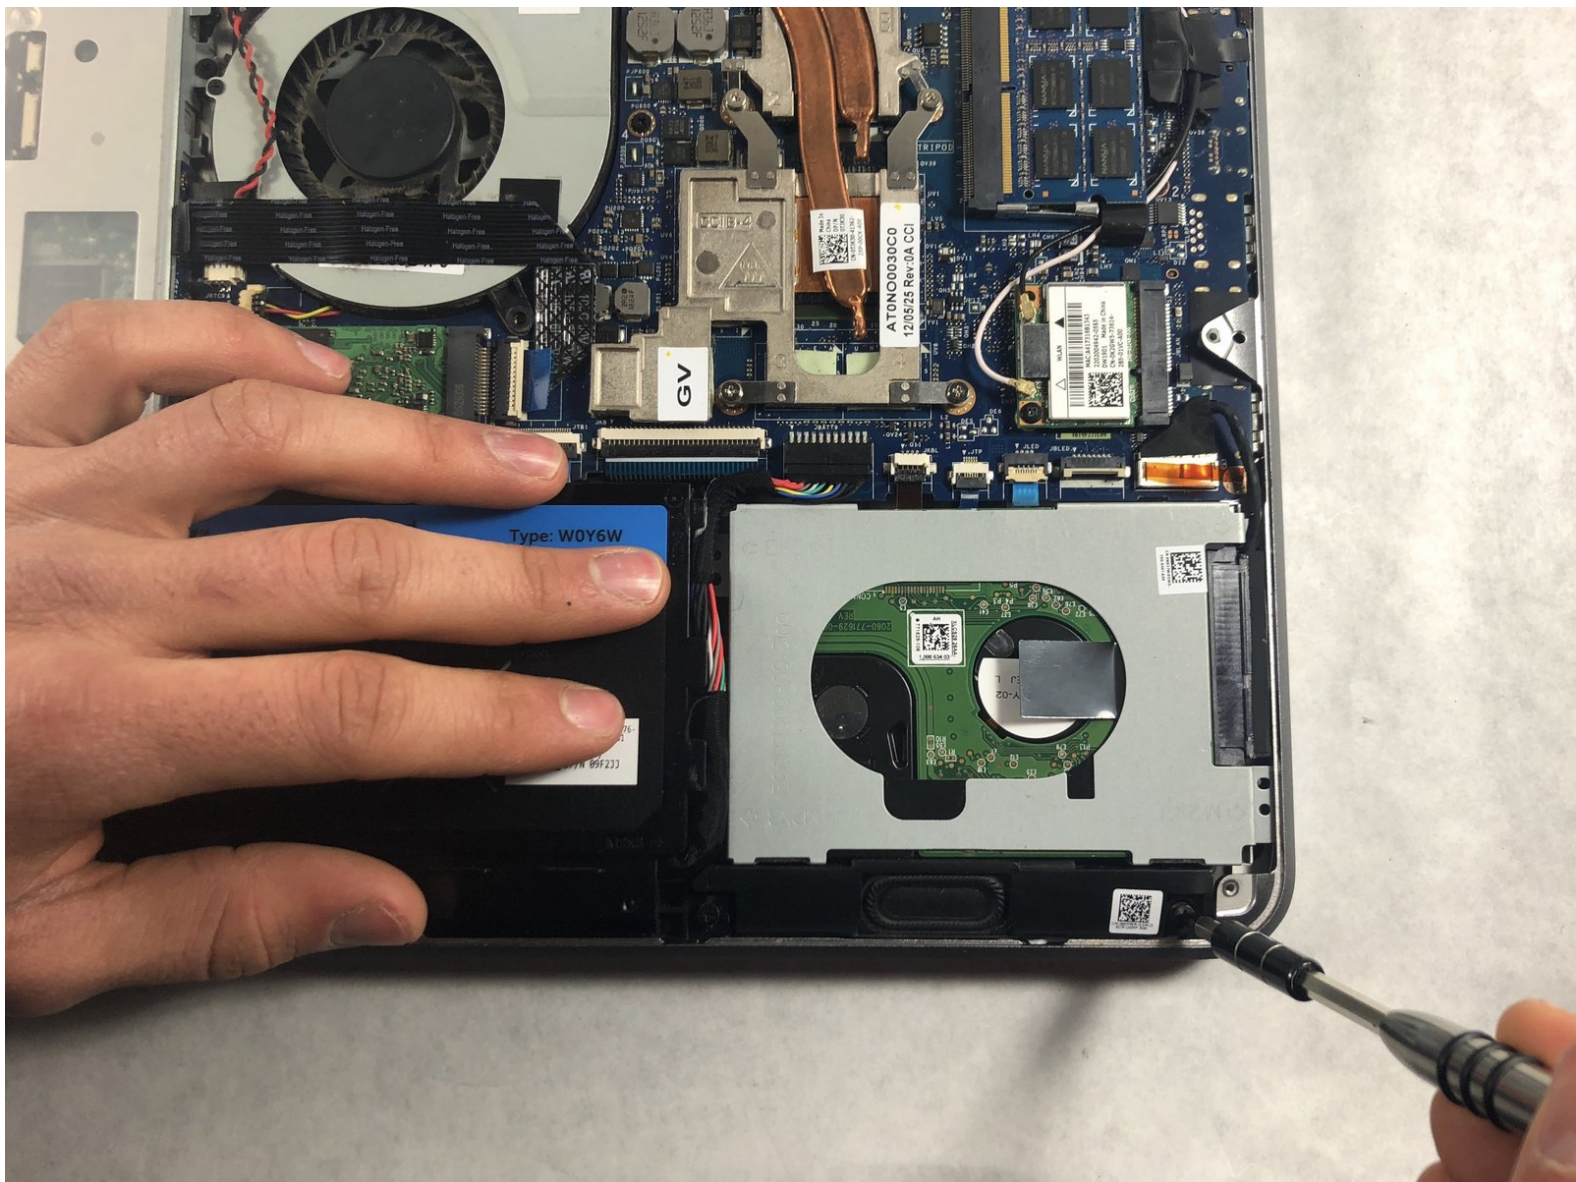

---

## INTRODUCTION

In this guide you will be removing four screws and unplugging the hard drive. This is a quick easy replacement. You may also need to reinstall windows after completeing the hard drive replacement.


---



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Back Panel

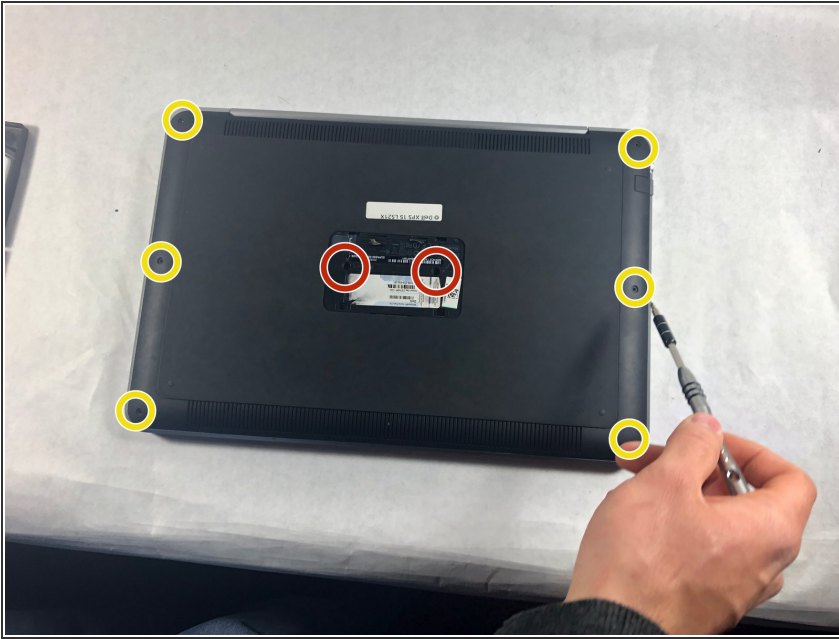


- Find and remove the two .3cm torx head screws using a T5 screwdriver.
- Find and remove the six Phillips head .3cm screws using a Phillips #0 screwdriver.

## Step 2

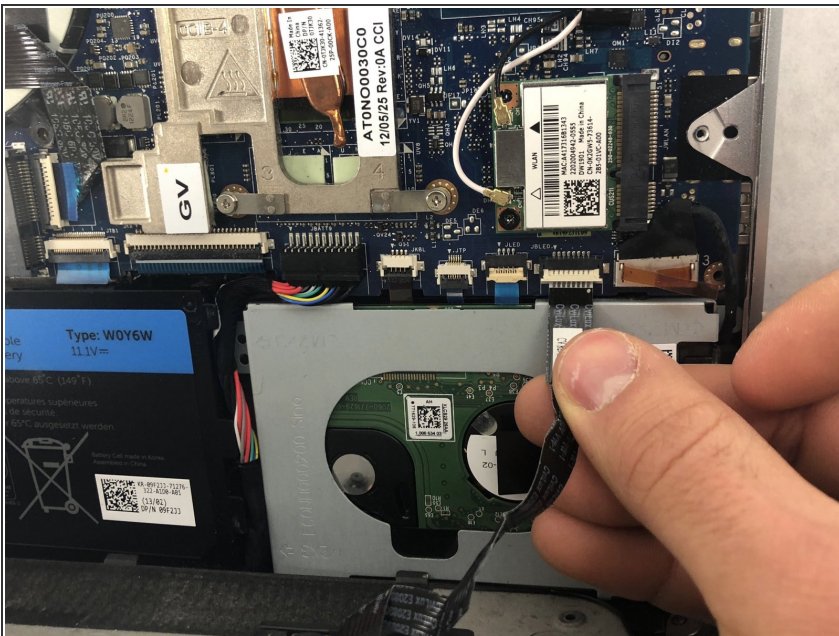


- Unplug the battery indicator.

## Step 3 — Hard Drive

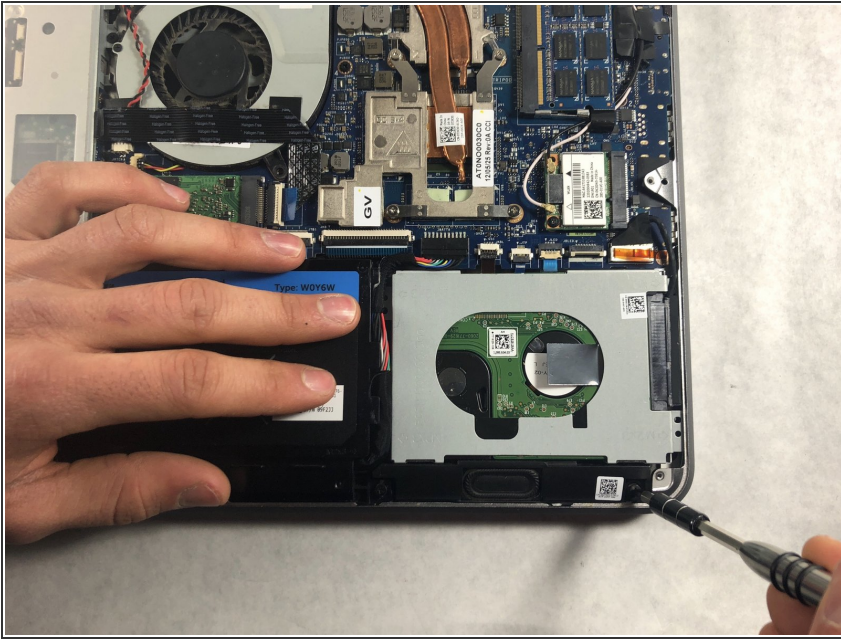

- Find and remove the four .4cm phillips head screws holding the hard drive in place.

## Step 4

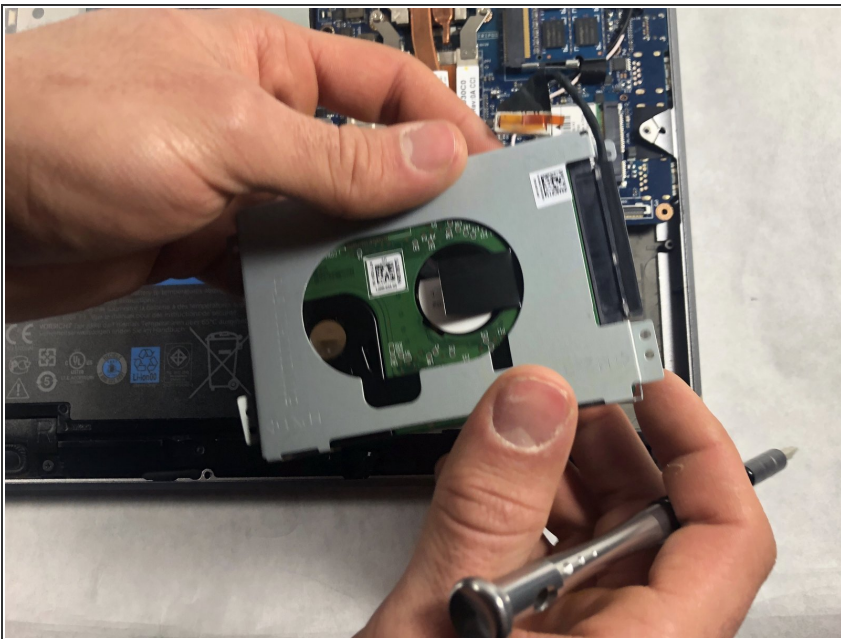

- Gently unplug and remove the hard drive

To reassemble your device, follow these instructions in reverse order.