


## **Dell Studio 1450 Base Cover Replacement**


Written By: Johnathan Hammond

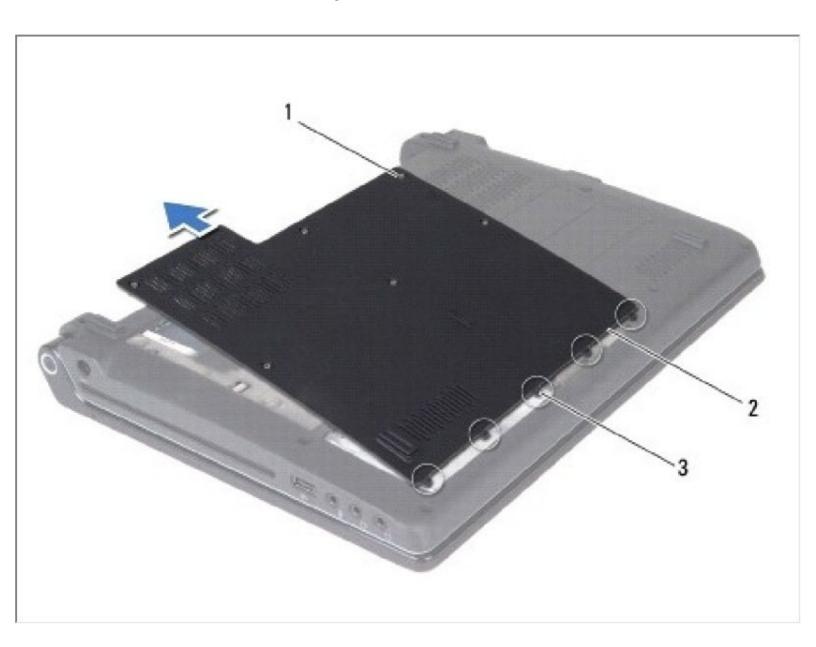



Phillips #0 Screwdriver (1)

## Step 1 — Battery

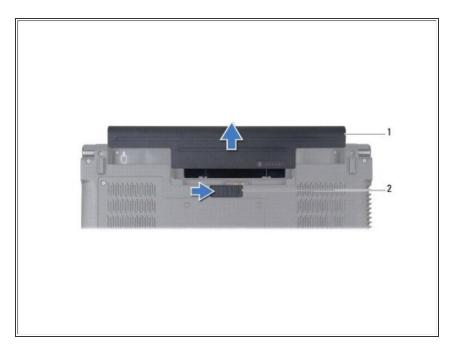

- Slide the battery release latch until it clicks into place.
- Slide the battery out of the battery bay.

## Step 2 — Base Cover



- Turn the computer over and loosen the six captive screws on the base cover.
- Lift the base cover off the computer.

To reassemble your device, follow these instructions in reverse order.