



# Dell XPS 15 L521X Back Panel

This is allow you to remove the back panel on the Dell XPS L521X

Written By: SHELDON SANTOS



---

## INTRODUCTION


You will need to follow this guide before making any replacements on your Dell XPS. Unscrewing the back panel is easy and will take you no time. All you need is a phillips screw driver, a torx screw driver and this guide.



### TOOLS:


- [Phillips #0 Screwdriver](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Back Panel

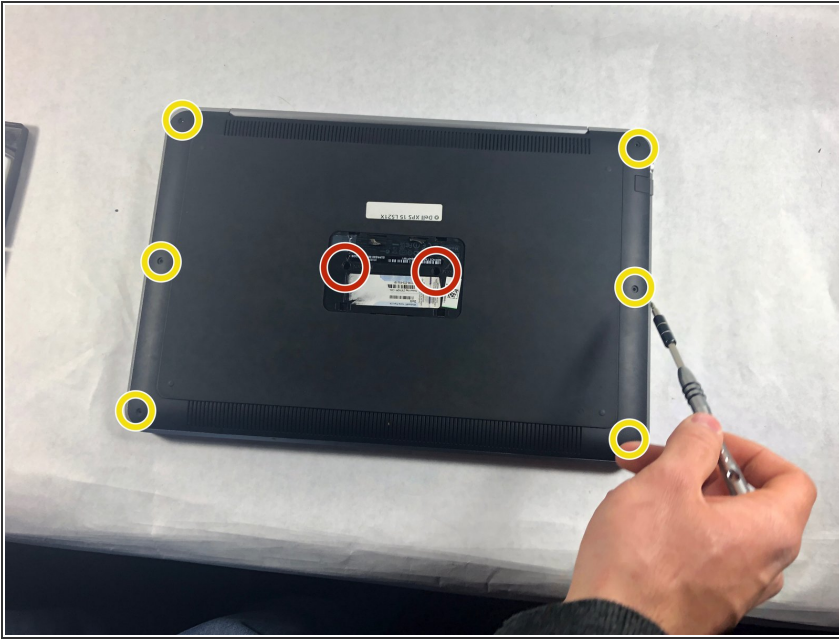

- Find and remove the two .3cm torx head screws using a T5 screwdriver.
- Find and remove the six Phillips head .3cm screws using a Phillips #0 screwdriver.

## Step 2

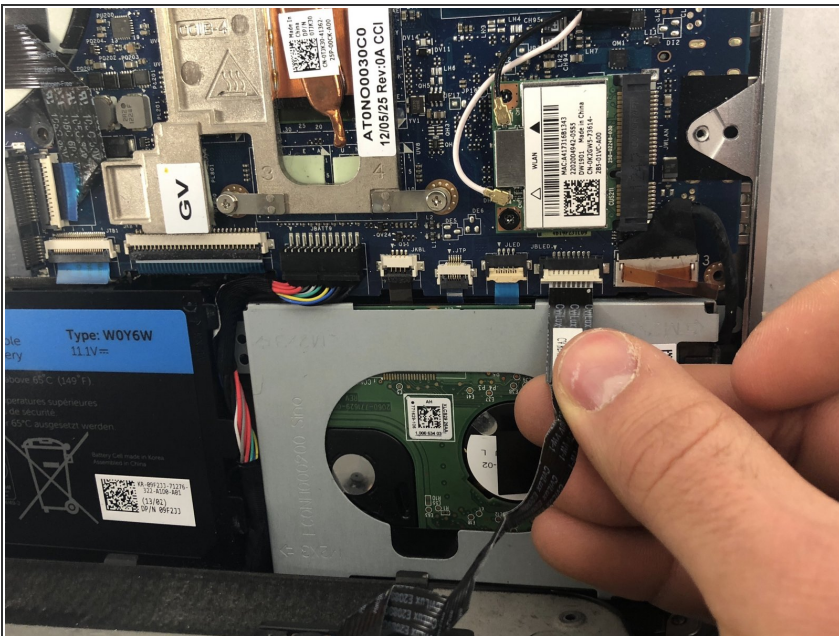

- Unplug the battery indicator.

To reassemble your device, follow these instructions in reverse order.