




SEGA Genesis Flashback Controller Back Cover Replacement

This guide will help you replace the back cover...

Written By: Omar Shorab

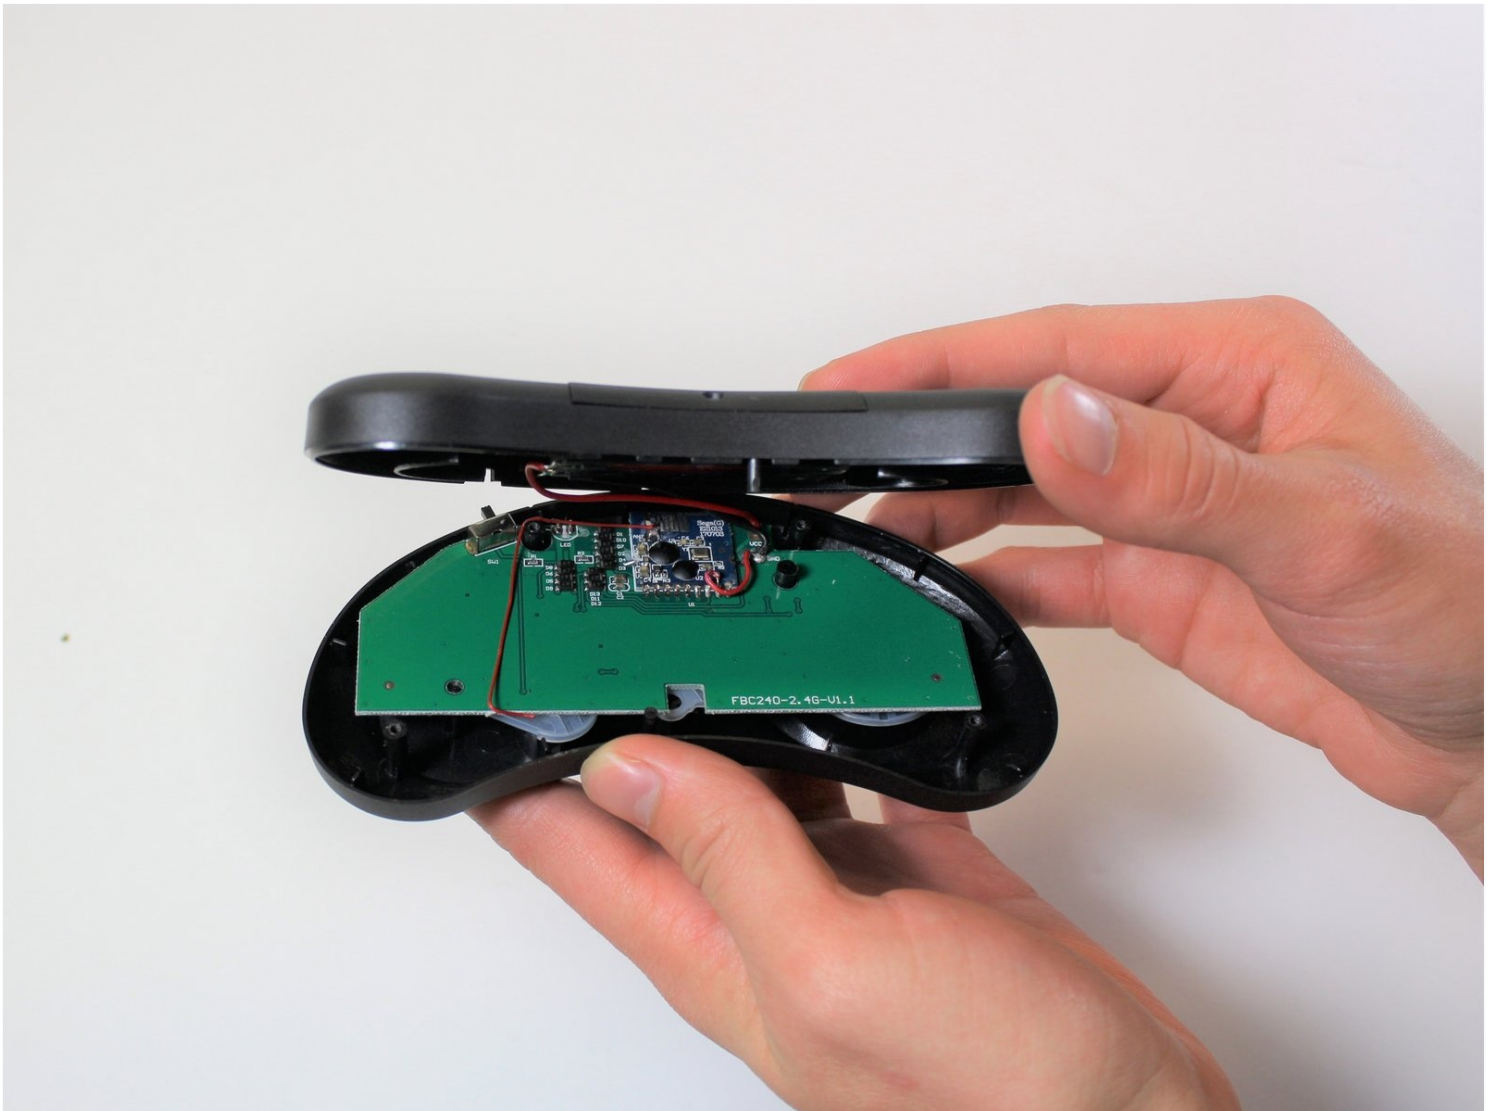

INTRODUCTION

This guide will help you replace the back cover of you controller. You'll only need a Phillips #000 screwdriver to complete this guide.


TOOLS:

[54 Bit Driver Kit](#) (1)

[Magnetic Project Mat](#) (1)

[Phillips #000 Screwdriver](#) (1)

Step 1 — Controller Back Cover

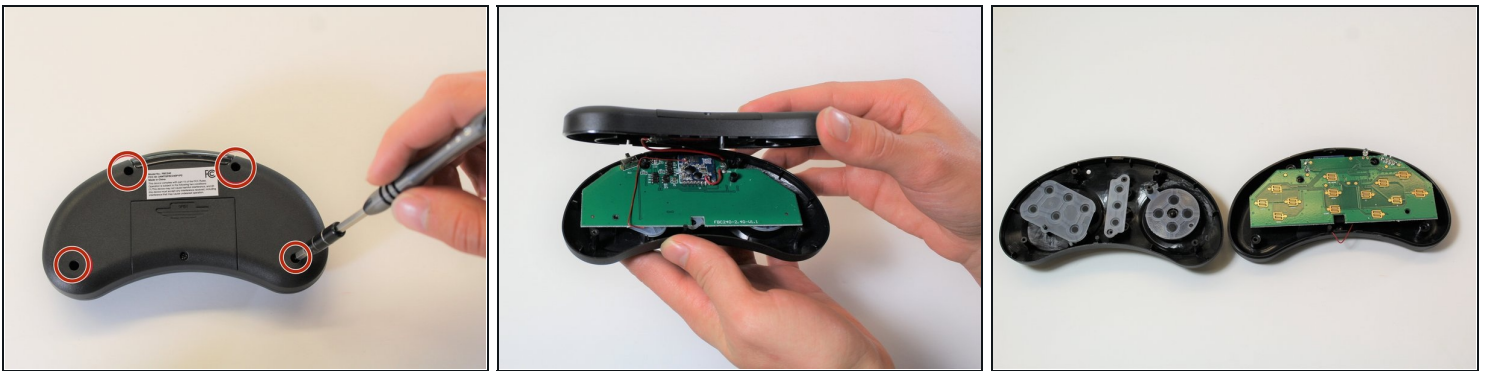

- Hold the controller with the bottom plate facing up, and gently remove the top plate that is connected to the motherboard of the controller. Set the top plate aside.
 - Remove the screws on the back of the controller with the Phillips #000 screwdriver.
 - ① Be sure to separate the two plates with the bottom facing up, to keep the buttons from falling out.
-

To reassemble your device, follow these instructions in reverse order.