


# **Dell Inspiron 14z 1470 Hard Drive Replacement**

Written By: Terrence15

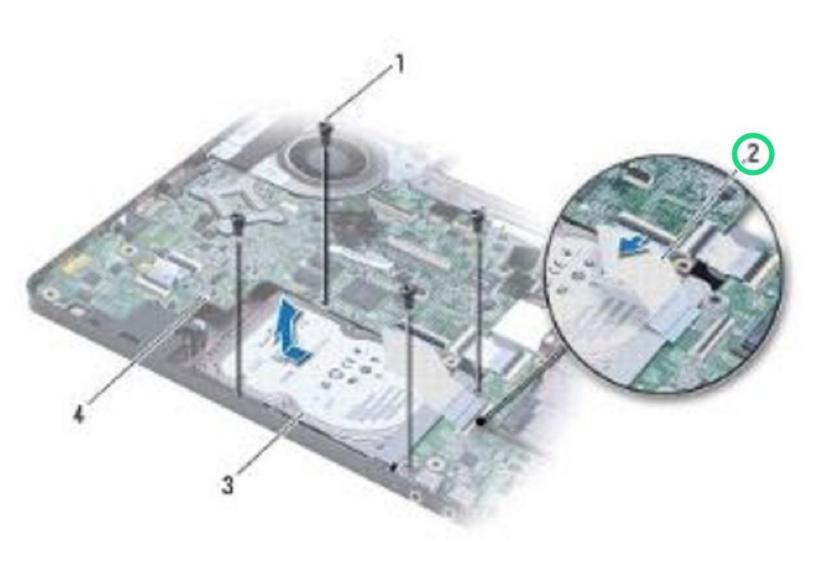

## INTRODUCTION


In this guide, we will be showing you how to remove and replace the Hard Drive.

## TOOLS:

۶


• Phillips #0 Screwdriver (1)

#### Step 1 — Disconnecting the Audio Cable

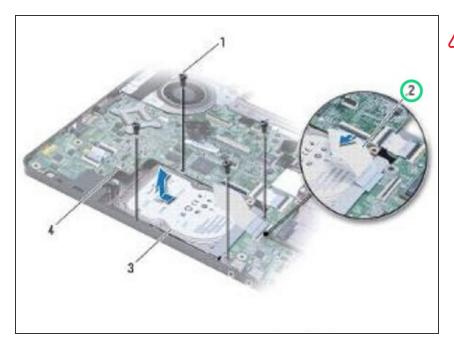


- WARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in <u>Before You Begin.</u>
  - Disconnect the USB/audio cable from the system board.

#### Step 2 — Remove the Screws

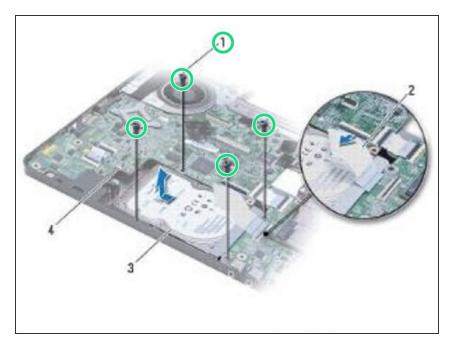

 Remove the four screws that secure the hard drive assembly to the computer base.

#### Step 3 — Lifting the Hard Drive Assembly

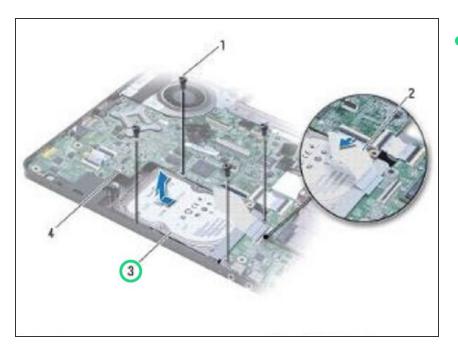

 Slide and lift the hard drive assembly out of the computer base.

#### Step 4 — Remove the Screws



 Remove the four screws that secure the hard drive to the hard drive bracket.

#### Step 5 — Remove the Hard Drive




Remove the hard drive.

#### Step 6 — Placing the Hard Drive




 Place the NEW hard drive in the hard drive bracket and replace the four screws that secure the hard drive bracket to the hard drive.

#### Step 7 — Sliding the Hard Drive

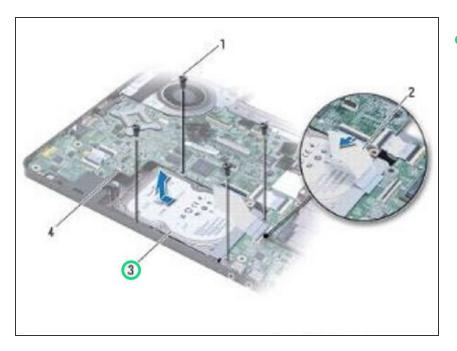


 Slide the hard drive assembly into the computer base until it is fully seated.

#### Step 8 — Replace the Screws

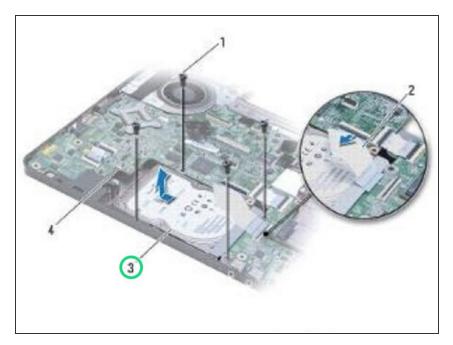

 Replace the four screws that secure the hard drive assembly to the computer base.

### Step 9 — Connecting the Cable

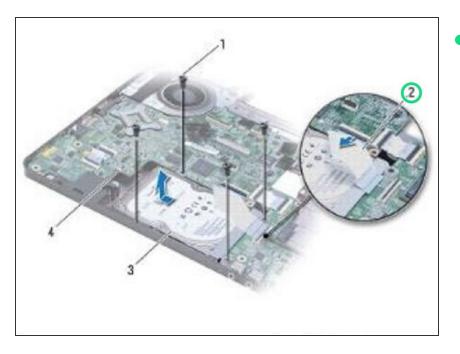

Connect the USB/audio cable to the USB/audio board.