

iPhone 8 Plus SIM Card Replacement

Eject the SIM card tray to replace the network SIM card in your iPhone 8 Plus.

Written By: Jeff Suovanen



INTRODUCTION

Use this guide to remove or replace the SIM card in your iPhone 8 Plus.



TOOLS:


• SIM Card Eject Tool (1)



PARTS:

• iPhone 8 Plus SIM Card Tray (1)

Step 1 — SIM Card

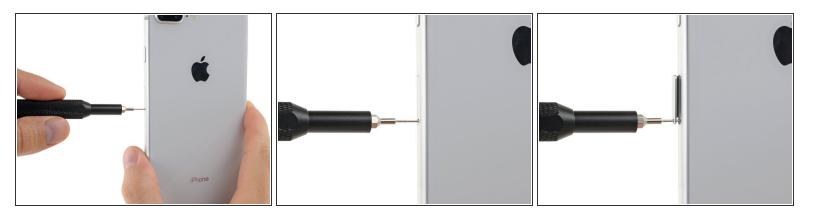

- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
- Press firmly to eject the tray.

Step 2



- Remove the SIM card tray from the iPhone.
 - The SIM card will fall out of the tray easily.
- Mhen reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.
- A thin rubber gasket around the SIM tray provides water and dust protection. If this gasket is damaged or missing, replace the gasket or the entire SIM tray to protect your iPhone's internal components.

This document was generated on 2020-11-16 03:39:44 PM (MST).

To reassemble your device, follow these instructions in reverse order.