

Propel Star Wars T-65 X-Wing Battery Replacement

This guide is to replace the SW 1977R battery.

Written By: Ibpsteiner




This document was generated on 2020-11-28 06:52:05 AM (MST).


INTRODUCTION


This guide is to replace the battery on the X-Wing drone. This is not to replace the controller batteries.



Step 1 — Battery

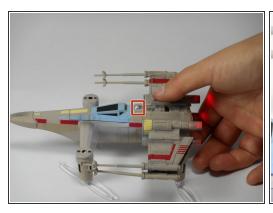


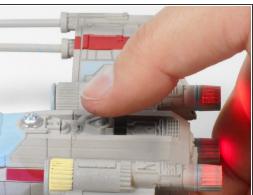

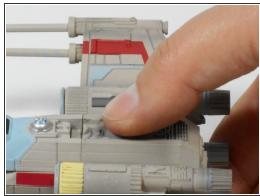

- Identify the battery lock located behind the silver dome (aka the R2 unit).
- Slide the battery lock towards the back of the drone.

Step 2

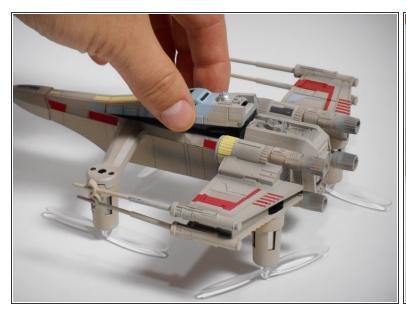



- Grip the blue cockpit (battery) and remove from the drone by pulling up and back. This might require some force.
- (i) The drone lights will turn off when the battery is removed.

To reassemble your device, follow these instructions in reverse order.