


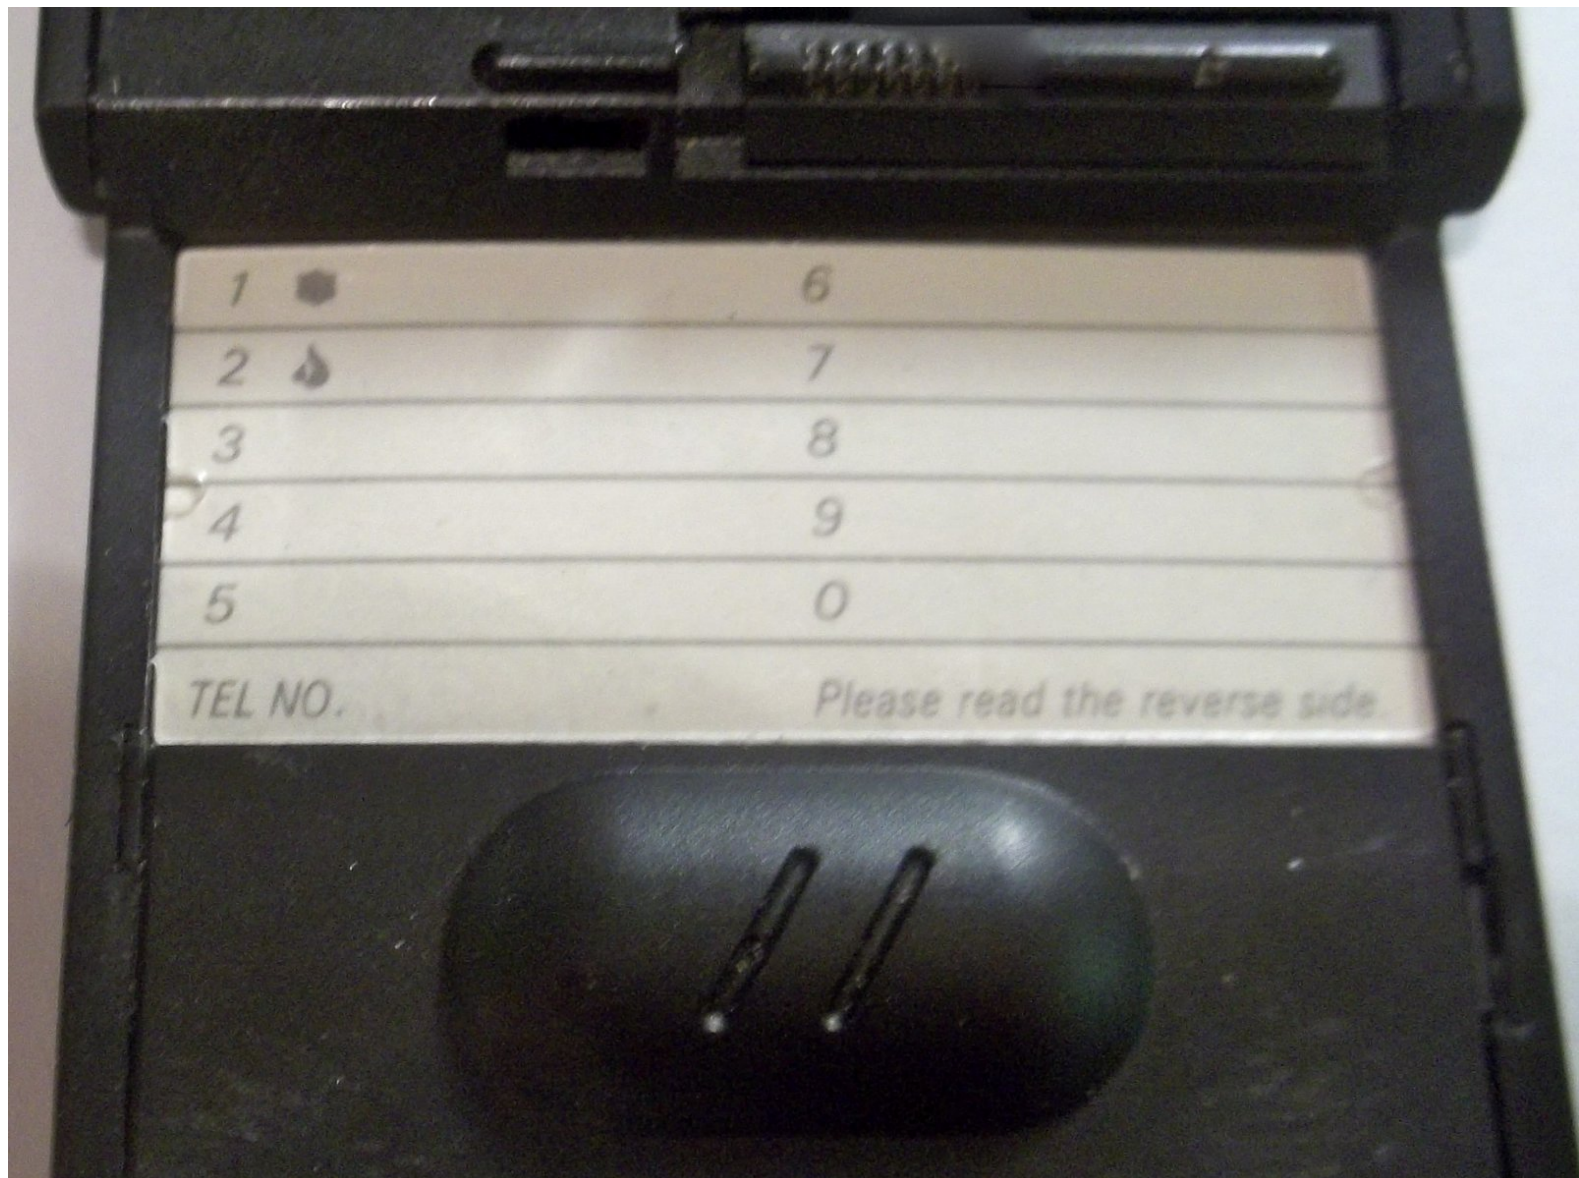

Panasonic KX-T4000R Cordless Phone Contact List Replacement

This guide instructs you on how to remove the Panasonic KX-T4000R Cordless Phone contact list.

Written By: Elizabeth Kelly



INTRODUCTION

The purpose of this guide is to remove the contact list, so contacts can be added. Then reassemble for function.



TOOLS:

- [No tools required](#) (1)
-

Step 1 — Contact List



- Loosen the plastic contact list covering by sliding it to the left.

Step 2



- Lift both the plastic cover and contact list from the phone.

To reassemble your device, follow these instructions in reverse order.