



Lenovo Ideapad 320-15ABR Back Panel Replacement

This guide explains how to remove and replace the back panel for the device in a step-by-step manner.

Written By: Anurag Deb



INTRODUCTION

This guide will show you how to disassemble the back panel for the device.

This guide is also a prerequisite guide for other hardware part replacement.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)



PARTS:

- [Lenovo IdeaPad 320-15 and 330-15 Lower Case](#) (1)



Step 1 — Back Panel

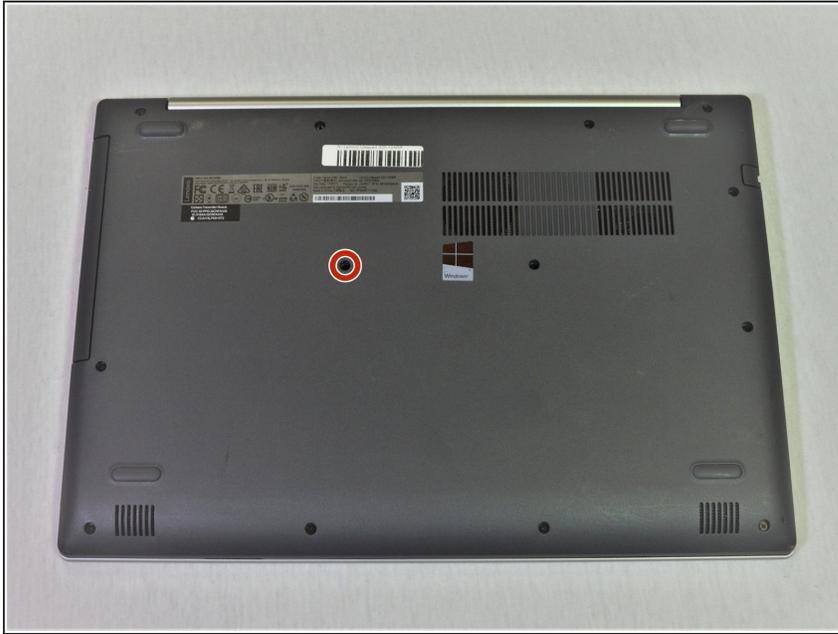

⚠ Before you proceed, make sure your computer is turned off and is not connected to any power source.



- Remove the single 7 mm Phillips #1 screw securing the optical drive.
- i** Be sure to store the screws carefully as they are easy to lose. A magnetic project mat is recommended

Step 2

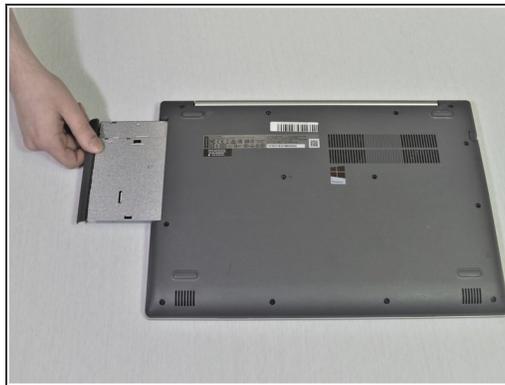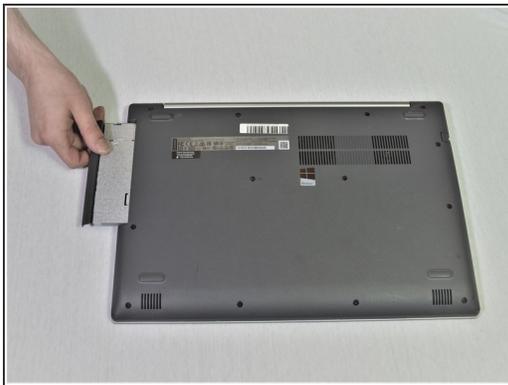


- Carefully remove the optical drive bracket by pulling the bezel away from the laptop.

Step 3

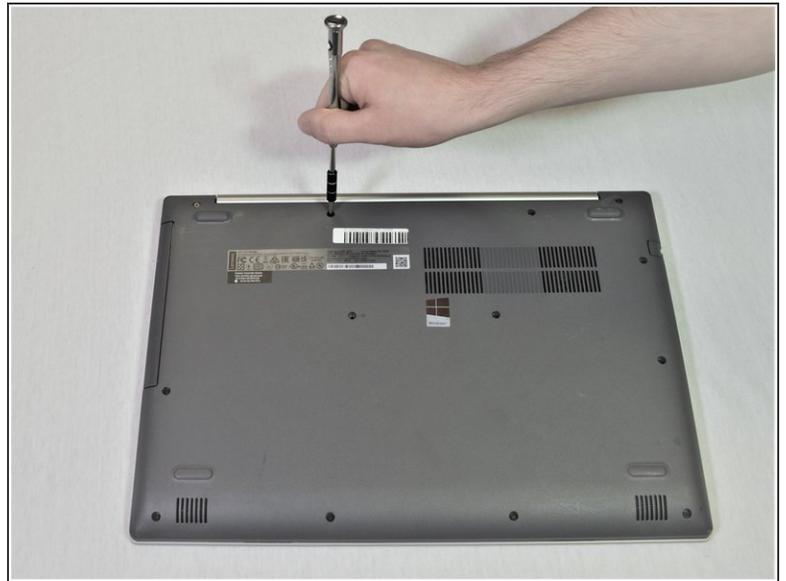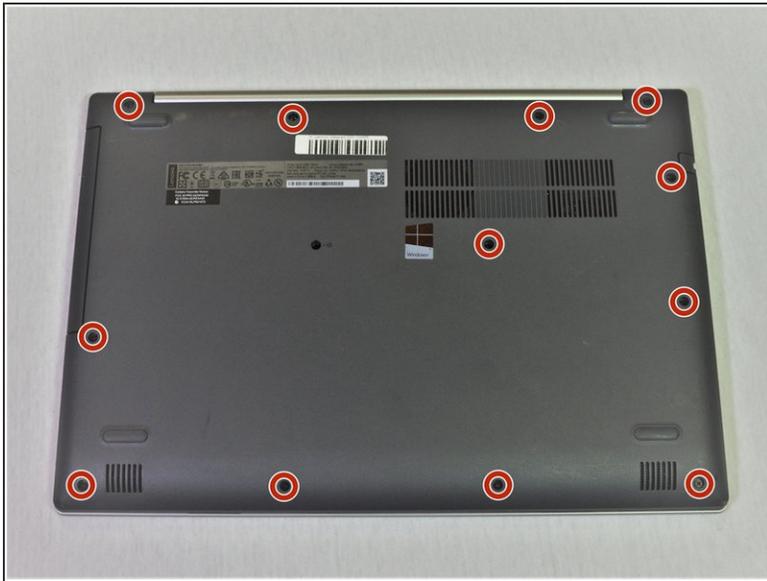

- Using the Phillips #1 screwdriver, remove the twelve screws around the back panel from the laptop.

Step 4

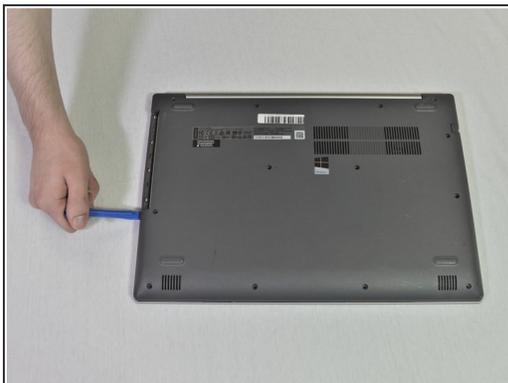

- Use an opening tool to pry out the back cover.

Step 5



- Remove the back panel by pulling it up and away from the laptop.

To reassemble your device, follow these instructions in reverse order.