

LG G3 - How to fix GPS not working

Written By: draxx







Phillips #1 Screwdriver (1)
Pince droite métallique de précision (1)

Feuille épaisse ou papier cartonné (1)

Step 1 — LG G3 - How to fix GPS not working








- Shutdown your phone.
- Remove the back cover of the phone
- Unscrew all the screws identified in red in the picture.
- Remove the plastic covers using your fingernails or a plastic tool.

Step 2



- Carefully peel off the 3 metal stickers (connectors) identified in white on the photo with a flat screwdriver.
- ⚠ Please note these stickers are fragile and can tear.
- Cut pieces of a sheet of cardboard or a sheet thick enough to the size of the stickers.
- Glue a piece of cardboard or thick paper under each sticker to create extra thickness.
- Replace the stickers in their original location (they will no longer stick to the shell, but that's okay).

Step 3

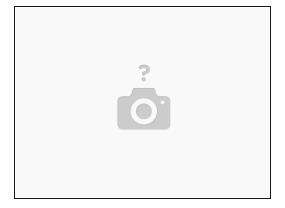

• Reassemble the phone by repeating the previous steps, taking care to tighten the screws properly when reassembling

To reassemble your device, follow the instructions in reverse order.