




Samsung Galaxy J3 Emerge Screen Replacement

How to replace the screen for a Samsung Galaxy J3 Emerge Model SM-J327P.

Written By: PJ Yebisu

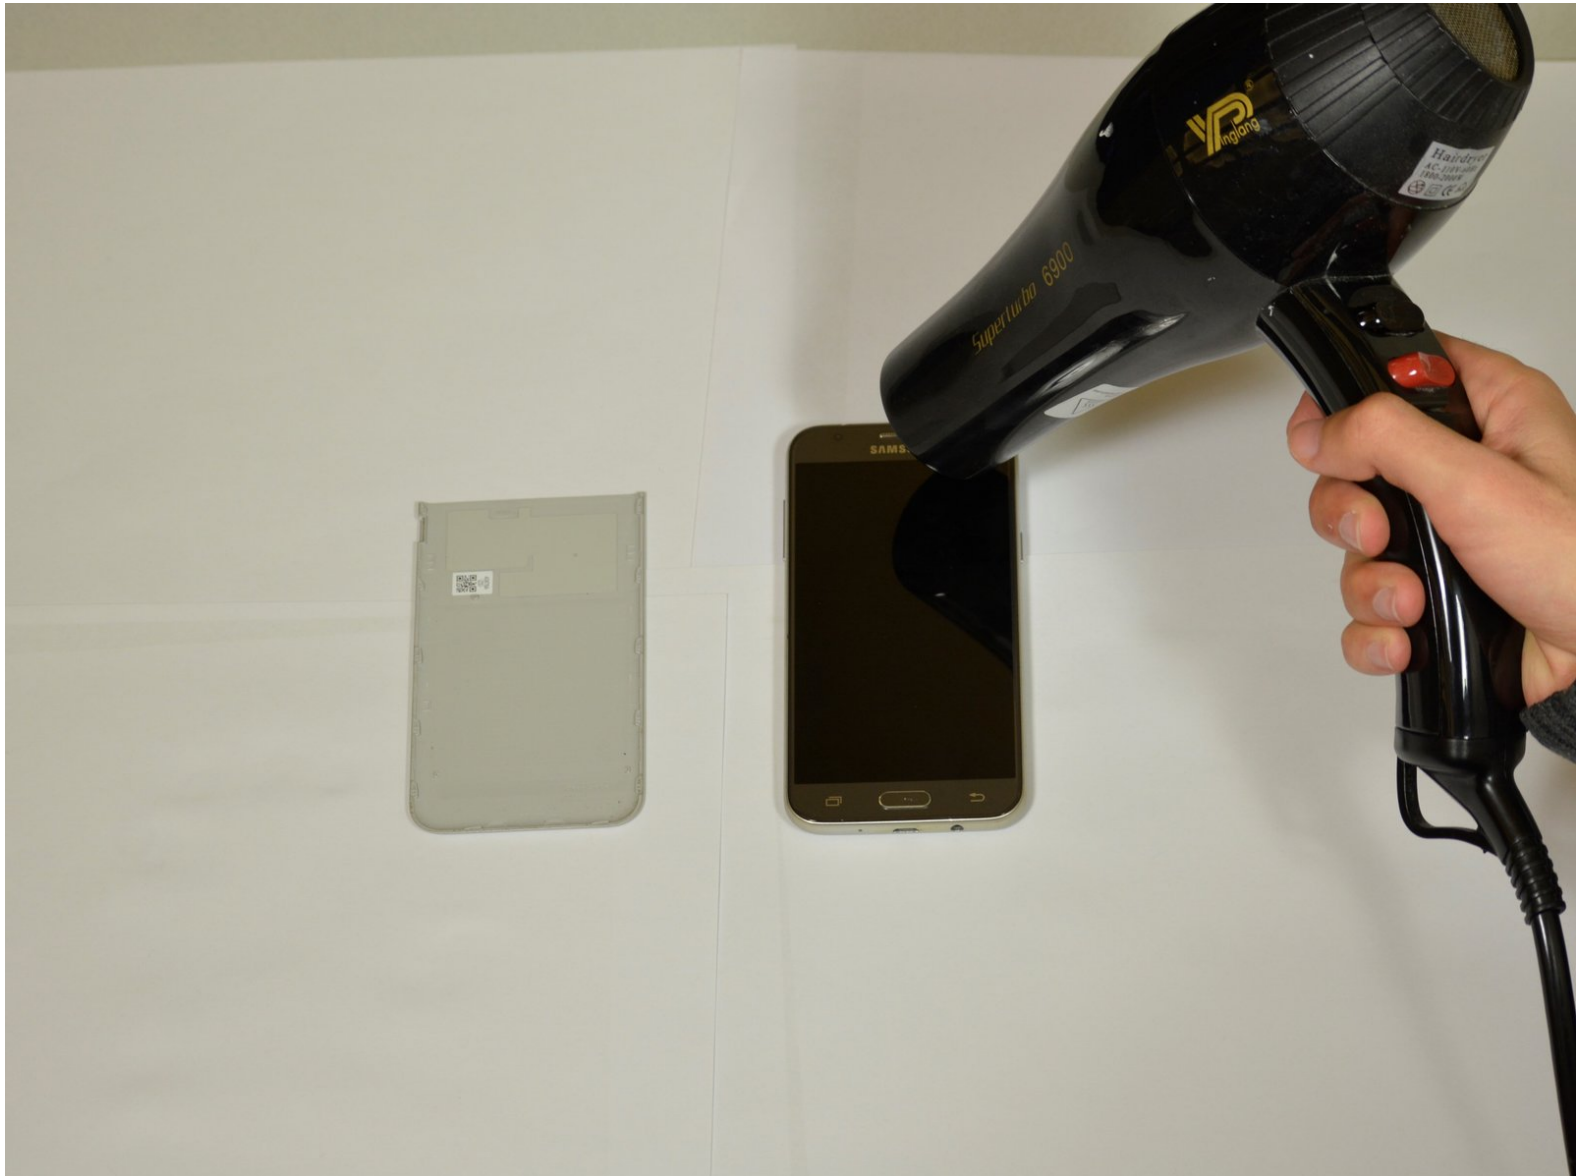

INTRODUCTION

Screen Replacement guide for a Samsung Galaxy J3 Emerge Model SM-J327P. To heat the adhesive up that holds the screen on the phone, use a hairdryer. The screen might need replacing if the display is unresponsive or if the phone won't turn on. The screen can be replaced if the original cracks.



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Screen




- Heat up the edges of the screen with a hair dryer.
- Put the iFixit Opening Tool between the screen and body to open the edge of the screen up.
- Work the iFixit Opening Tools around the whole screen to break the glue.

Step 2

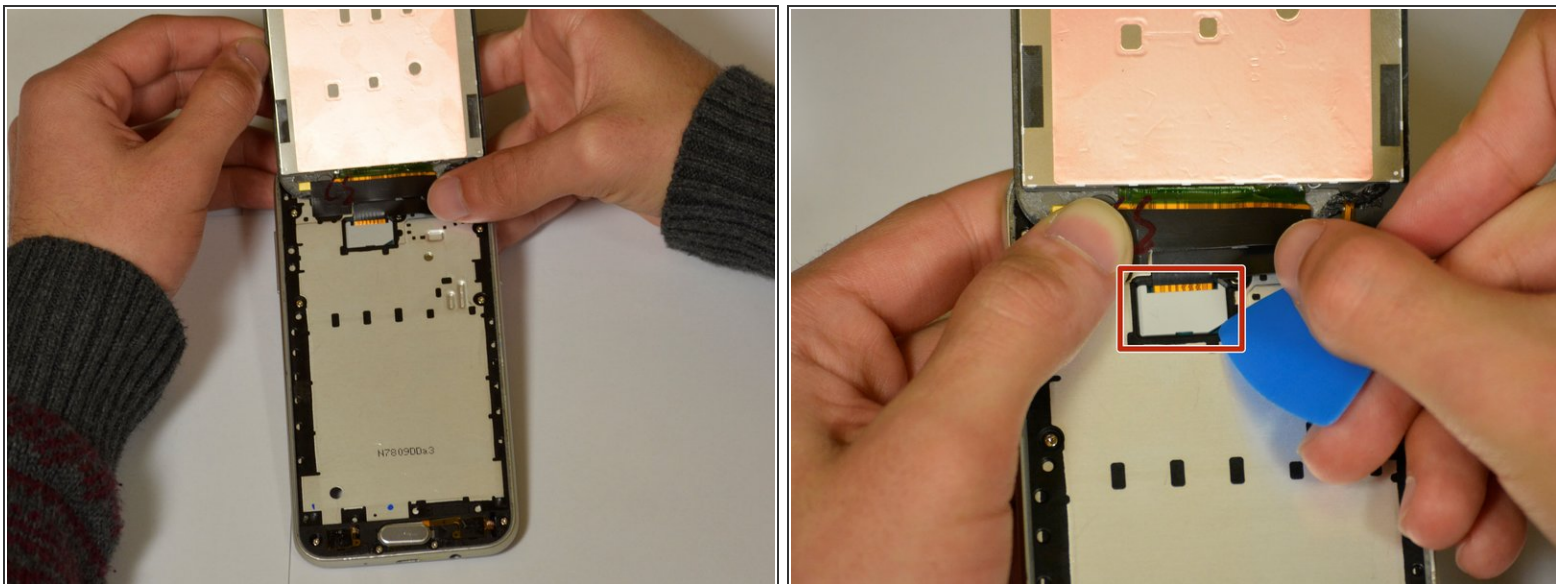

- Lift the screen up from the bottom.
- ⚠ The screen could crack when lifting it up.
- Pry the gray cover open.

Step 3

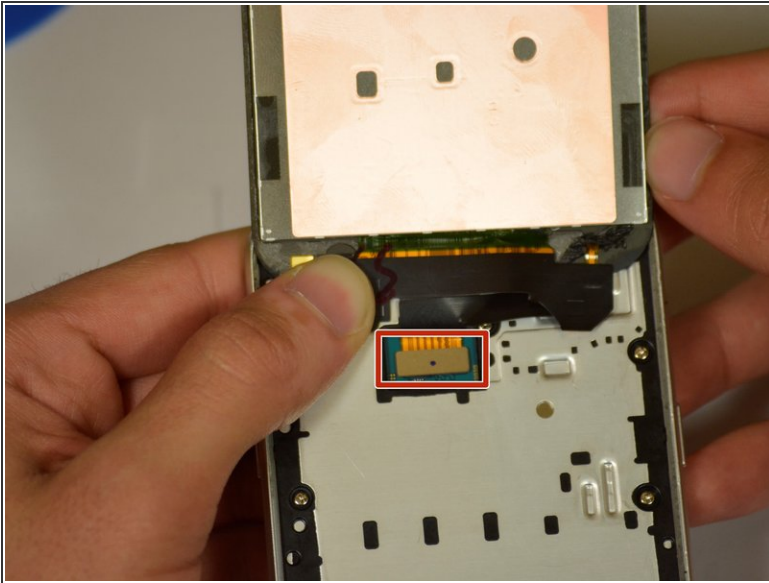

- Pry the connector off of the motherboard by using a clean nail or the iFixit opening tool.

To reassemble your device, follow these instructions in reverse order.