




Samsung Galaxy J3 Emerge Speaker Replacement

How to replace the speaker for a Samsung Galaxy J3 Emerge Model SM-J327P.

Written By: Hugh Cosculluela

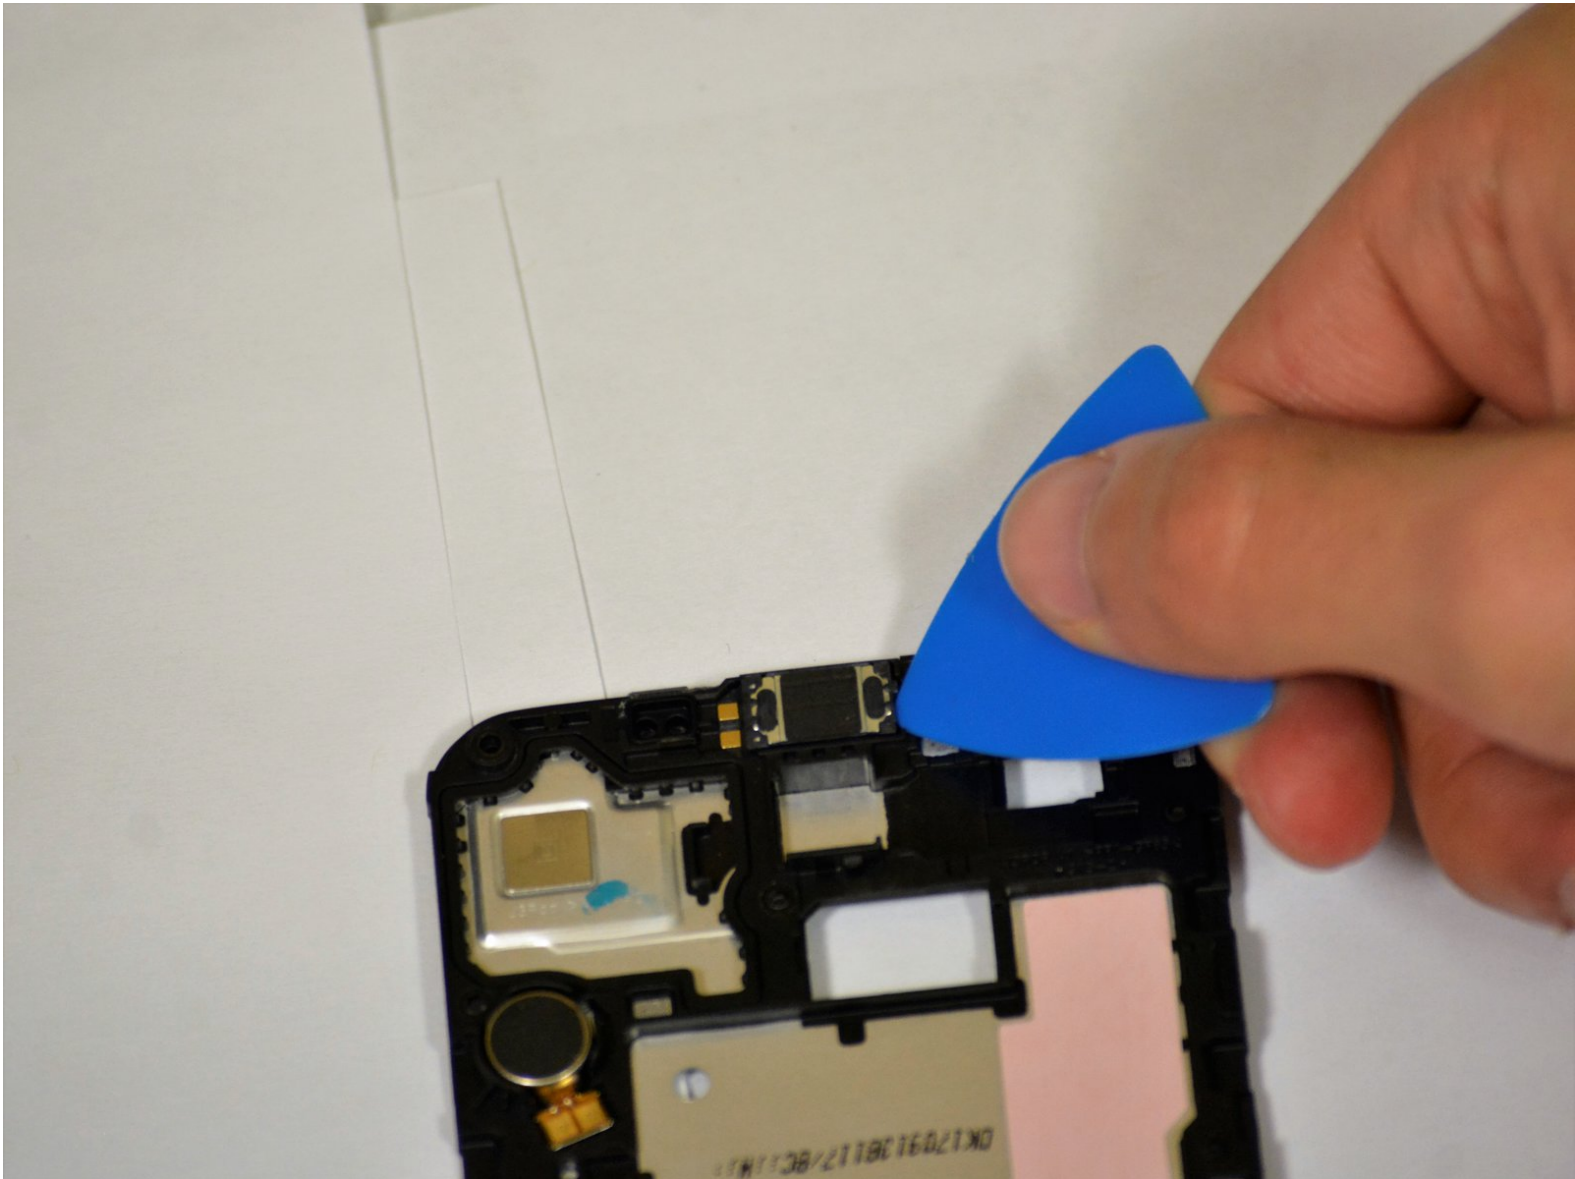

INTRODUCTION


Speaker replacement guide for a Samsung Galaxy J3 Emerge Model SM-J327P. The speaker needs replacing if the sounds are distorted when speaking on the phone or when music is playing.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Screen

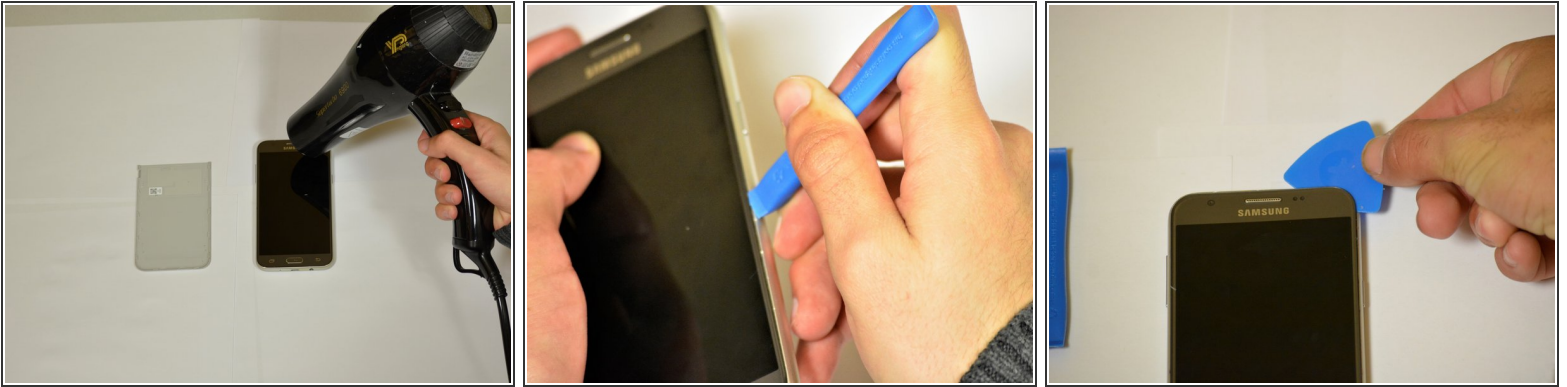


- Heat up the edges of the screen with a hair dryer.
- Put the iFixit Opening Tool between the screen and body to open the edge of the screen up.
- Work the iFixit Opening Tools around the whole screen to break the glue.

Step 2

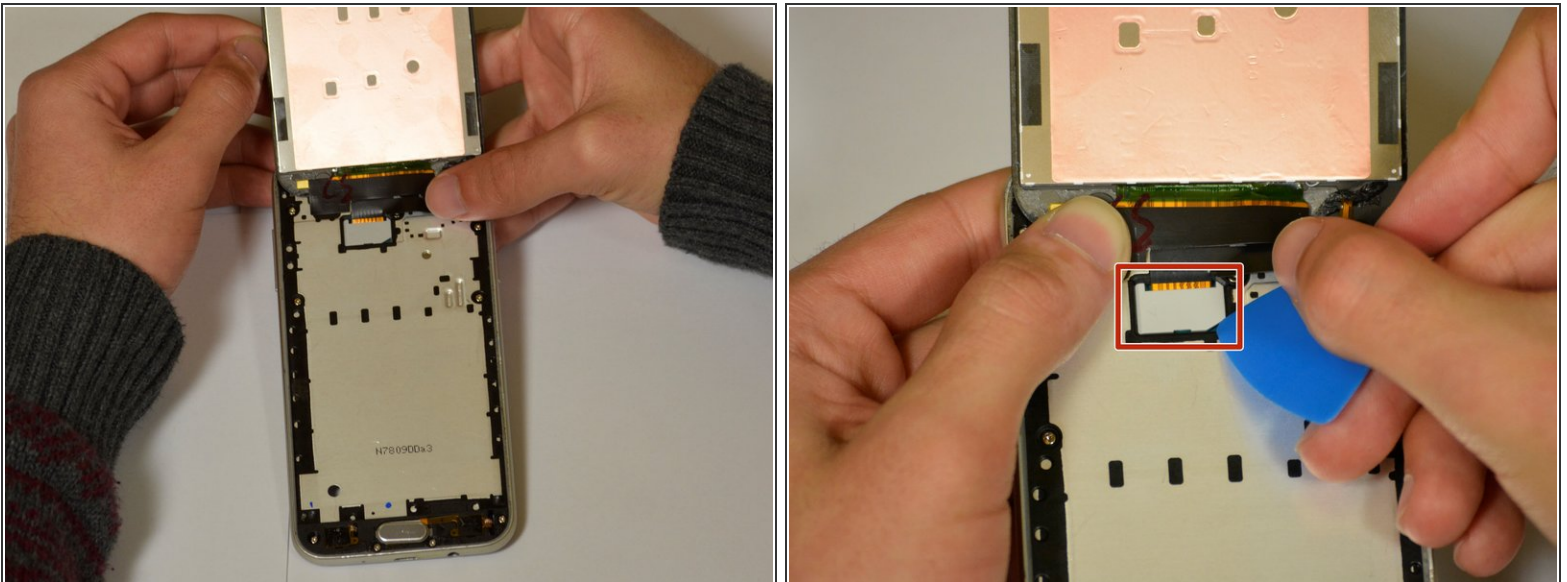



- Lift the screen up from the bottom.
- ⚠ The screen could crack when lifting it up.
- Pry the gray cover open.

Step 3

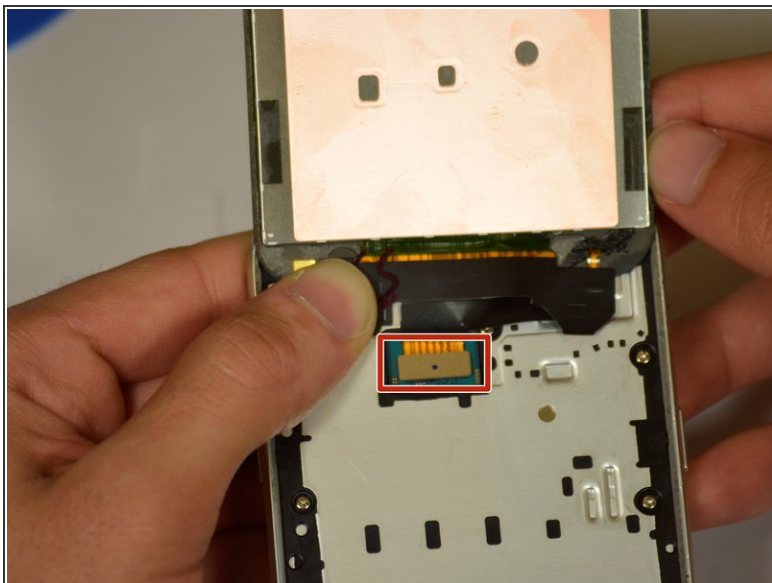

- Pry the connector off of the motherboard by using a clean nail or the iFixit opening tool.

Step 4 — Motherboard

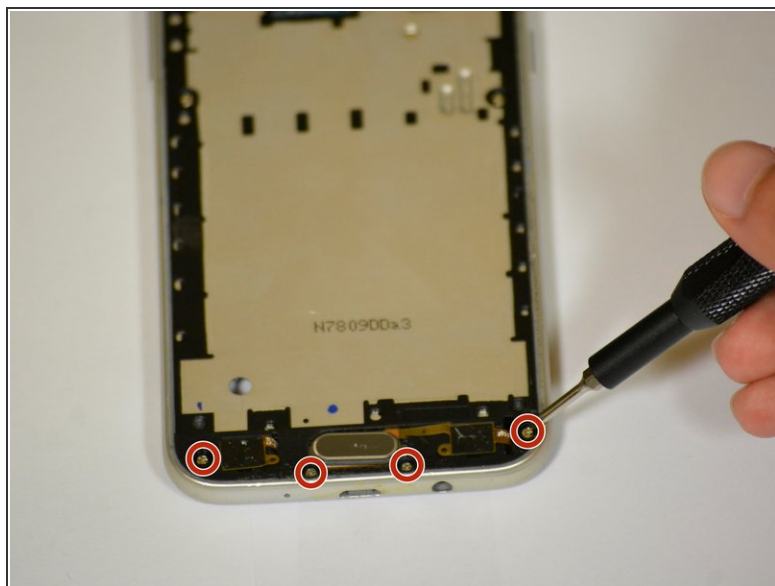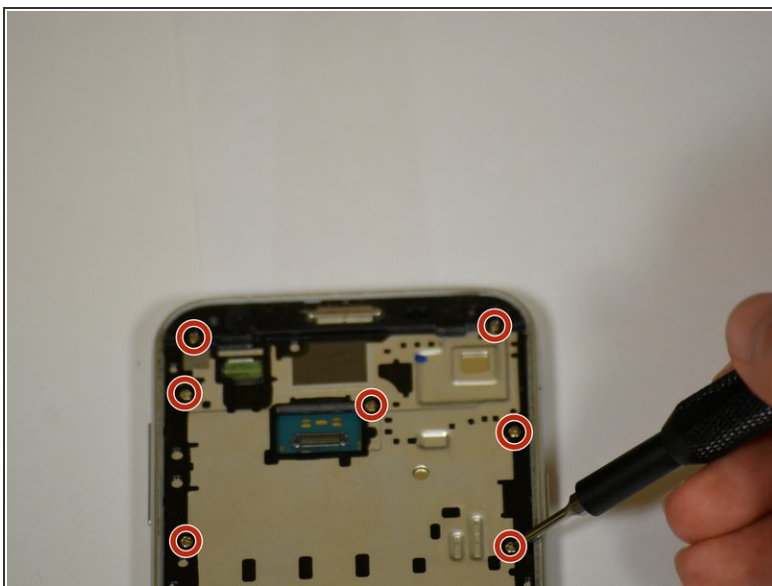

- Remove the eleven Phillips #00 3.5mm screws.

i If the screws get stuck when removing, try using tape to get them out. Place the adhesive side of tape on the screws and pull the tape off the spot.

Step 5



- Turn the phone over and push down where the battery was.
- ⓘ There will be a loud clicking noise when applying pressure.

Step 6





- Insert the iFixit Opening Pick between the motherboard and the panel.
- Work the iFixit Opening Pick around the outside of the motherboard.

Step 7



- Pry the motherboard away from the phone using your hand.

Step 8 — Speaker

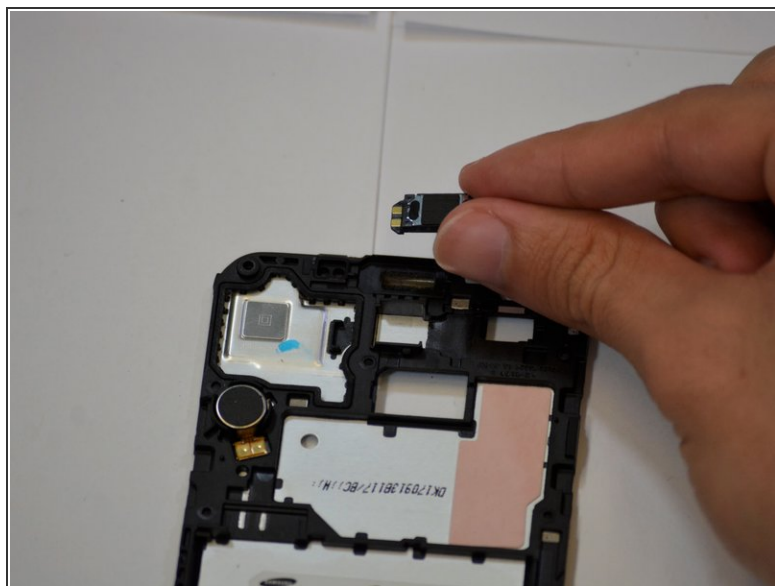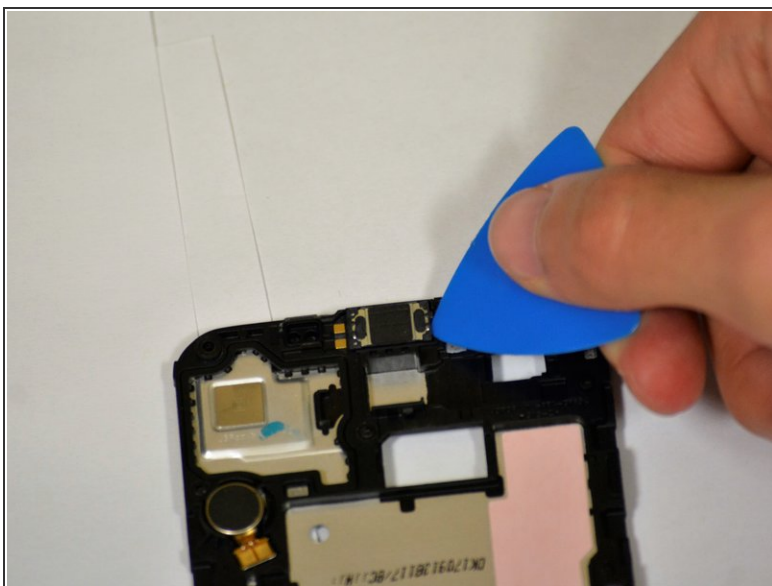

- Use the iFixit Opening Pick to pry off the speaker from the back side.
- Pull out speaker with hands or use tweezers to pull out speaker.

To reassemble your device, follow these instructions in reverse order.