



How to Fix Bent Silverware

If your silverware starts to bend, there's no...

Written By: Anna Sharpes



INTRODUCTION

If your silverware starts to bend, there's no need to go out and buy more. This guide will show you a quick fix to repairing your silverware and bending it back to its original shape.



TOOLS:


- [Pot](#) (1)
 - [Water](#) (1)
 - [Slip Joint Pliers](#) (1)
 - [Hammer](#) (1)
 - [Towel](#) (1)
-

Step 1 — How to Fix Bent Silverware



- First, clean with soap and water all of the bent silverware.

Step 2

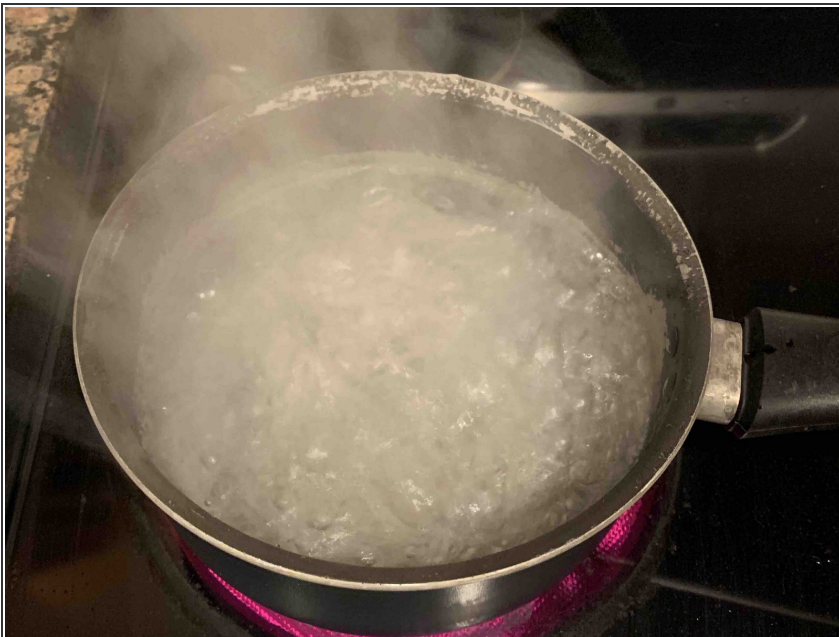

- Take the pot and fill it halfway with water.
- Put the pot on the stove and heat the water till it's boiling.

Step 3



- Place the bent silverware in the water for at least one minute.

Step 4



- After the minute is over, carefully pull out all of the silverware using pliers.

Step 5



- Dry off the silverware with either paper or cloth towels. Be careful not to burn yourself.

Step 6



- Use tools such as pliers, a hard surface, rulers, and/or hammers to reshape silverware as desired.

Step 7



- When your done bending the silverware to its desired shape, let the silverware cool down to stay in that shape.