



ASUS Q324UA-BHI7T17 Track Pad Replacement

This is a in step by step instruction on how to replace the track pad of teh ASUS Q324UA-BHI7T17

Written By: Gabriel survance




INTRODUCTION

If the mouse isn't properly tracking your movements, the trackpad may be faulty. Use this guide to replace the trackpad in your device.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Track Pad

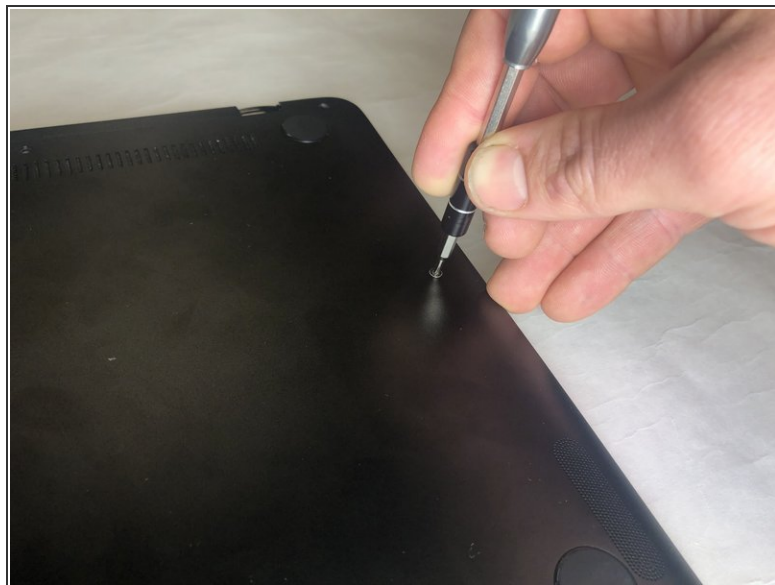


- Remove all ten 5mm screws from the backplate using a Phillips #0 Screwdriver.

Step 2





- Carefully remove the backplate using the plastic opening tool.

Step 3

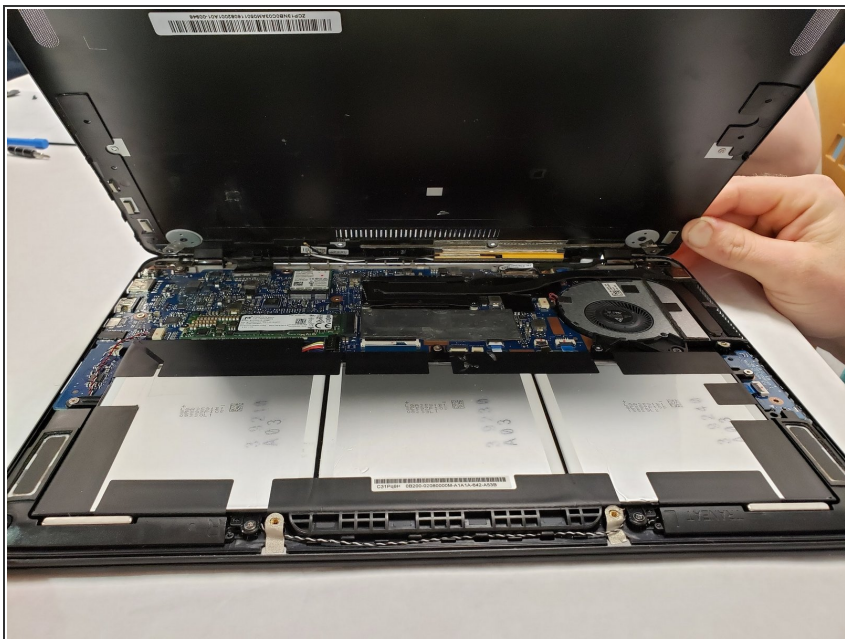


- Lift up the back plate and slide it to the back of the computer to remove.

Step 4

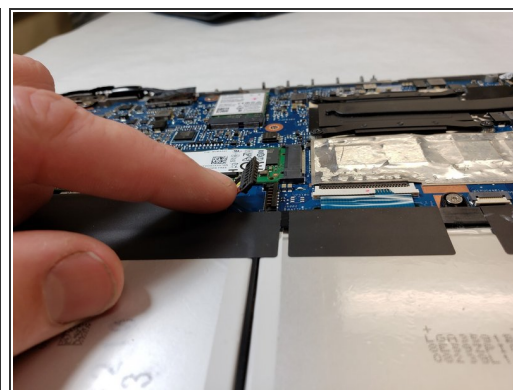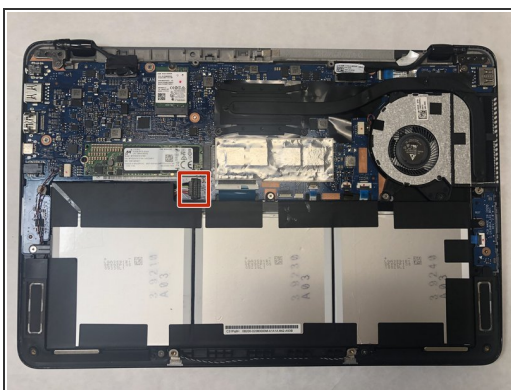


- Disconnect the battery from the laptop in the upper left side of the battery, using tweezers.

Step 5

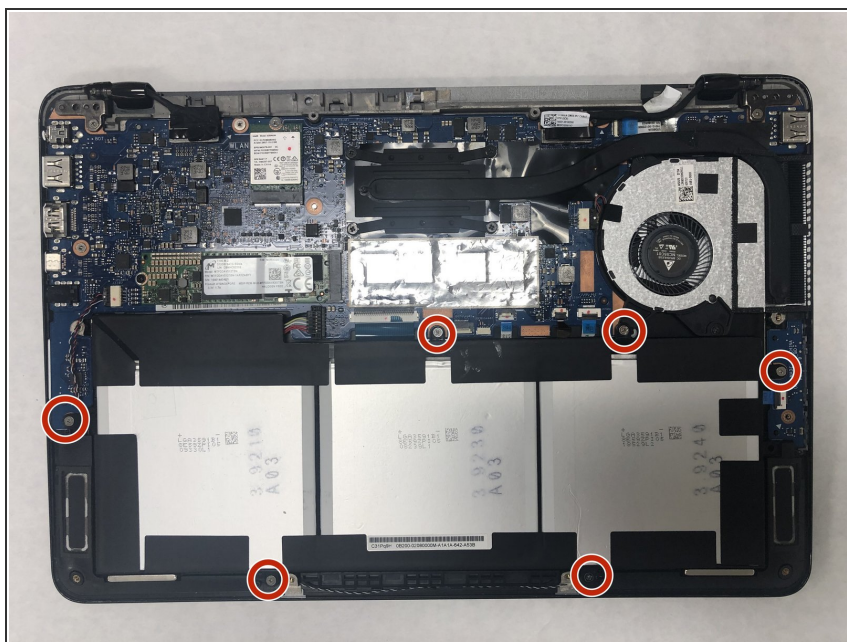


- Remove the six 5 mm screws holding the battery using a Phillips #0 screwdriver.

Step 6

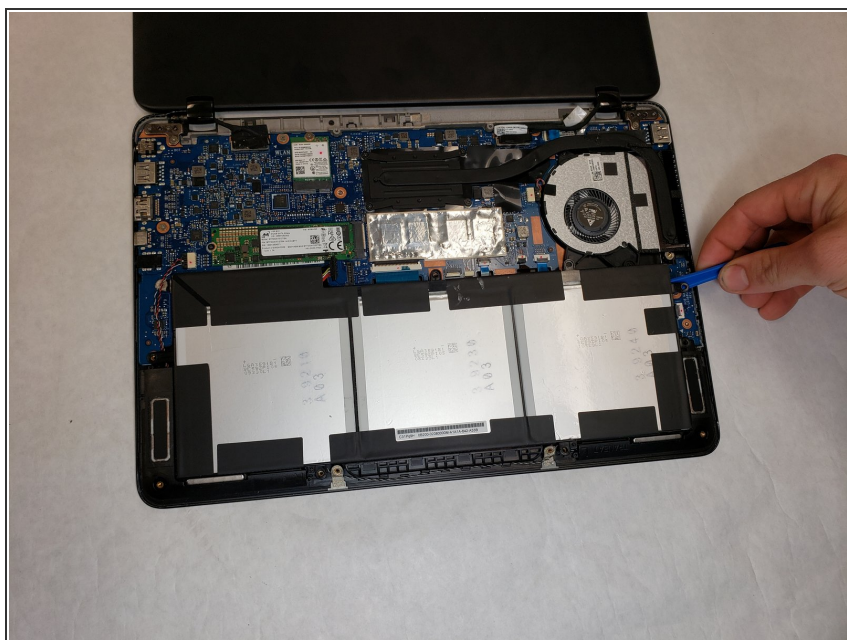


- Carefully remove the battery using the plastic opening tool.


Step 7

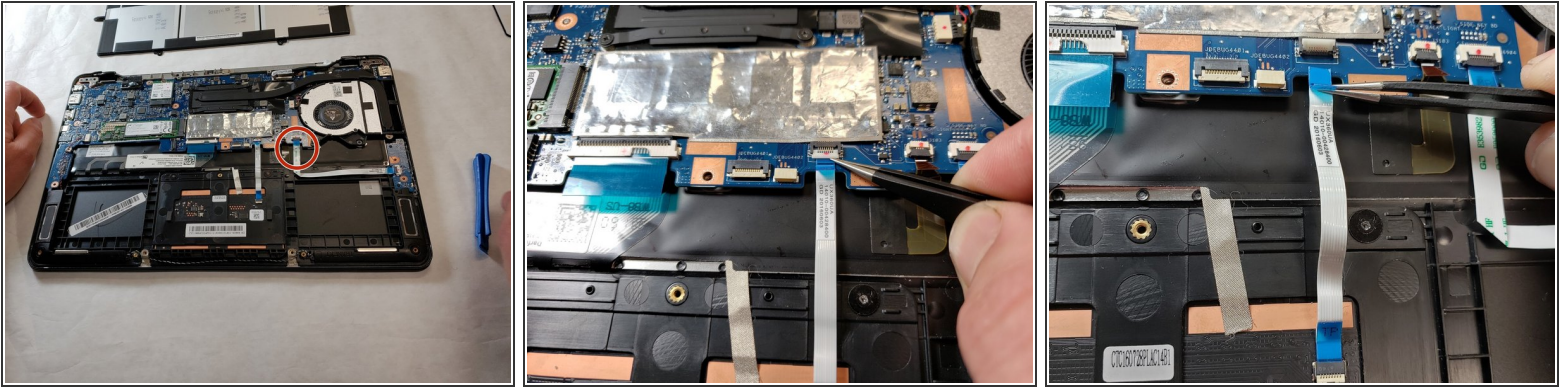

- Disconnect the trackpad from the motherboard using tweezers.


 The white tab flips up.

Step 8

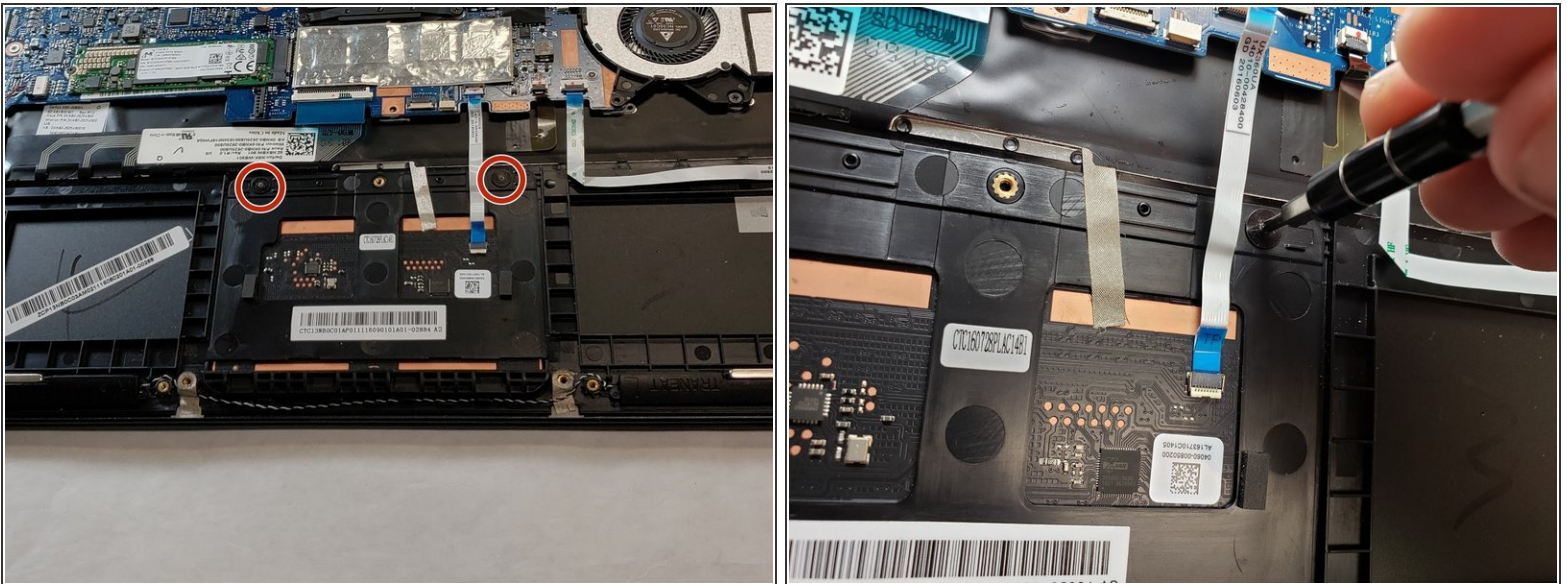


- Remove the two 5mm screws holding in the trackpad using a Phillips #0 screwdriver.

Step 9

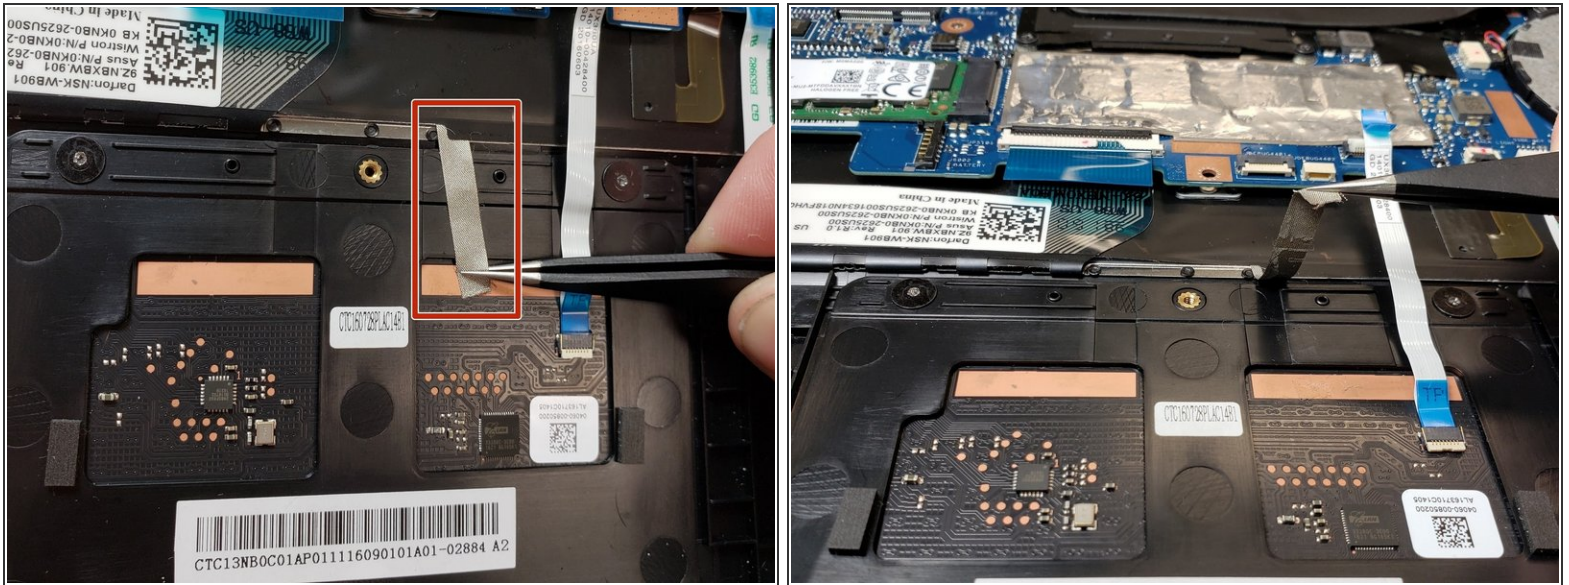

- Remove adhesive tape tethering the trackpad to the motherboard with tweezers.

Step 10

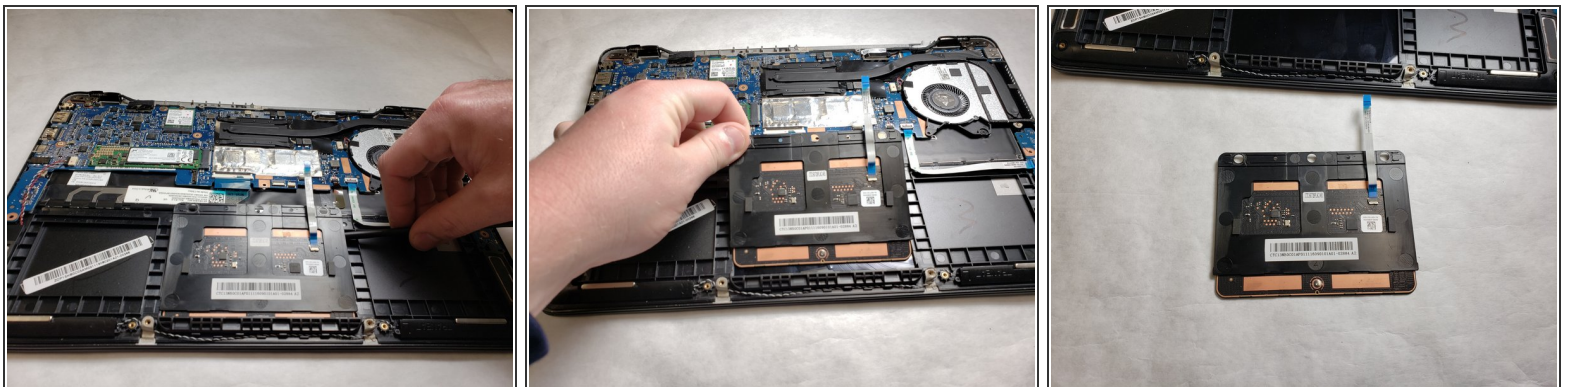

- Carefully remove the trackpad using the plastic opening tool.
- ❗ Lift up and slide track toward the back of the computer to remove.

To reassemble your device, follow these instructions in reverse order.