



X-Treme Tablet Generation 2 Volume Button Replacement

Replacing the volume button for X-Treme Tablet Generation 2

Written By: Faiz Kasman



INTRODUCTION

Use this guide to replace a malfunctioning volume button in your device.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Volume Button



- Remove the two screws using a Phillips #0 screwdriver.
- Pry the back cover carefully and continue going around the device.

Step 2

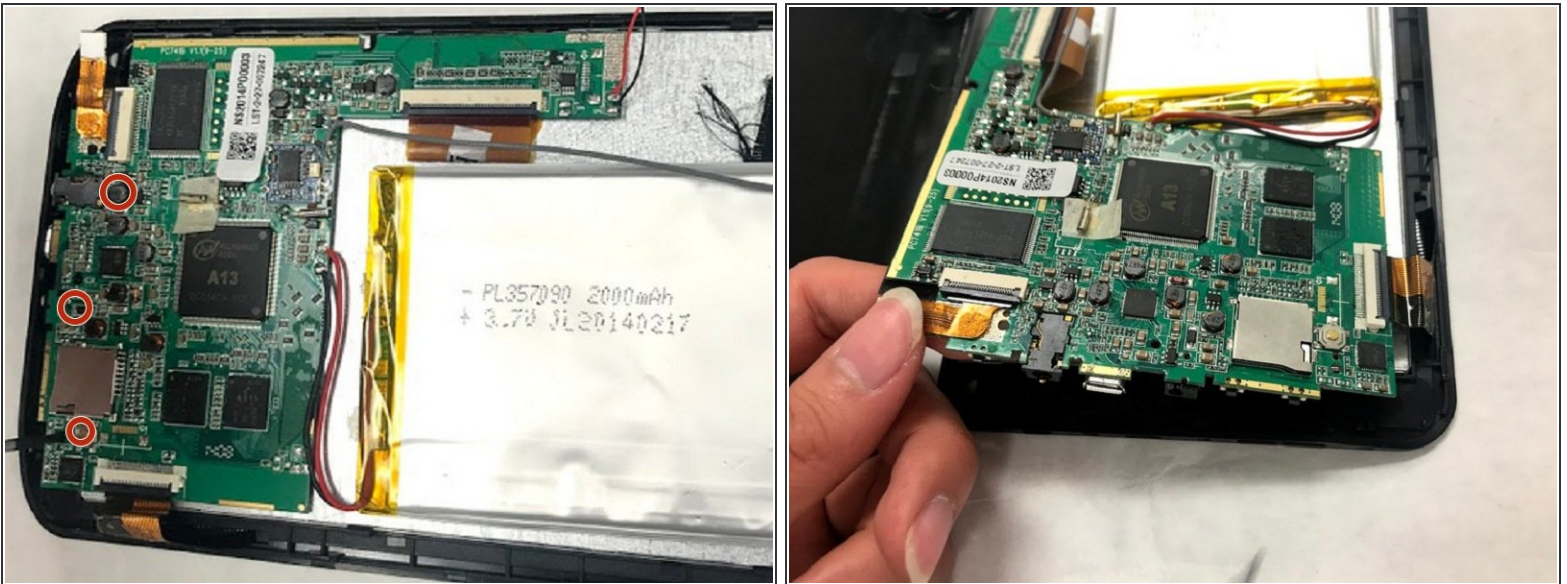

- Remove three screws that are attached to the motherboard using the Phillips #0 screwdriver.
- Carefully lift the motherboard to free up the faulty volume button and take it out.

Step 3



- Replace the volume button.
- ⓘ For easy installation, have the tablet placed vertically while inserting the volume button.

To reassemble your device, follow these instructions in reverse order.