


Huawei Honor 10 Loudspeaker Unit Removal

This guide shows how to remove the loudspeaker unit including the vibration motor and the daughterboard cover for the Huawei Honor 10.

Written By: Dominik Schnabelrauch

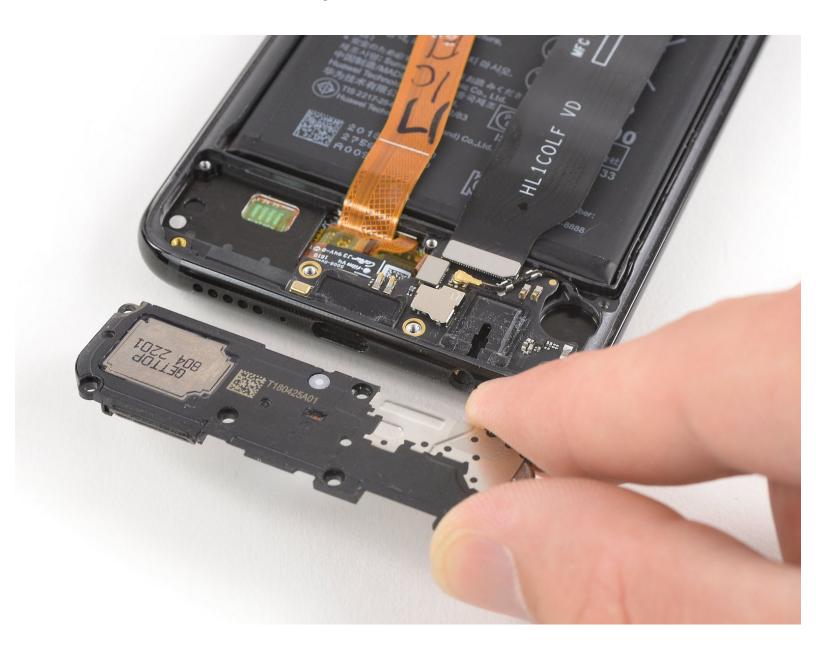

INTRODUCTION

Use this guide to remove the loudspeaker unit including the vibration motor and the daughterboard cover for the Honor 10.

You'll need **replacement adhesive** to reattach components when reassembling the device.



TOOLS:

- iOpener (1)
- iFixit Opening Picks set of 6 (1)
- Suction Handle (1)
- Tweezers (1)
- Phillips #00 Screwdriver (1)
- Spudger (1)

Step 1 — Rear Glass



- Before you begin, switch off your phone.
- Apply a <u>heated iOpener</u> to a long edge of the phone to loosen the adhesive beneath the rear glass.
 Apply the iOpener for at least two minutes.

Step 2







- (i) If the phone's rear glass is cracked, the suction cup may not stick. Try <u>lifting it with strong tape</u>, or superglue the suction cup in place and allow it to cure so you can proceed.
- Press a suction cup onto the back cover.
- Lift the back cover's right edge with your suction cup, opening a slight gap between the back cover and the frame.
- Insert the tip of an opening pick in the gap you created and slide it to the bottom right corner.





- (i) Apply more heat if the adhesive becomes hard to cut. During the removal process, the back cover is under tension all the time and is likely to break if the adhesive isn't softened enough.
- Insert a second opening pick at the bottom right corner of the rear glass.
- Slide the opening pick along the bottom edge of the rear glass to cut the adhesive and leave it in the bottom left corner.







- Insert a third opening pick at the bottom left corner of the rear glass.
- Slide the opening pick along the left edge of the rear glass to cut the adhesive.
- Leave the opening pick at the top left corner of the rear glass.

Step 5





- Insert a fourth opening pick at the top left corner of the rear glass.
- Slide the opening along the top edge of the rear glass and cut the remaining adhesive with it.





Carefully lift the rear glass of the Huawei Honor 10 and remove it.

Step 7 — Battery disconnect







- Use a pair of tweezer to carefully peel the black foil off the loudspeaker and daughterboard cover.
- Remove the foil completely.



 Remove the three Phillips #00 screws (2.9 mm length) that secure the metal bracket on top of the battery, interconnect, and display flex cable.

Step 9





• Use a pair of tweezers to remove the metal shield that covers the connectors of the interconnect cable, the battery and the display flex cable.





Use a spudger to pry up and disconnect the battery flex cable.

Step 11 — Loudspeaker Unit



- Remove the seven Phillips screws securing the loudspeaker unit:
 - Three silver 2.9 mm long screws
 - Four black 3.4 mm long screws







- There's a little bit of adhesive under the loudspeaker. It's possible to remove the loudspeaker without heating the adhesive but if you're having a hard time removing it, you can <u>use an iOpener</u> to soften the adhesive.
 - Slide the flat end of a spudger under the right side of the loudspeaker unit.
- Pry up the loudspeaker unit until you can get a good grip.
- Remove the loudspeaker unit.

To reassemble your device, follow these instructions in reverse order.