



Lenovo ThinkPad X1 Carbon (2nd Gen) Battery Replacement

Use this guide to replace the battery of your Lenovo ThinkPad X1 Carbon (2nd Gen).

Written By: Eevee Murdock



INTRODUCTION

If your Lenovo ThinkPad X1 Carbon (2nd Gen) won't turn on or last the full battery life, use this guide to replace the battery.

The battery stores the energy for your computer.

Before using this guide, check that your computer has been charged in a reliable outlet by trying multiple outlets. Also, try using multiple charging cords to make sure your cord isn't broken.

Before you begin, make sure your computer is off and unplugged.



TOOLS:


- [iFixit Opening Tool](#) (1)
- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Lenovo ThinkPad X1 Carbon Gen 2 \(2014\) and Gen 3 \(2015\) Battery](#) (1)

Step 1 — Back Cover

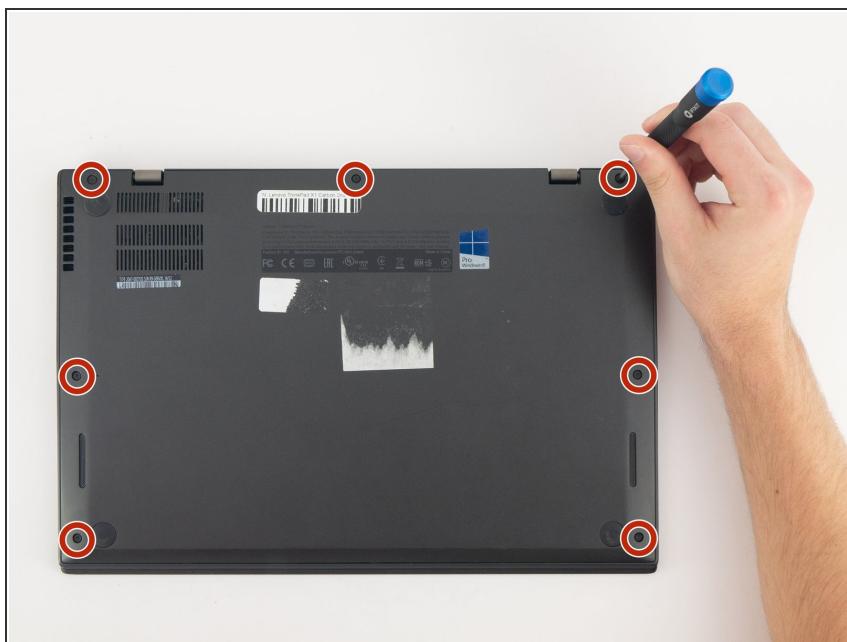



- Using a Phillips #0 screwdriver, remove the seven 7mm screws holding the back cover onto your computer.

Step 2




- Use a plastic opening tool or your fingers to pry off the cover.

Step 3 — Battery

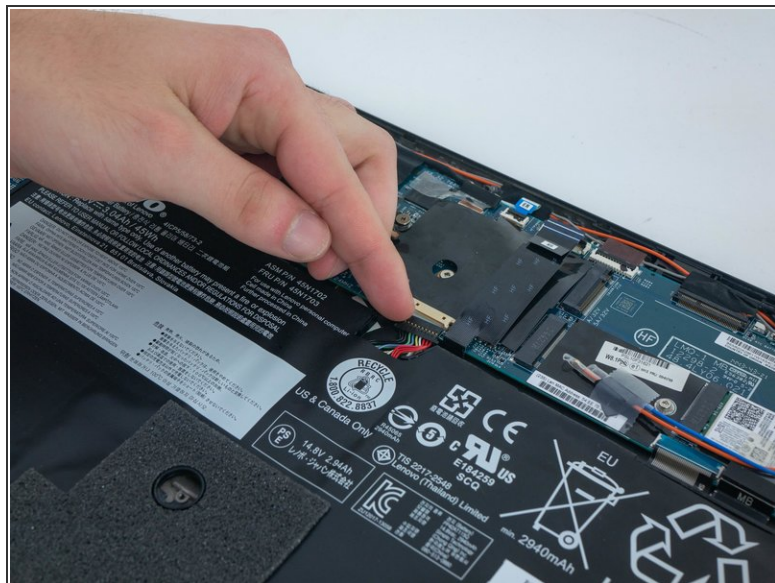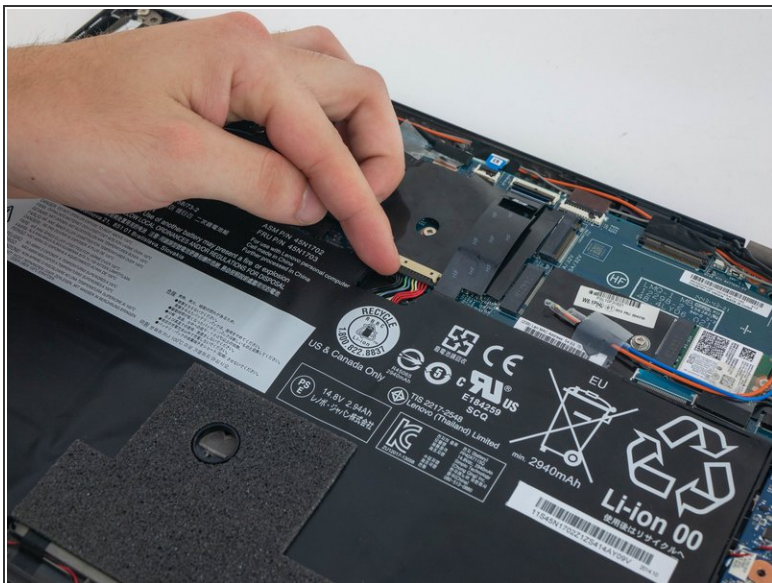

- Using your fingers, disconnect the battery from the motherboard.

Step 4

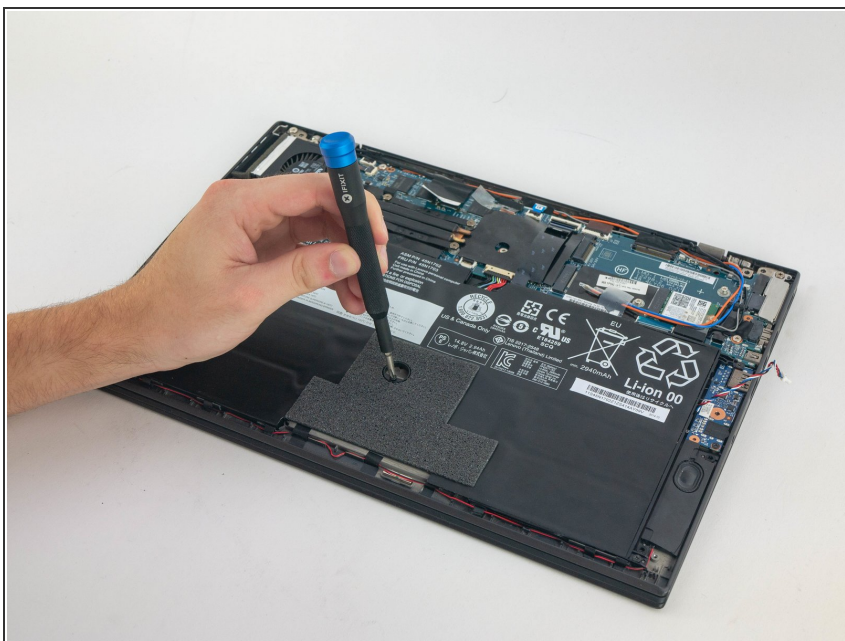

- Using a Phillips #0 screwdriver, unscrew the five 4.3mm screws attaching the battery to the computer.

Step 5



- Remove the battery by pulling it directly towards you.

To reassemble your device, follow these instructions in reverse order.