



# Microsoft Wireless Mobile Mouse 1850 Battery Replacement Replacement

Written By: Jed Calvert





---

⚙️ **PARTS:**

AA Battery (2)

---

### Step 1 — Turn the mouse onto its back




- You will want to use a clean surface to avoid damaging your mouse

### Step 2 — Remove the rear door



- Gently press the tab, and pull the door up and away from the body of the mouse

### Step 3 — Remove the battery

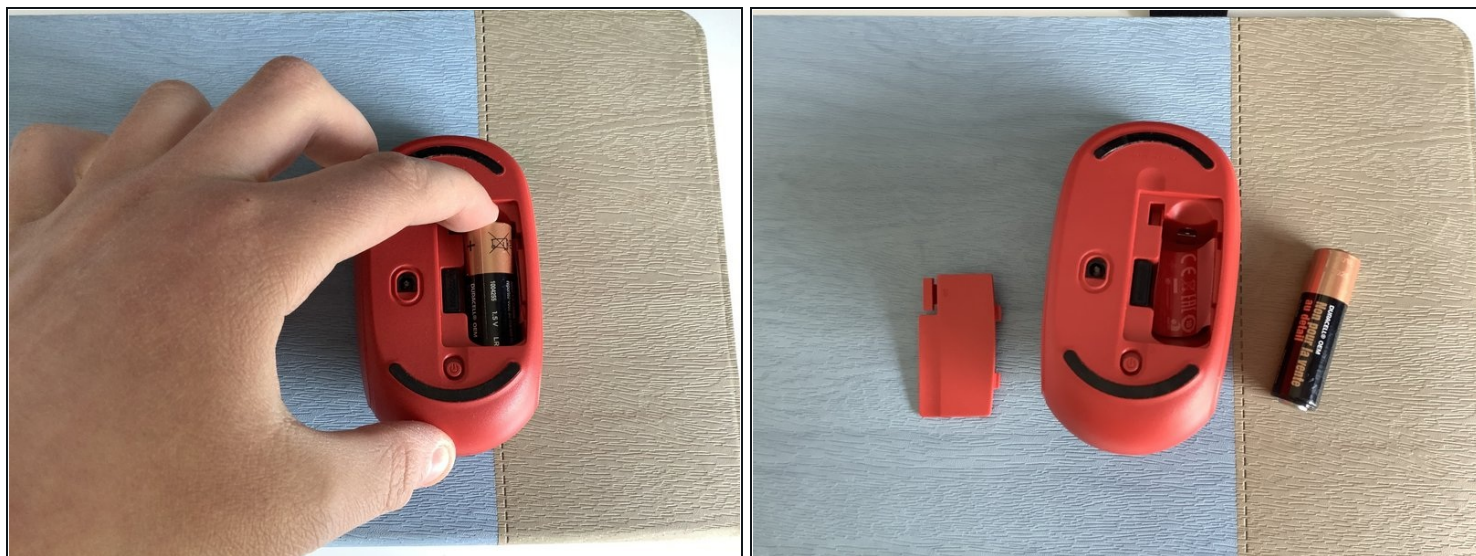

- Using your fingernail, pull up on the top of the battery and take it out of the slot.

### Step 4 — Add a new battery



- Slide the battery into the slot, and push down on it firmly. It will click into place.



## Step 5 — Replace the rear door



- Slide the rear door back into place, and push down on it. It will click into place.

---

Done!