



Nokia 3120 Speaker Replacement

This guide shows how to disassemble the phone and install a speaker.

Written By: Pierre Tong



INTRODUCTION

This guide will disassemble the phone's cover plate and key pad to reveal the interface in order to work on the phone's speaker. This guide requires a moderate amount of work as the small parts are tricky to remove.

TOOLS:

- [Probe and Pick Set](#) (1)
 - [Spudger](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Battery Installation




- Remove the back cover plate of the phone. To do this press down the lock as you slide the cover toward the bottom of the phone.

Step 2




- Once the back cover plate is removed, the battery should be exposed. Remove the battery by prying it out. This can be done with your finger-nail or a prying tool.

Step 3 — Face Plate

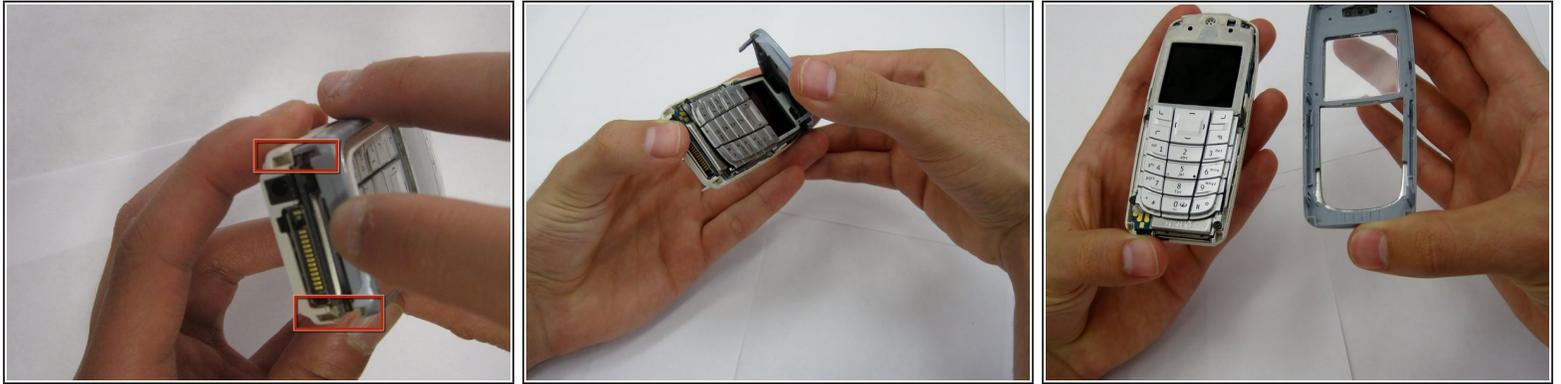

- Using your fingernails or another tool, pry the front face plate out along its edges and corners.

Step 4 — Speaker

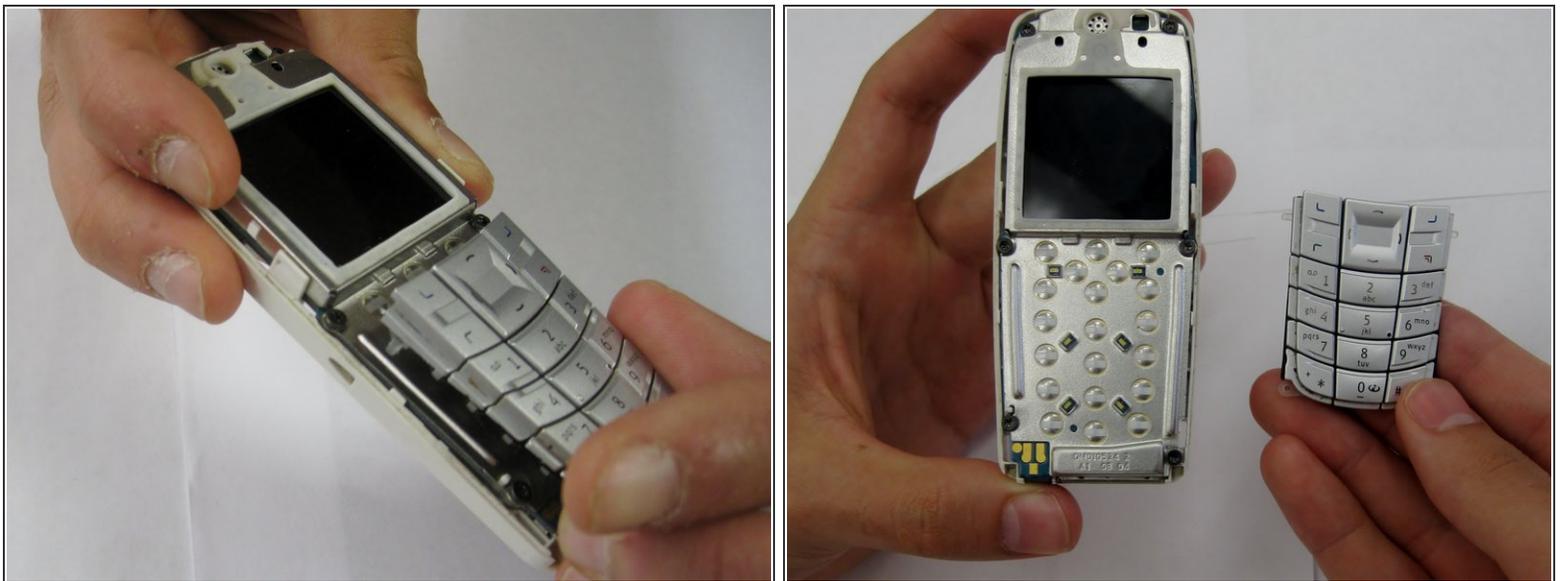


- Once the cover plate has been removed, the existing keypad should be easily removed.

Step 5



- Once the keypad has been removed, unscrew the 6 exposed screws on the front of the phone.

Step 6

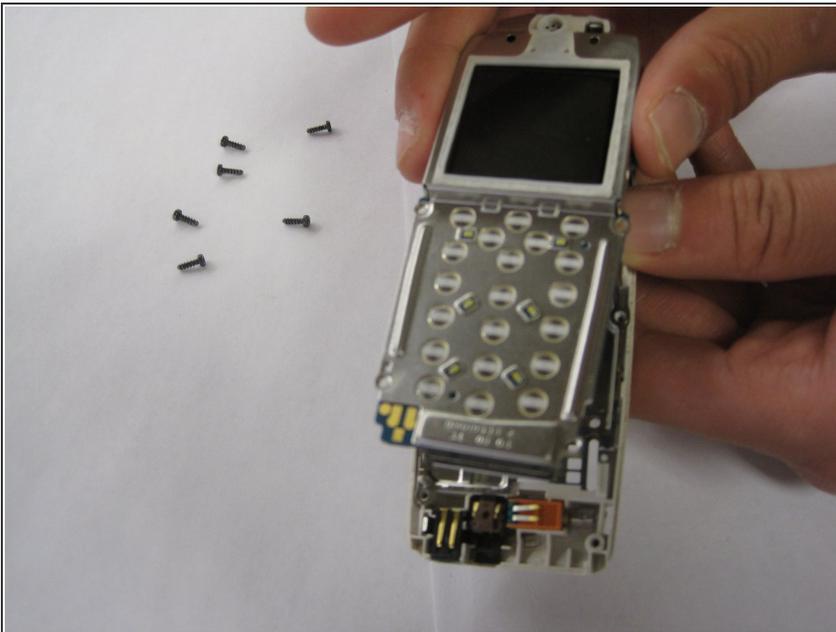

- Once all the screws have been removed, the front part of the phone should be removable from the rest of the phone.

Step 7



- To remove the speaker from the phone, take a pencil or sharp object and poke the speaker free from the removed front part of the phone.
- To install a new speaker, simply place a new speaker in the same location and put the phone back together.

To reassemble your device, follow these instructions in reverse order.