



Stagg Electro-Acoustic Guitar Strings Replacement

Replace the guitar strings on your Stagg Electro-Acoustic guitar using a string winder.

Written By: Imanuel Martinez



INTRODUCTION

This guide will show you the proper steps to change the strings on your Stagg Electro-Acoustic Guitar. For this guide you will need a guitar string winder and cutter, as well as your preferred brand of guitar string. This guide will only show how to replace one string but can be repeated to change all of them.



TOOLS:

- [Guitar string winder and cutter](#) (1)



PARTS:


- [Guitar Strings](#) (1)

Step 1 — Guitar Strings



- Place the string winder on the tuning key.

Step 2

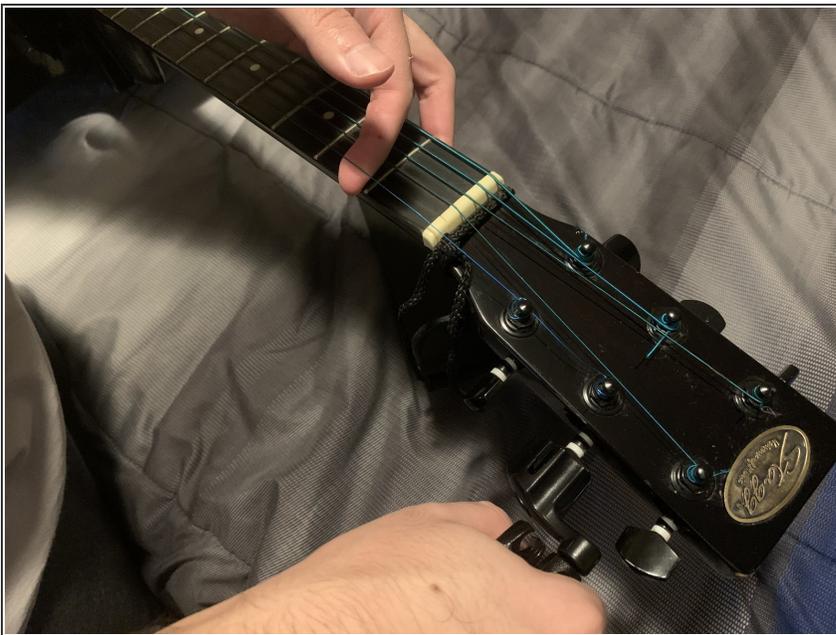


- Wind up the string winder counter-clockwise to loosen the strings.

Step 3




- With the string clipper, clip the string under the neck of the guitar.

Step 4

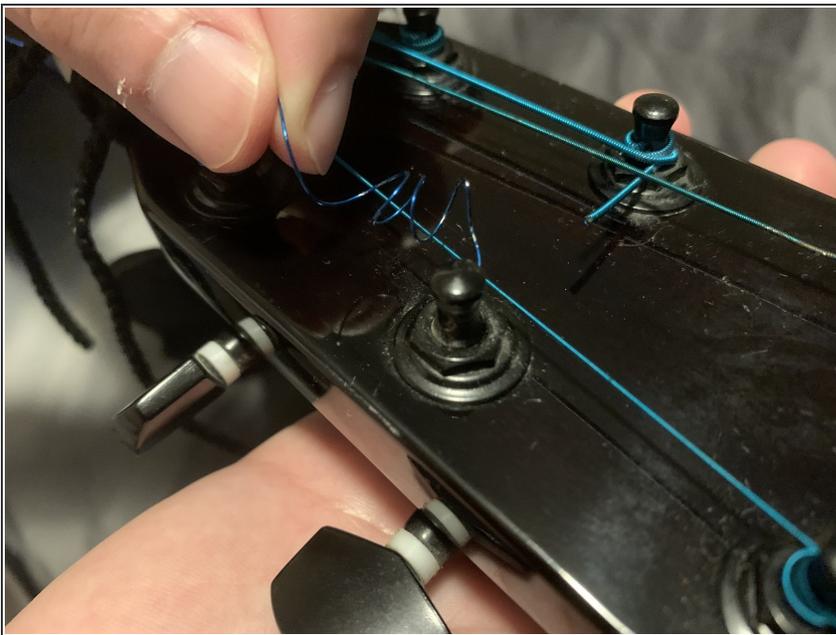

- Unwind the string from the machine head and remove it.

Step 5

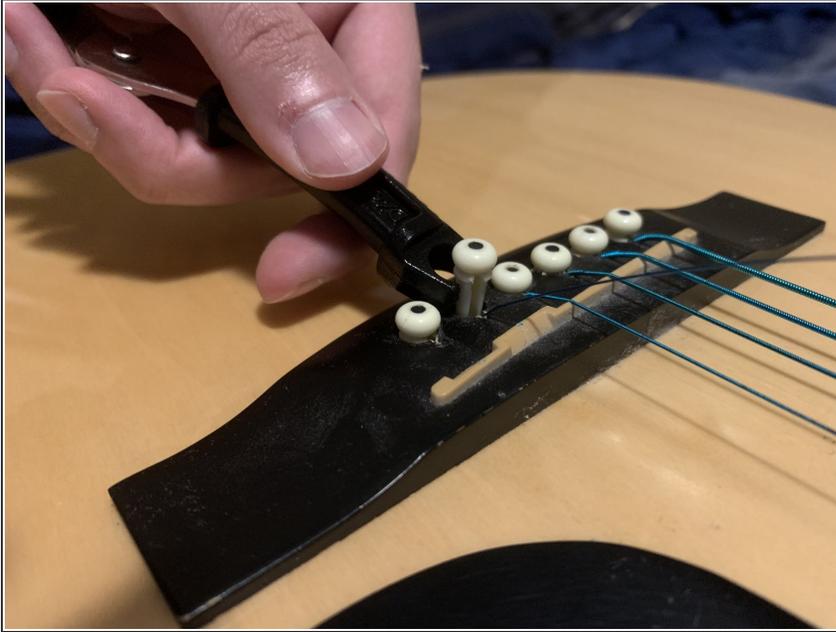


- With the string winder pop the string peg out of its hole.

Step 6



- Place the colored circle end of the string in the peg hole.

Step 7

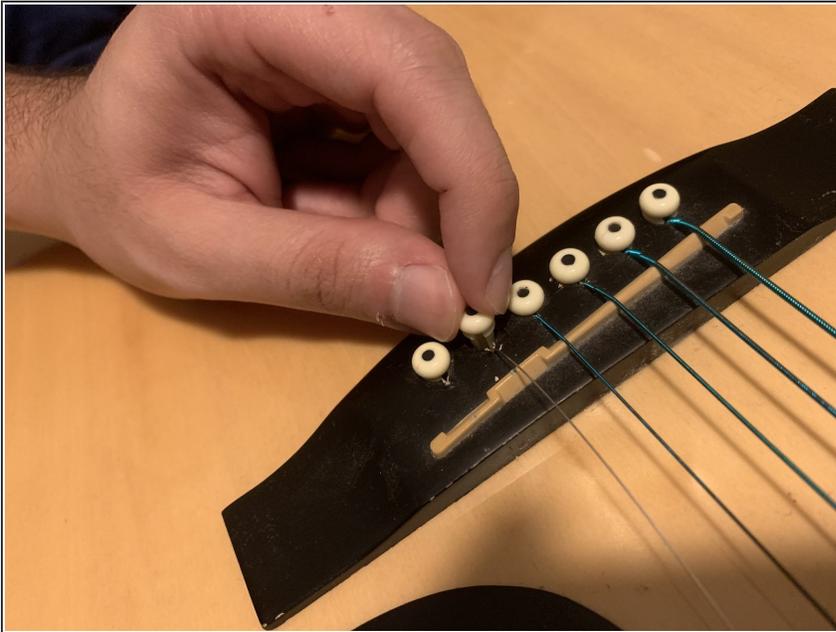

- Put the peg in the hole with the string.
- Pull the string while pushing the pin in.

Step 8



- Precut the other side of the string by one and a half machine heads.

Step 9



- Thread the string through the peg.
- Wind the string clockwise from top to bottom with the string winder.
- ⓘ Do not overlap the string when winding it.

Repeat steps for each string.