



# HTC Droid Eris Midframe Replacement

This guide will teach you how to...

Written By: Elizabeth Ofori



# INTRODUCTION

This guide will teach you how to replace/install the midframe of your HTC Droid Eris phone.

## TOOLS:

[Outil pour ouvrir iFixit](#) (1)

[Tournevis Torx T4](#) (1)

[Pincettes de précision](#) (1)


[Tournevis cruciforme #00](#) (1)

## Step 1 — Battery



- Place the device on a flat surface with the headphone outlet facing you.
- Place the tip of one of your fingers over the highlighted spot.
- ⓘ Next, pull the back cover upwards. If this feels difficult, use the spudger.

## Step 2

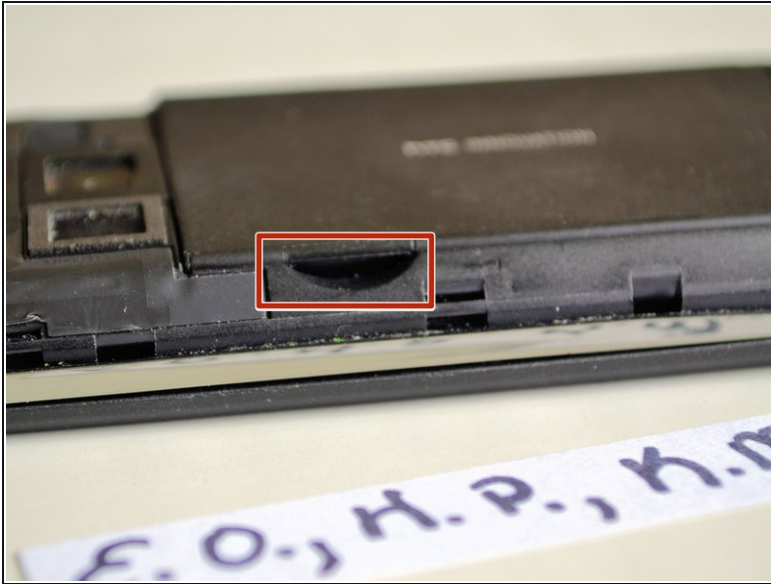

- Lay the device on a flat surface with the screen facing downward. Use one hand to hold the device in place.
  - With your free hand, stick one of your fingers in the marked gap. Pull gently upwards towards you.
- ⓘ If the battery is not coming out with this technique, use the plastic opening tool.

### Step 3 — Midframe



- At the lower right hand corner of the phone use one hand to hold the device in place and use your finger to push the micro SD card inwards until you hear a "click" sound and it pops out.
- If that method is difficult, use the plastic opening tool or spudger to push the micro SD card inwards and it will make a "click" sound and pop out.

### Step 4



- Use the T4 screwdriver to remove the three .05 mm screws from the back cover.

## Step 5



- Use the plastic opening tool and place it in the gap by the chrome bezels which are located on both sides of the device. Pull the plastic opening tool to pry plastic case apart. Start prying open the device and work around the seam of the phone in a clockwise direction.

**⚠ DON'T BREAK THE CLIPS** (you can damage the frame this way). Pry it gently until you hear it click and start to see it open.

- Remove the midframe.

To reassemble your device, follow these instructions in reverse order.