



# Compaq Presario CQ60 Hard Drive Replacement

Written By: Mike B





## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-





## Step 1 — Remove hard drive cover



- Loosen 2 phillips screws
- Lift and remove cover

## Step 2 — Remove drive caddy

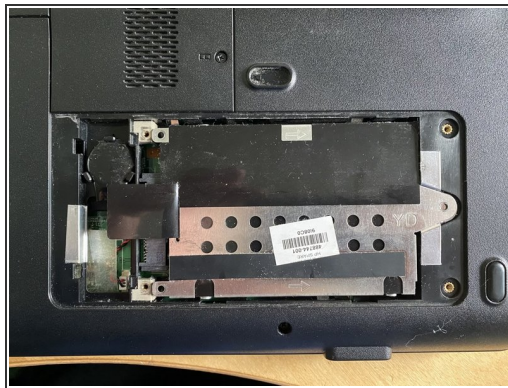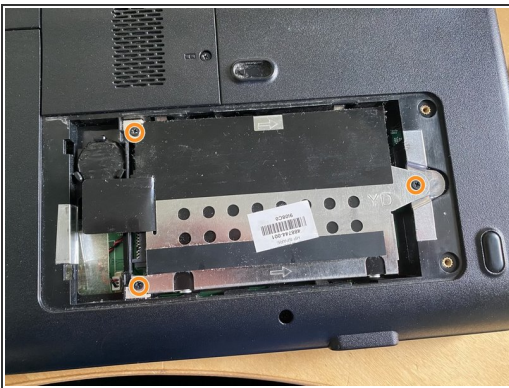

- Remove 3 M2.5x4mm screws
- Slide caddy forwards
- Lift tab to remove caddy

### Step 3



- Remove 4 phillips screws to remove drive from caddy

To reassemble your device, follow these instructions in reverse order.