



# How to Fix a Wobbly Wolf Warriors Gaming Chair Leg Rest

Fix a wobbly Wolf Warriors gaming chair by making minor adjustments to the gaming chair.

Written By: Anoop Shahi



## INTRODUCTION

This Fast Fix guide is a step by step instruction manual on how to repair an insecure leg rest on a Wolf Warriors gaming chair. With excessive use, leg rests may become wobbly and unstable. This guide outlines how to fix a Wolf Warriors gaming chair leg rest for ultimate comfort.



### TOOLS:

- [3mm Hex Key](#) (1)
-

## Step 1 — How to Fix a Wobbly Wolf Warriors Gaming Chair Leg Rest



- Lean back the chair and extend the leg rest completely.

## Step 2



- Lay the chair on its side on the ground to allow easier access to the required hex screws and blocker screw.



### Step 3



- Remove the 3 mm blocker screw using a 3mm Allen wrench/hex key.

### Step 4




- Slide the leg rest out of the base.

## Step 5



- Place the leg rest on a flat surface.
- Wipe clean the sliding legs using a clean cloth to ensure the sliding mechanism has no issues.

## Step 6

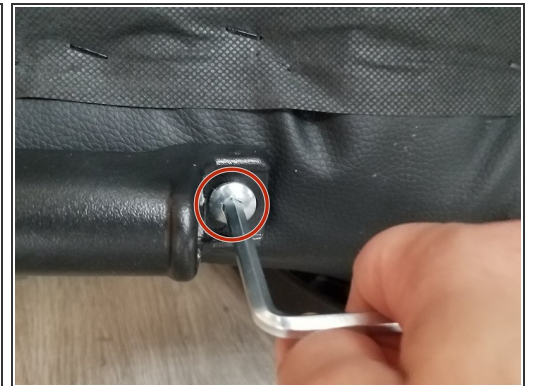

- Tighten the four 25 mm hex screws located at the bottom of the chair using the 3 mm Allen key.

**⚠ Be careful not to over tighten the 25 mm hex screws. This can cause the screw to become free from the base.**



## Step 7



- Slide the leg rest back into the base.

## Step 8



- Screw the 3 mm blocker screw back in.
- Flip your chair back up and enjoy your sturdy leg rest!

To reassemble your device, follow these instructions in reverse order.