



# How to Replace a Nequare Cordless Vacuum S182 Filter

If your vacuum cleaner no longer cleans as good...

Written By: Oghenefejiro Egede



## INTRODUCTION

If your vacuum cleaner no longer cleans as good as it used to, this might be an indication that the filter has been clogged and it is too dirty to keep being effective. This guide covers how to take out the filter in the Nequare Cordless Vacuum S182 and replace it. The steps are accompanied by photos to guide you through the process.

## Step 1 — Filter



- Locate the black button to release the white motor unit from the rest of the vacuum cleaner.

## Step 2



- Hold down the black button to remove the white motor unit above and gently pull the motor unit upwards.

### Step 3



- Press the release button at the side of the dust canister to dispose of the debris.
- ⓘ Be sure to hold the the canister over a garbage can to avoid a spill.


### Step 4



- After emptying the debris, hold down the black button, then twist and pull the canister out.


**Step 5**

- Take the filter out and dispose of it.

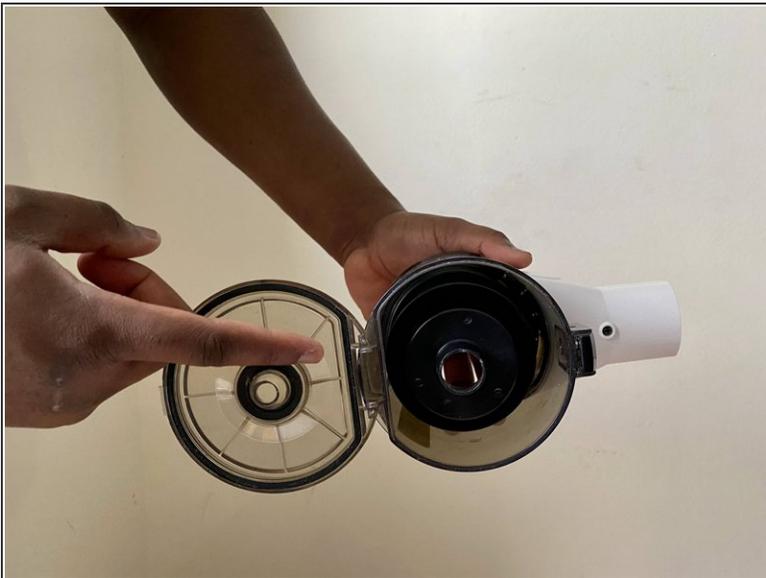**Step 6**

- Remove the black part by gently pushing from inside of the canister.

## Step 7

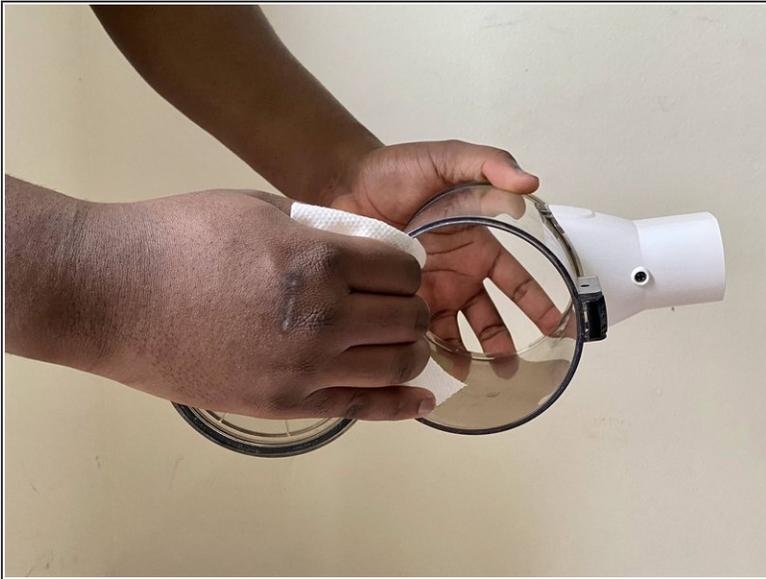

- Clean both the canister and the black part either by rinsing it out or using a wash cloth.

## Step 8



- Put the black part back into the canister and put in the new filter.

To reassemble your device, follow these instructions in reverse order.