


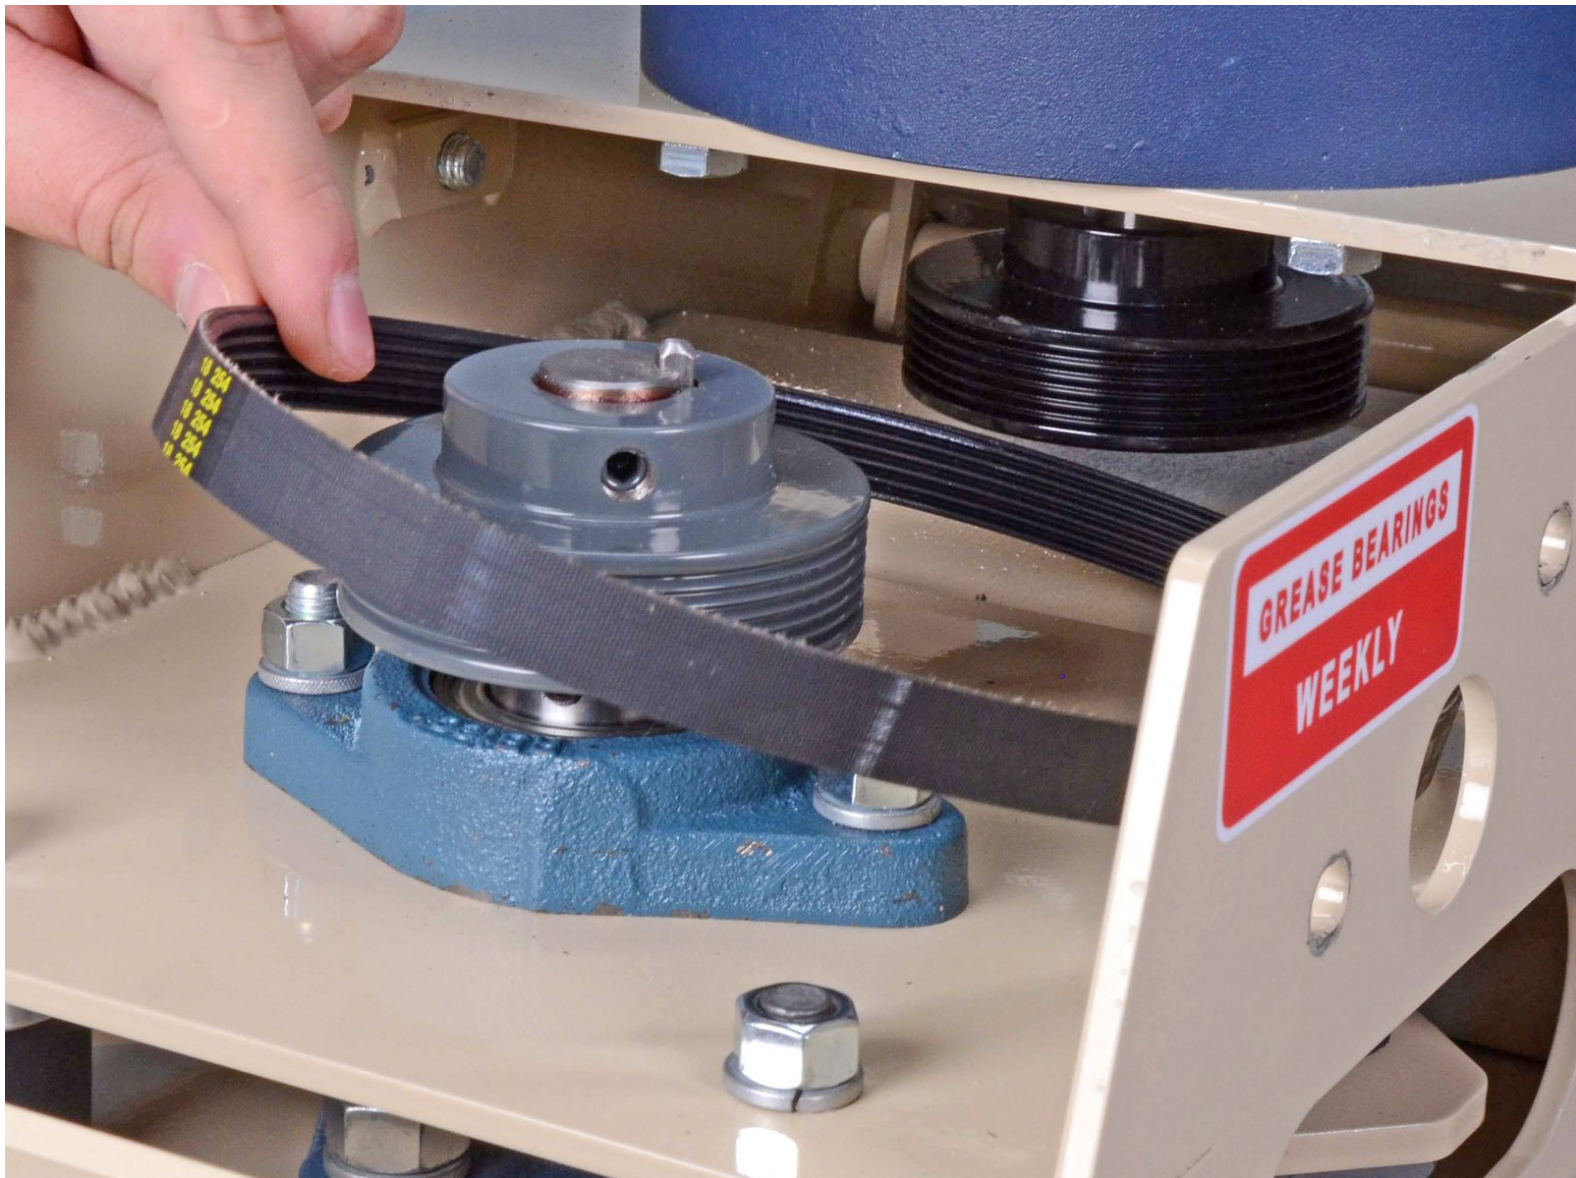

EDCO Floor Stripper TS8 .75L (2017) Belt Replacement

How to replace the belt on an EDCO Floor Stripper TS8 .75L (2017).

Written By: Robert Boyd



INTRODUCTION

Follow this guide to replace the belt on an EDCO Floor Stripper TS8 .75L (2017).



TOOLS:


- [1/2" Socket](#) (1)
- [9/16" socket](#) (1)
- [Socket Wrench](#) (1)



PARTS:

- [Edco Belt 220J-6 28113](#) (1)


Step 1 — Safety precautions

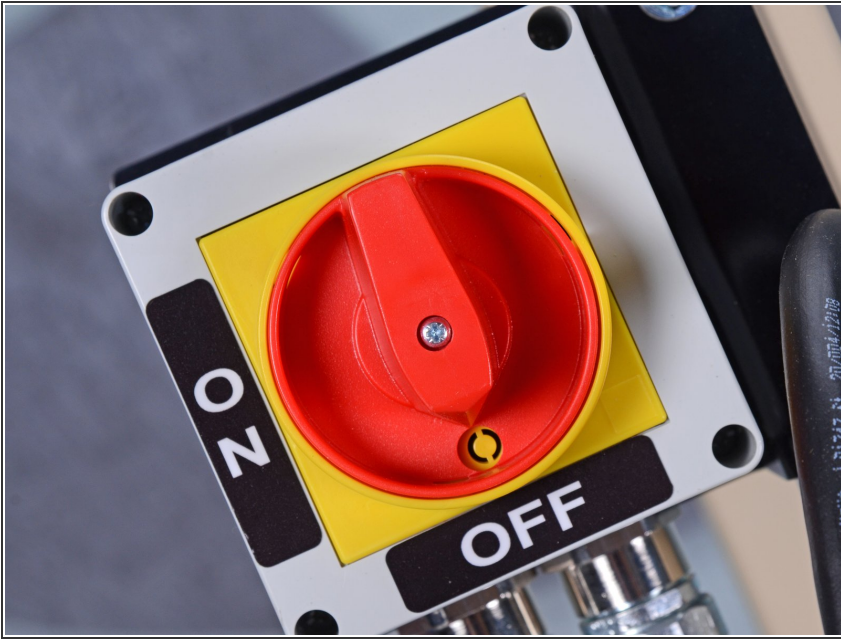

⚠ Before you begin, ensure the device is powered down and cool to the touch.

- Ensure the machine is unplugged.
- Turn the power switch counterclockwise into the **OFF** position.

Step 2 — Remove the hood bolts

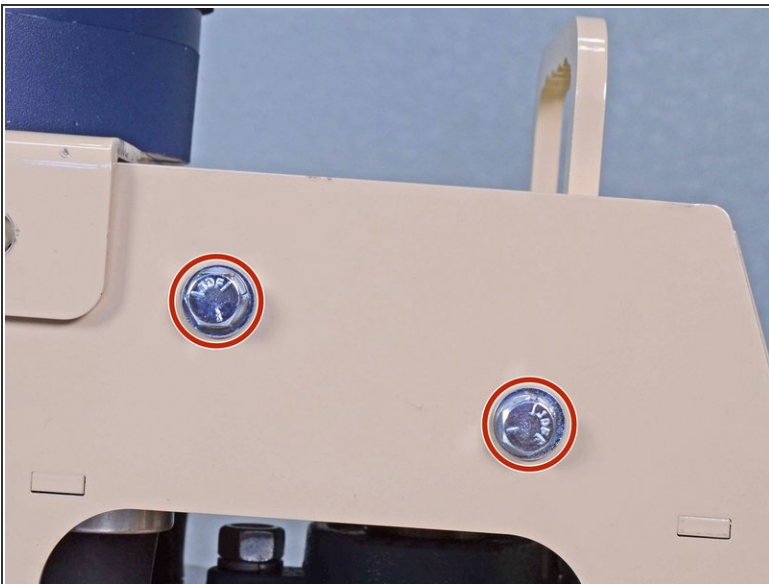

- Use a 1/2 inch socket to remove the four bolts securing the hood to the frame, two on each side.
- ☑ During reassembly, ensure each bolt is reinstalled with both its [flat washer and lock washer](#).

Step 3 — Remove the hood



- Pull the hood away from the device to remove it.

Step 4 — Loosen the motor mount bolts




- Use a 9/16 inch socket to loosen, but not remove, the four bolts securing the motor mount to the frame, two on each side.

Step 5 — Slide motor mount forward





- Slide the motor towards the front of the device to release tension in the belt."
- ☑ Reassembly tip: [Tilt the device](#) onto its handles to use the weight of the motor to tension the belt, then tighten down the bolts.

Step 6 — Remove the belt

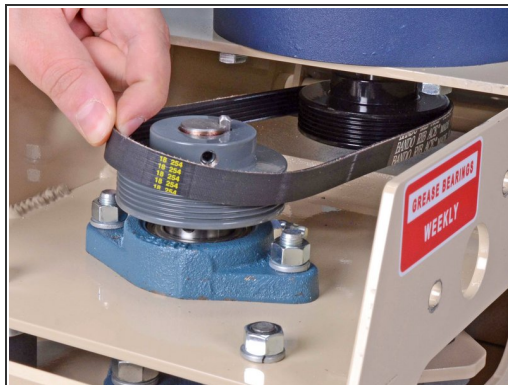

- Remove the belt from the cam shaft pulley.

Step 7

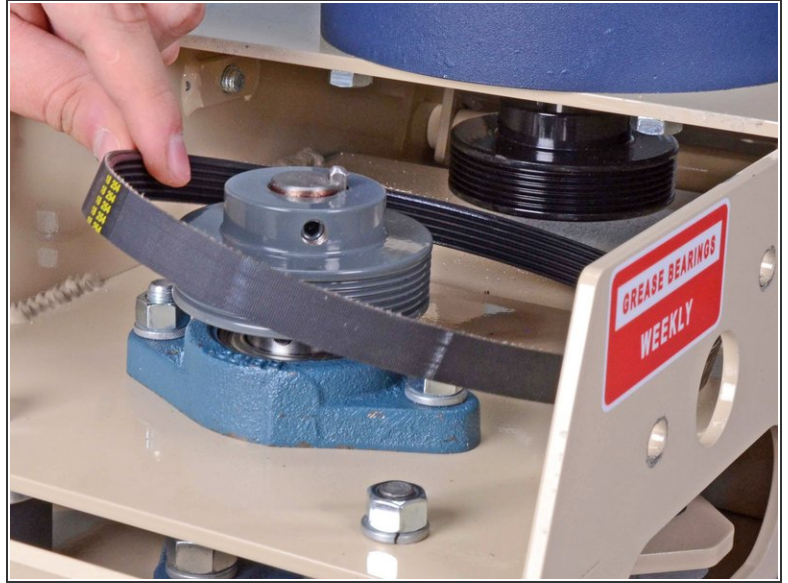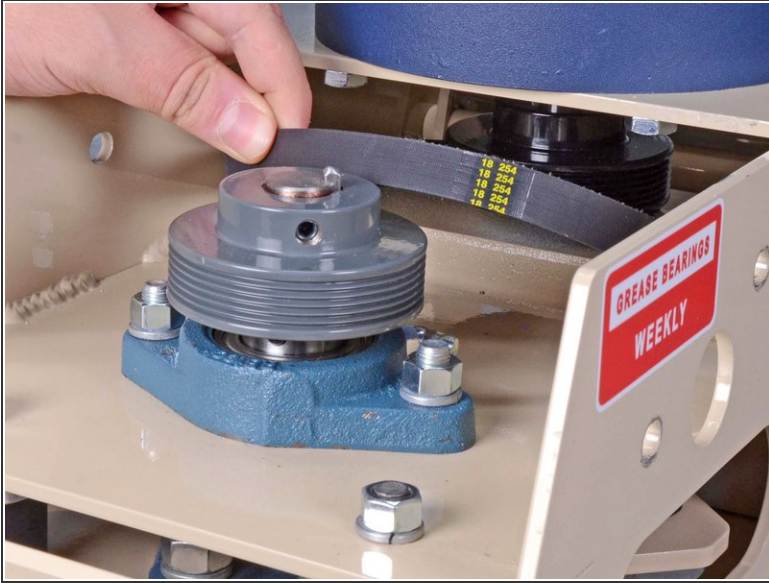

- Disengage the belt from the motor pulley.
- Remove the belt.

To reassemble your device, follow these instructions in reverse order.