



# Nintendo 3DS Game Card Teardown/How to Open

Use this guide to open a Nintendo 3DS game and get to the board.

Written By: Mr. L





## TOOLS:

- [iFixit Opening Tool](#) (1)
-

## Step 1 — Locate the Tab on the Game Card




- Find the tab on the left side of the cartridge.

## Step 2 — Pry open the Cartridge



- Use your fingernails to pop open the top from the bottom
- BE CAREFUL WHILE DOING THIS. If you aren't careful, the game case may crack and or not go back together.

### Step 3 — Pry around the rest of the Game Card with an Opening Tool

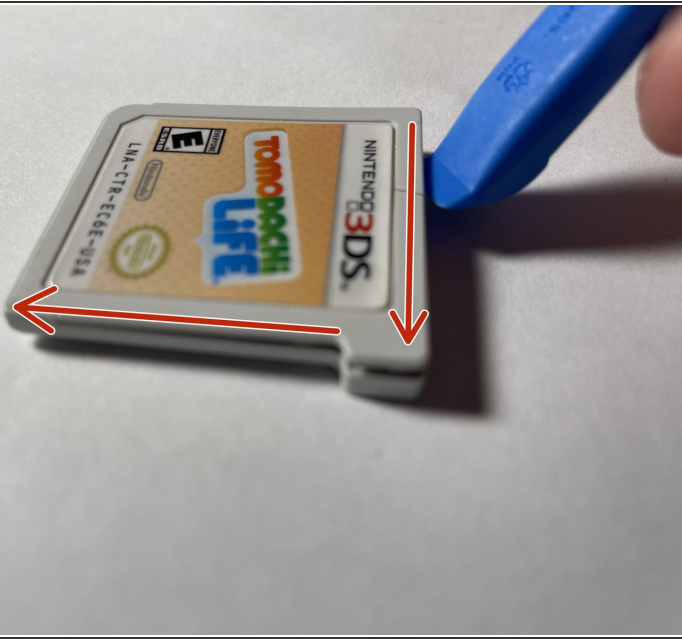

- Go around all parts of the cartridge and do not crack the plastic.

### Step 4 — Remove the top of the Cartridge



- Remove the top of the Game Card with your fingers.