



Logitech Webcam Pro 9000 Microphone Replacement

There are two parts to the microphone: the...

Written By: nieko




INTRODUCTION

There are two parts to the microphone: the cover and the microphone and its casing. It takes about the same amount of time to remove the cover and the microphone.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front and Back Cover


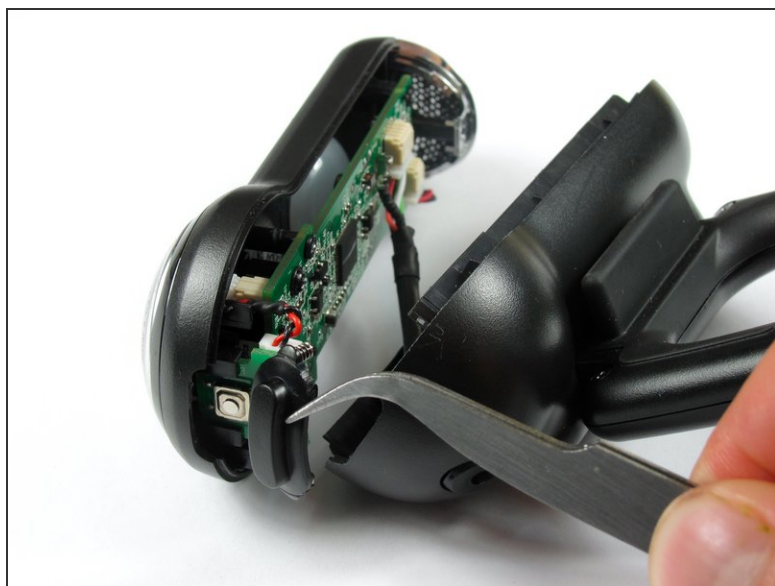


- Remove the two 8 mm Phillips #0 screws on the back cover.

⚠ The motherboard connects the two covers together. DO NOT separate the two yet.

i There is a button that loosens as the Phillips screws are removed. Don't be alarmed if it falls out.



Step 2

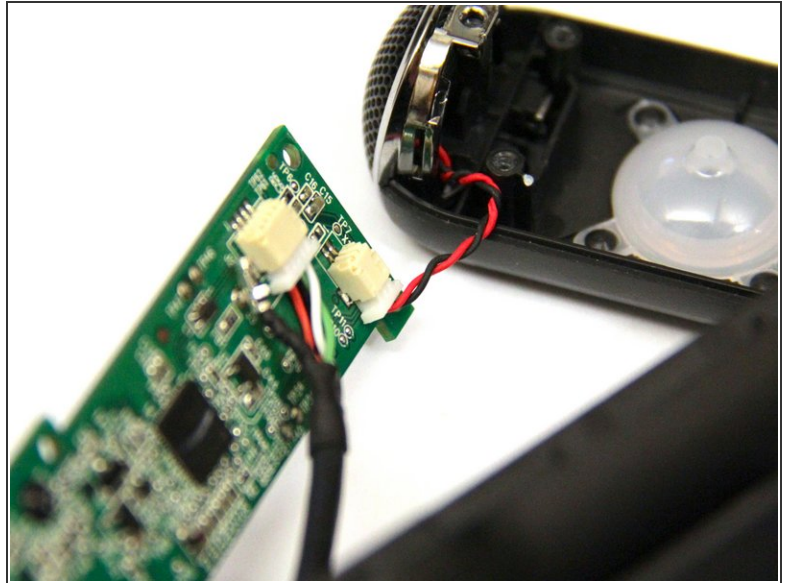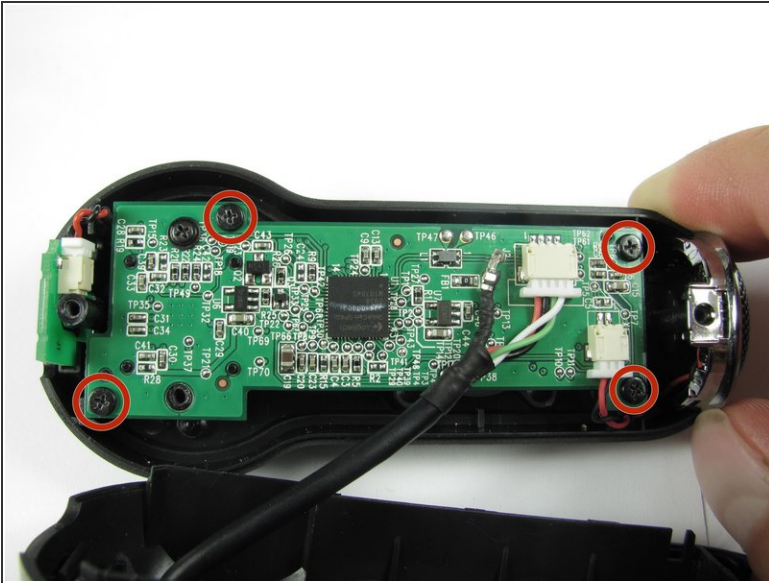

- Remove the four 6mm Phillips #0 screws connecting the motherboard and front cover.


⚠ DO NOT detach the wire connecting the motherboard to the front cover.

Step 3 — Microphone Connection

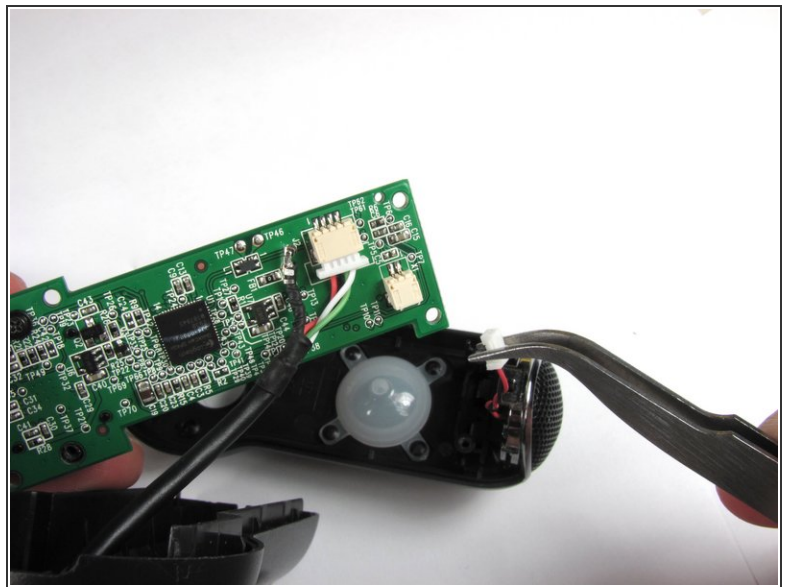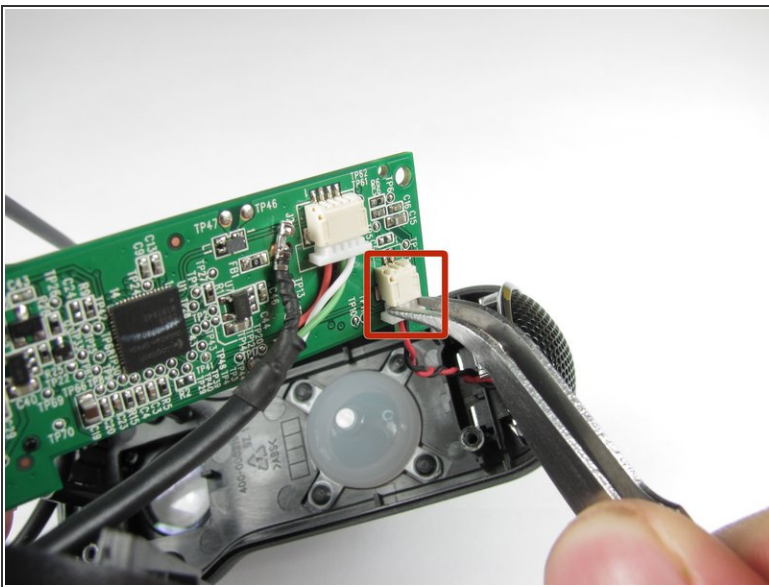


- Grasp the white wire connector between the tabs and the socket.
- Wiggle the connector back and forth to remove the front cover from the motherboard.

Step 4 — Microphone

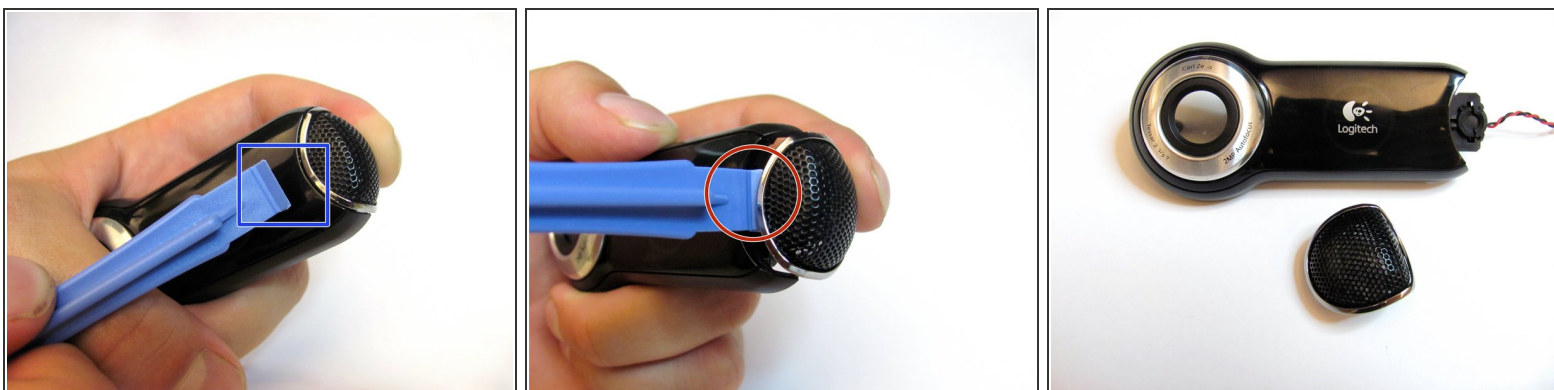

- Wedge the plastic opening tool into the crack between the plastic cover and microphone guard.
 - Use the wedge to separate the two pieces.
- i* It might take more force than expected.

Step 5

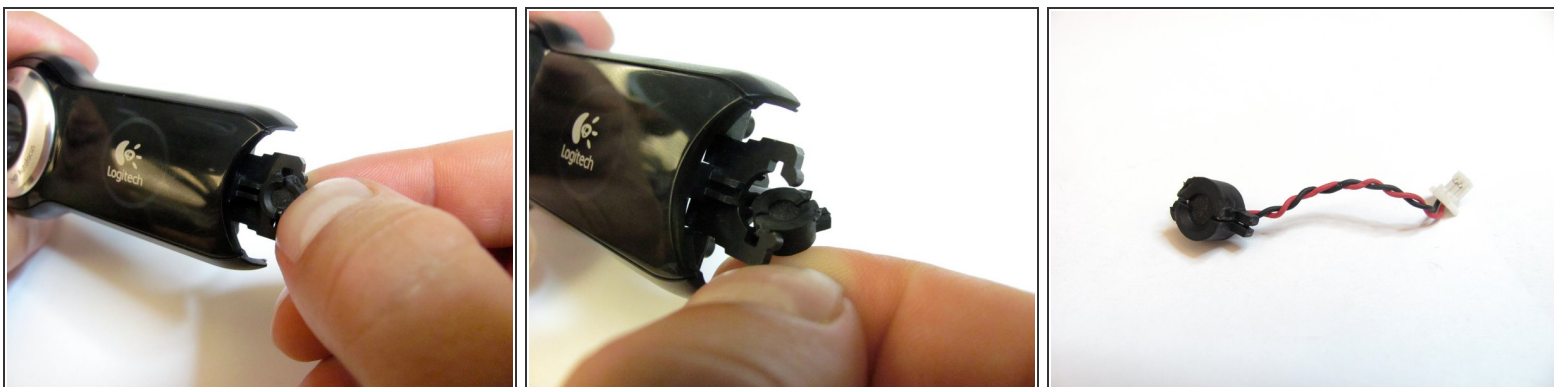

- Twist the rubber casing and remove it from the plastic cover.

To reassemble your device, follow these instructions in reverse order.