

# Asus X53BR RAM and WiFi module Replacement


Written By: fogalit





Phillips #00 Screwdriver (1)

### Step 1 — RAM and WiFi module

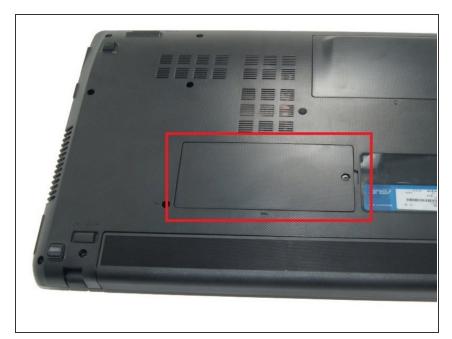

Locate the memory compartment.

# Step 2




Remove screw

### Step 3



Open cover.

# Step 4

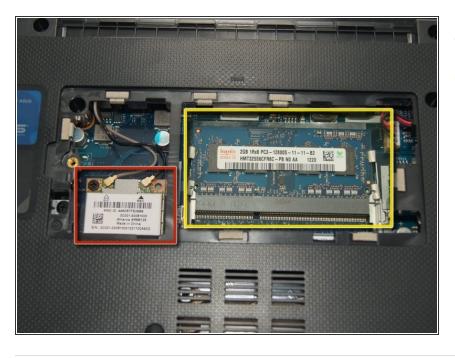

- Wifi module
- RAM

To reassemble your device, follow these instructions in reverse order.