




HP Compaq 6730b Keyboard Replacement

This will show how to replace or remove the keyboard to replace parts on this laptop.

Written By: oldturkey03

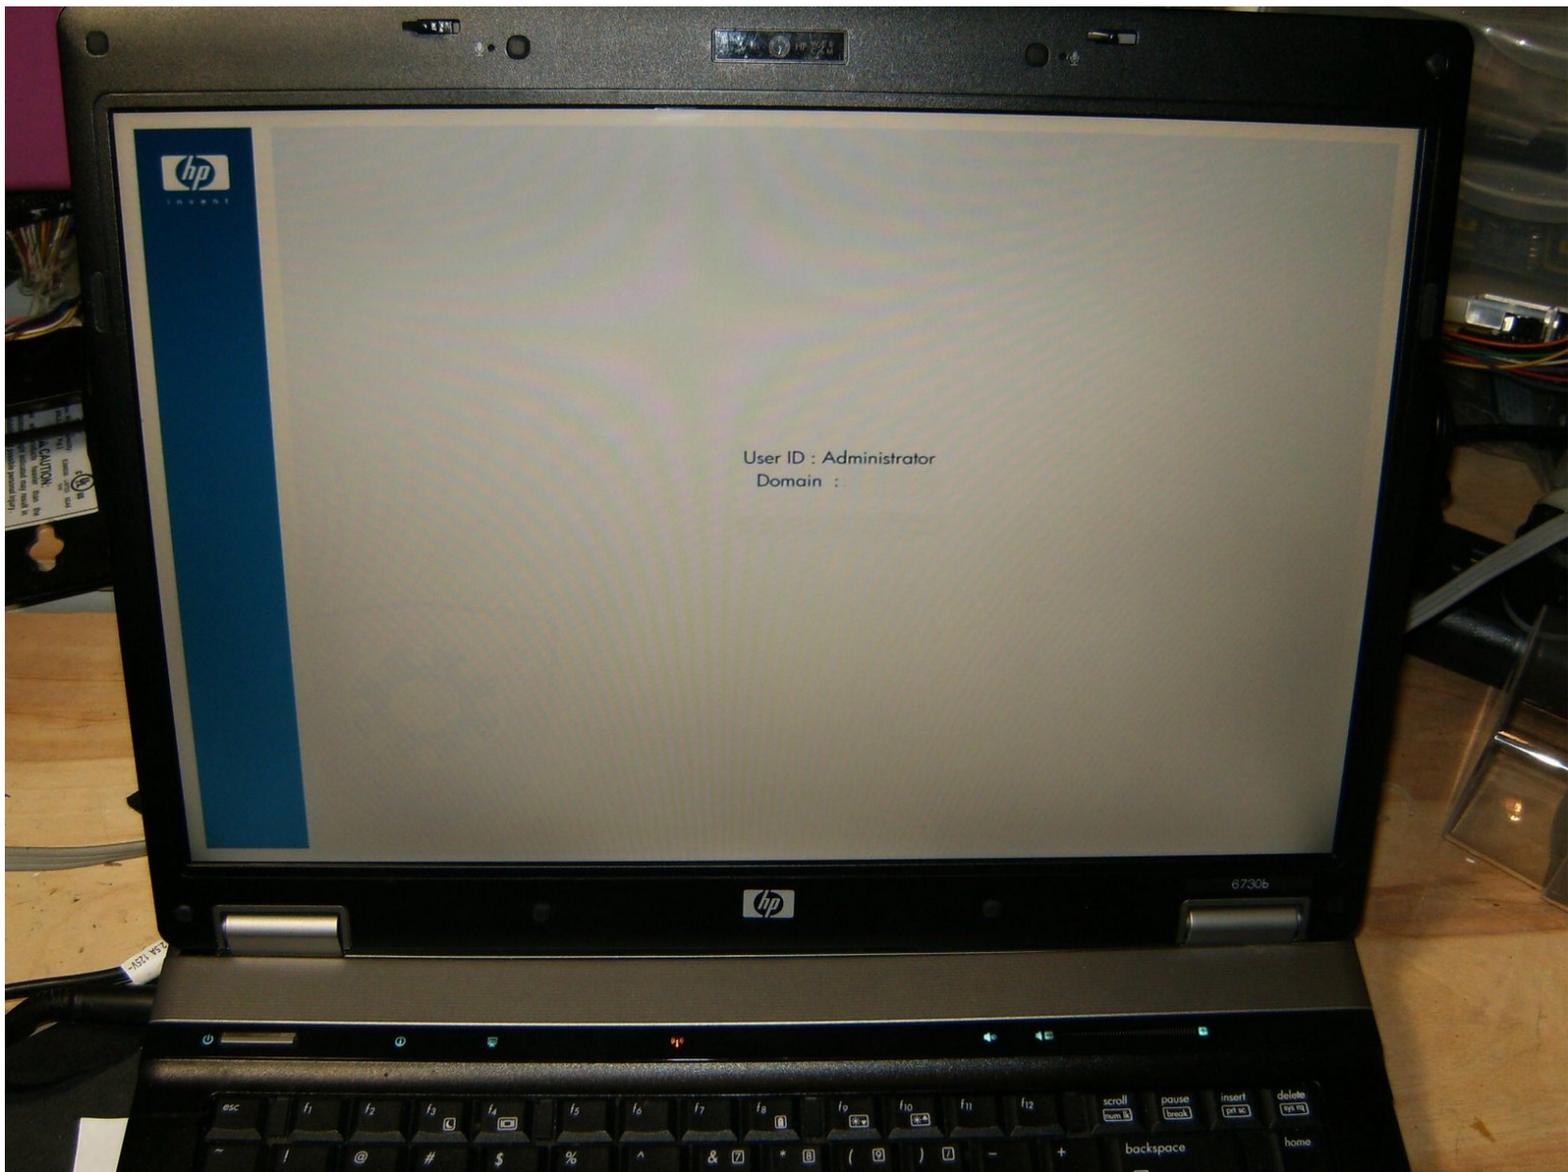

INTRODUCTION

This is a straight forward removal of the keyboard. I needed to remove it to replace the LCD.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Keyboard




- Shut down the computer. Disconnect all external devices connected to the computer. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
- Close the screen and turn the computer over. Loosen the three Phillips 2.5×9.0 captive screws that secure the keyboard to the computer. They are secured by a spring clip at the back, so they will not be easily removed. All that is required is to loosen those.
- Turn the computer display-side up, with the front toward you. Open the computer as far as possible. There are four retention tabs that hold the keyboard down.

Step 2



- Use a small screwdriver, or other instrument, to slide the four tabs in a downward direction toward the palmrest.
- Gently lift the keyboard up from the display side,
- and tilt it toward the front of the computer. Do not lift it up too fast or too high, the keyboard ribbon cable is still connected

Step 3

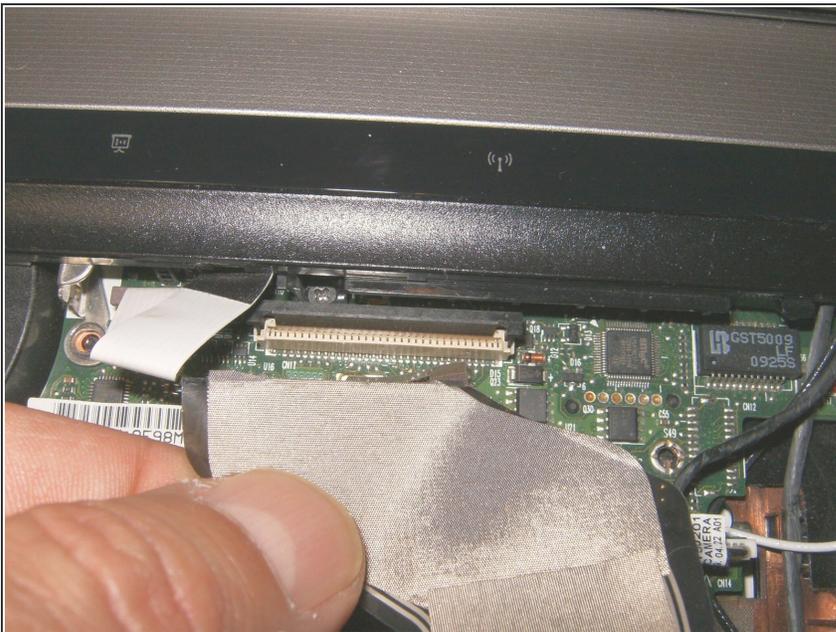

- Here is the keyboard ribbon cable seated in the zero insertion force (Zif) connector. The keyboard is now separated and can now be removed.

To reassemble your device, follow these instructions in reverse order.