




Nokia 6560 Keyboard Replacement

Written By: Tim Bergmann

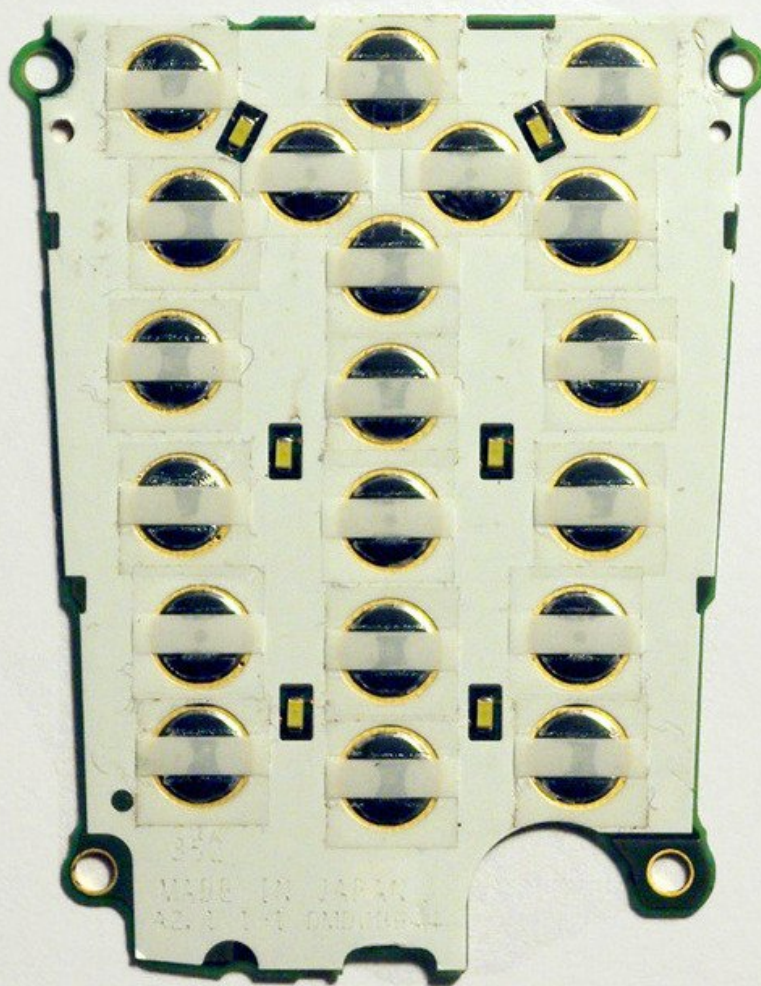

INTRODUCTION

Use this guide to replace the bad keyboard of your cell phone.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the back cover of your cell phone by pushing the small slider with your fingernail towards the top of the phone.
- Lift off your cell phone's back cover.

Step 2




- Use your index finger to first push down and then lift up the battery as shown.
- Remove the battery from your cell phone.

Step 3 — Keypad




- Open the front cover of your cell phone with the plastic opening tool or finger nail.
- Lift the cover upwards, starting from the bottom below the keypad.

Step 4

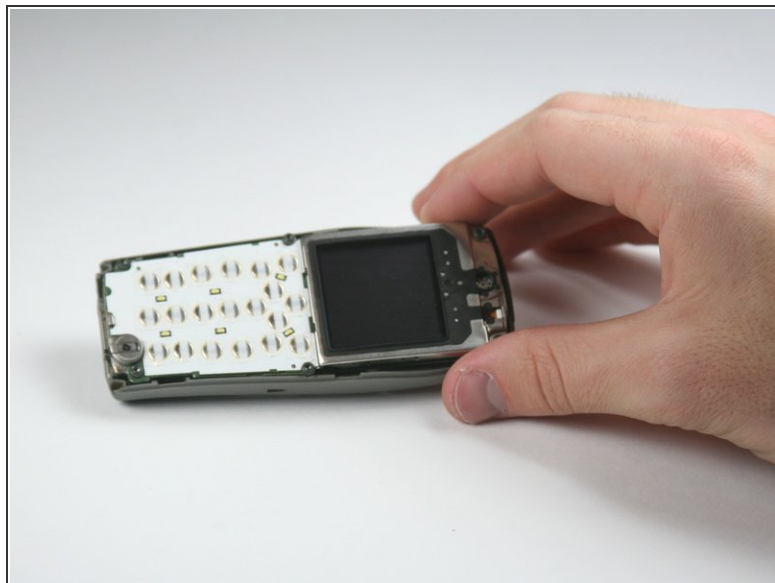

- Lift the keypad off of the keyboard as it is not attached to the phone anymore.
- ⚠ If you want to clean your keyboard do not use chemical cleaners or too much water, instead, use a damp cloth.
- ℹ It may be tricky to get the keypad in the right position while closing the front cover for the reassembly. Ensure they are aligned properly before closing the front cover!


Step 5 — Keyboard

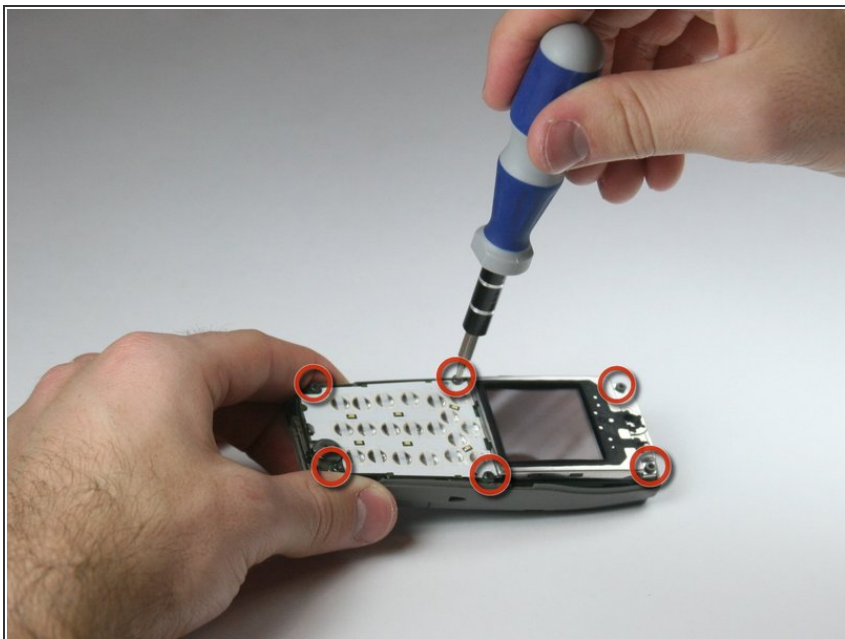

- Unscrew the six T6 torx screws which attach the frame to the cell phone case.


⚠ Be careful not to scratch your display with the screw driver.

Step 6

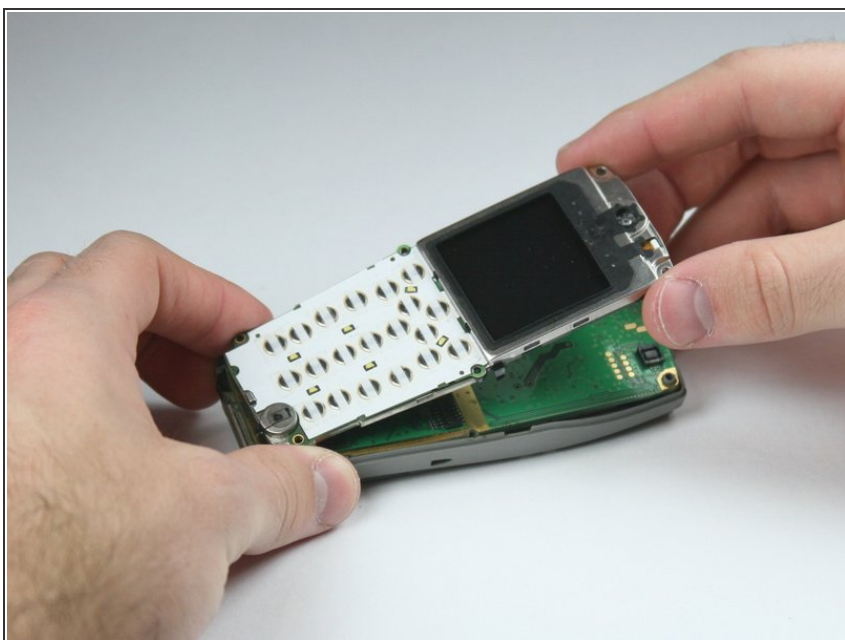

- Lift the frame off of your cell phone.

Step 7

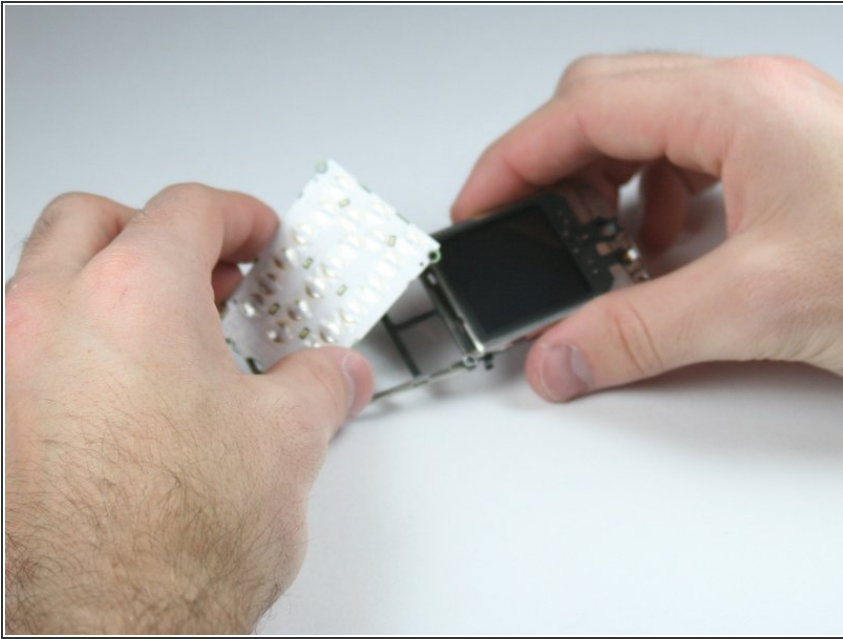

- Lift the keyboard out of the plastic frame.

To reassemble your device, follow these instructions in reverse order.