


# iPhone 5s Vibrator Replacement

Prerequisite to remove the vibrator.

Written By: Sam Goldheart

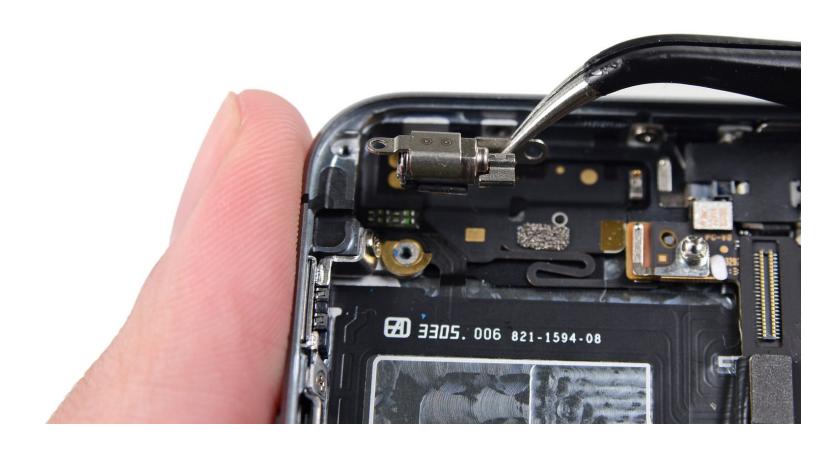

## **INTRODUCTION**


Prerequisite to remove the vibrator.



## **TOOLS:**


- Tweezers (1)
- Phillips #000 Screwdriver (1)

## Step 1 — Vibrator

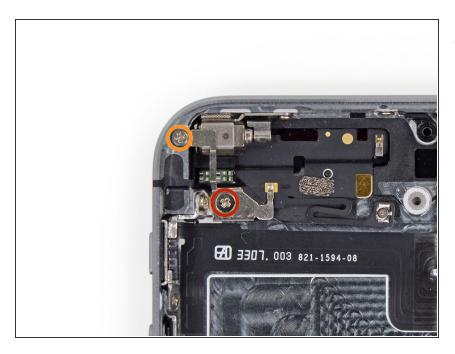


- Remove the following Phillips #000 screws from the vibrator bracket:
  - One 1.7 mm screw
  - One 2.5 mm screw

## Step 2

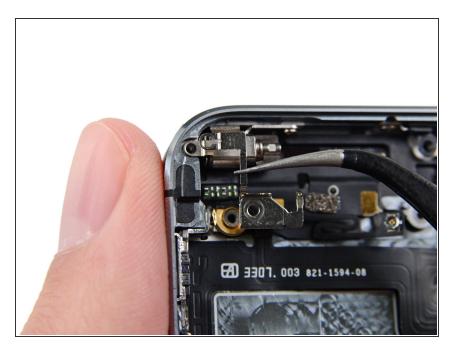


 With a set of tweezers, remove the vibrator bracket.

#### Step 3

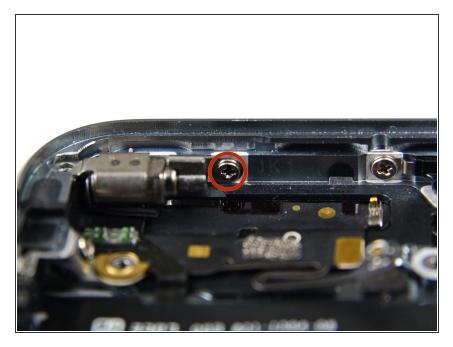

 Remove the 1.7 mm Phillips #000 screw securing the vibrator to the rear case.

#### Step 4

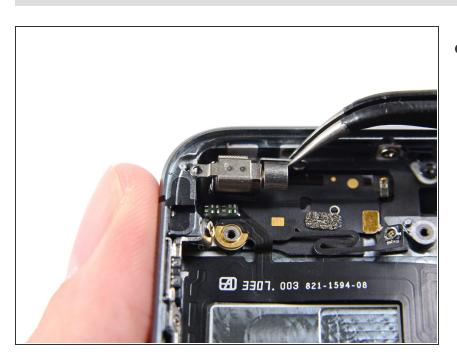

 Use a set of tweezers to remove the vibrator from the rear case.

To reassemble your device, follow these instructions in reverse order.