



PowerBook G4 Aluminum 15" 1-1.5 GHz Airport Extreme Card Replacement

Written By: iRobot



INTRODUCTION

Install an Airport Extreme 802.11g card internally.



TOOLS:

- [Coin](#) (1)



PARTS:

- [Airport Extreme Card](#) (1)

Step 1 — Battery




- Use a coin to turn the battery locking screw 90 degrees clockwise.
- Lift the battery out of the computer.

Step 2 — Airport Extreme Card



- Flip down the door on the right side of the battery compartment.

Step 3

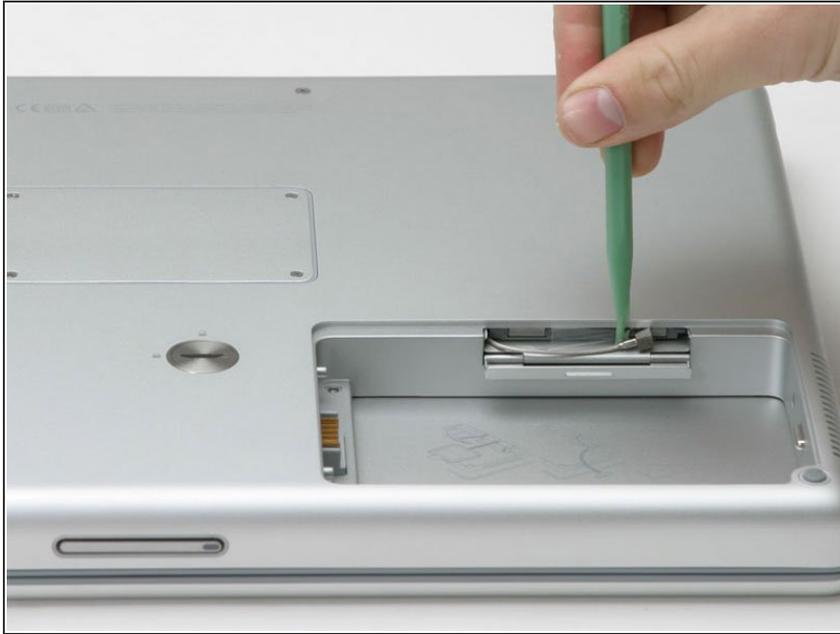

- Use a spudger or flathead screwdriver to disconnect the Airport antenna from the card.

Step 4



- Grasp the plastic tab and pull the card out all the way.

To reassemble your device, follow these instructions in reverse order.