




# Imation Superdisk USB Drive Daughter Board Replacement

This guide is to help you step by step on how...

Written By: Darlena

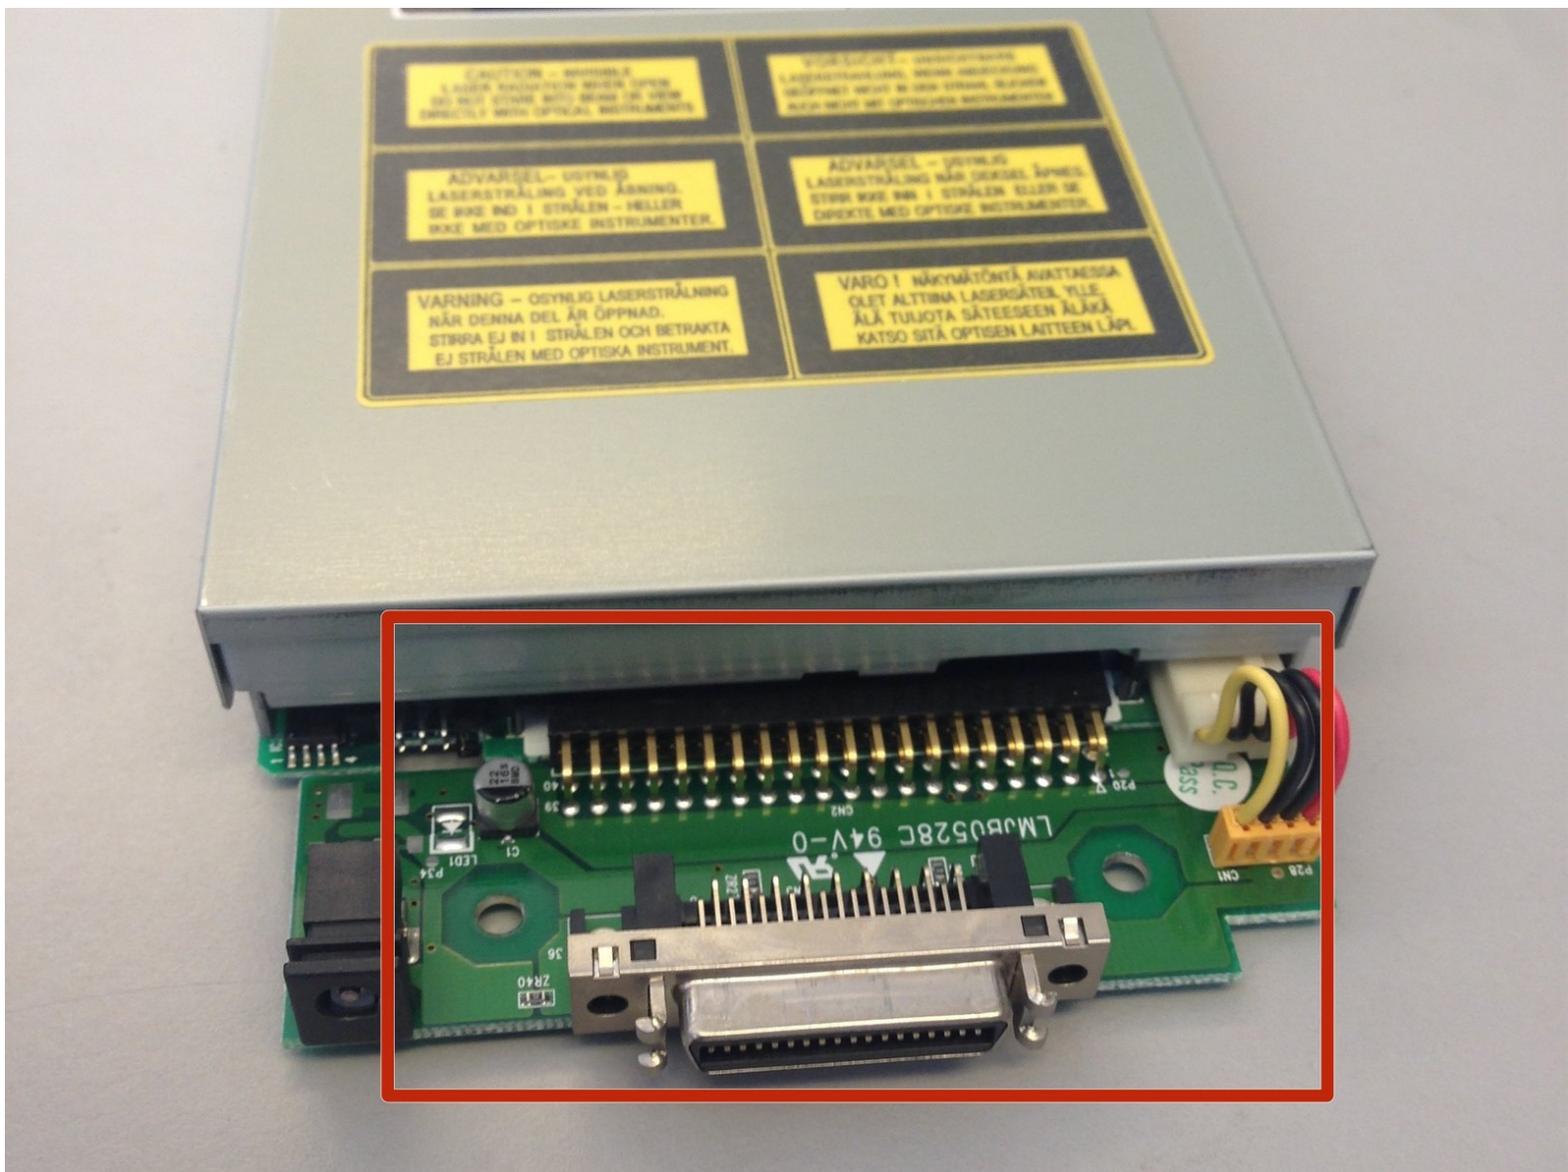

---

## INTRODUCTION

This guide is to help you step by step on how to replace the daughter board to the Imation Supserdisk USB drive.

---

### TOOLS:


- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Plastic Housing



- Flip the device over so the bottom is facing up.
- You will know it is the bottom because there will be six silver screws visible.

## Step 2

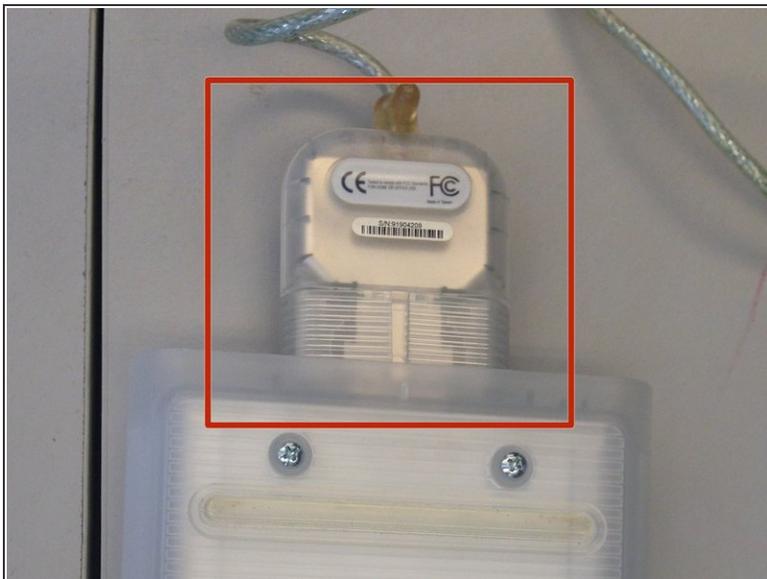

- Remove the USB converter device by gently pulling it out.


**⚠ Do not pull the converter device out by the cord.**

### Step 3




- Remove the six silver screws using a small Phillips head screwdriver.

### Step 4

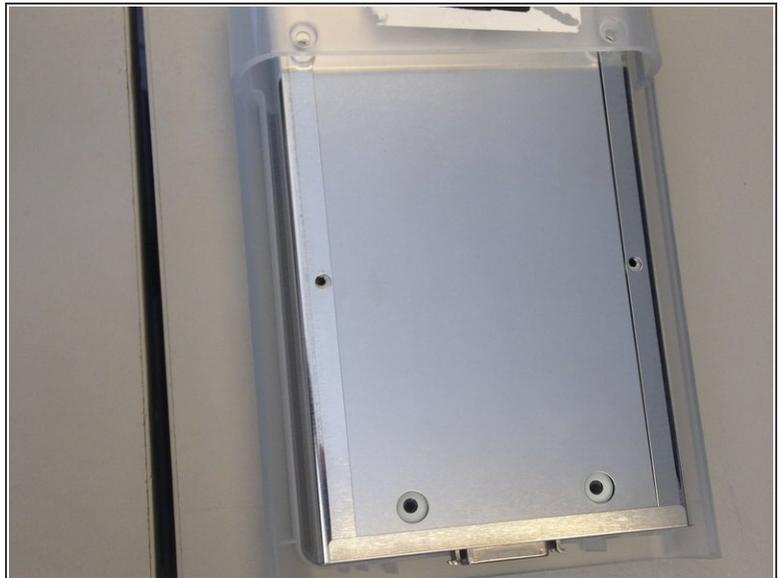


- Slide the bottom plastic panel of the shell down so it is free of the end cap and the top panel.
- Lift panel free of device.

## Step 5

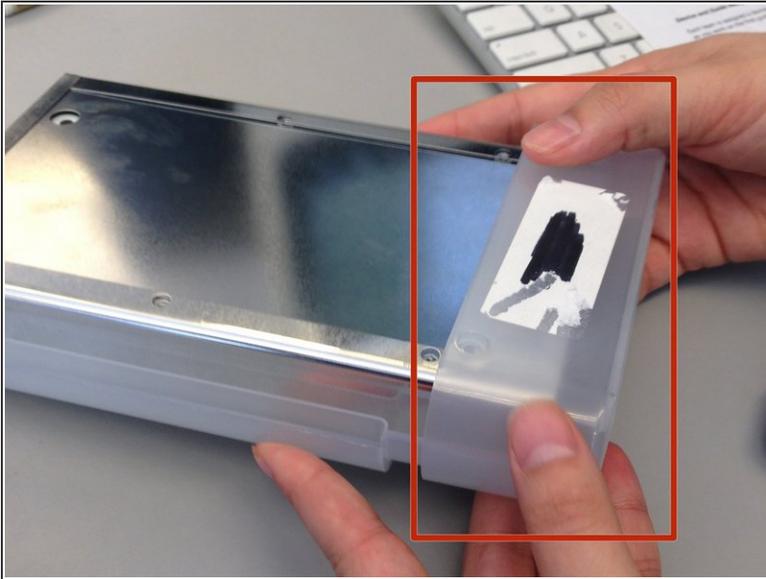

- Remove the plastic end cap by sliding it forward, freeing from the rest of the device.
- You can identify the end cap by noting the label "SuperDisk Drive" above where you would insert a floppy disk.

## Step 6

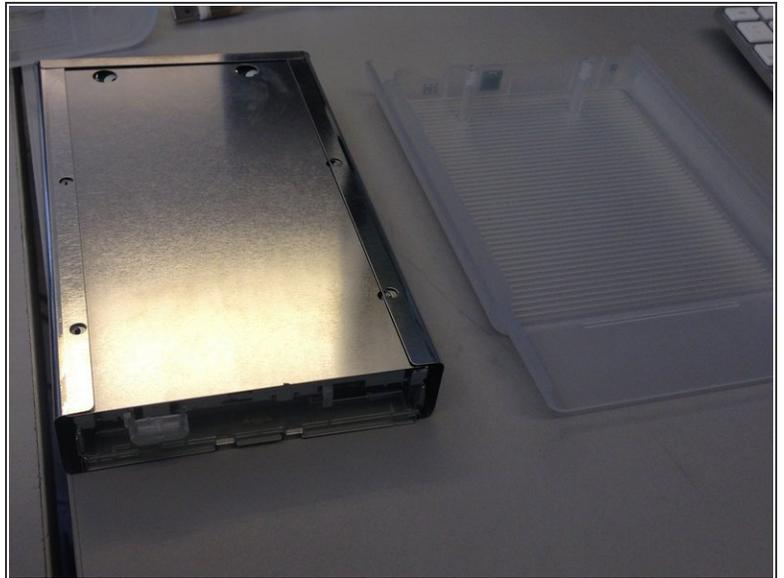


- Slide the metal housing out of the plastic shell.

## Step 7 — Metal Casing




- Slide metal panel out of the metal casing.

## Step 8

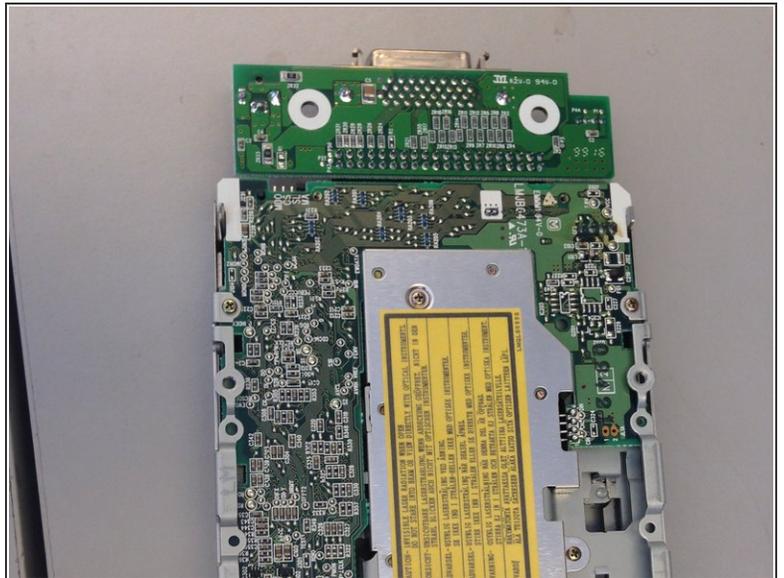



- Slide disk drive out of metal casing.

## Step 9 — Daughter Board

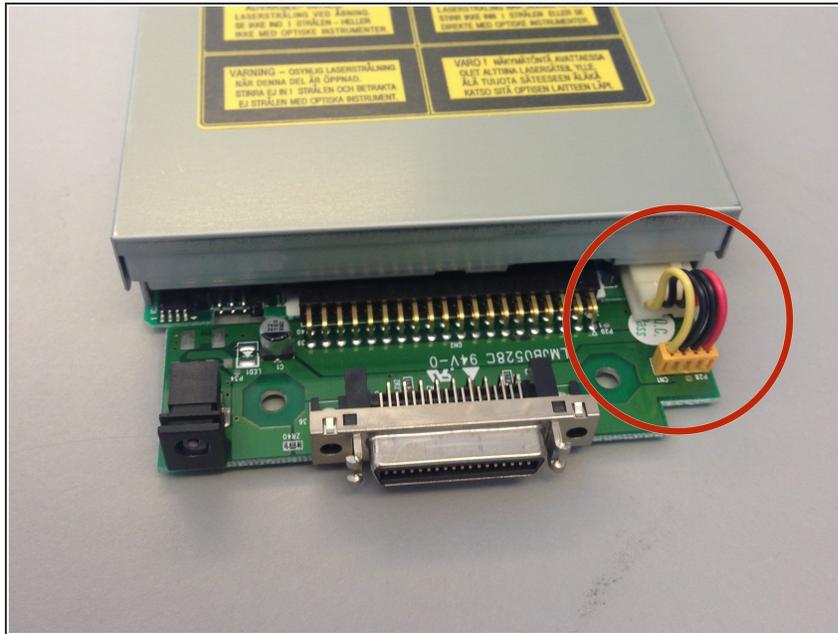


- Flip the disk drive over so the the plug on the daughter board is visible.

## Step 10

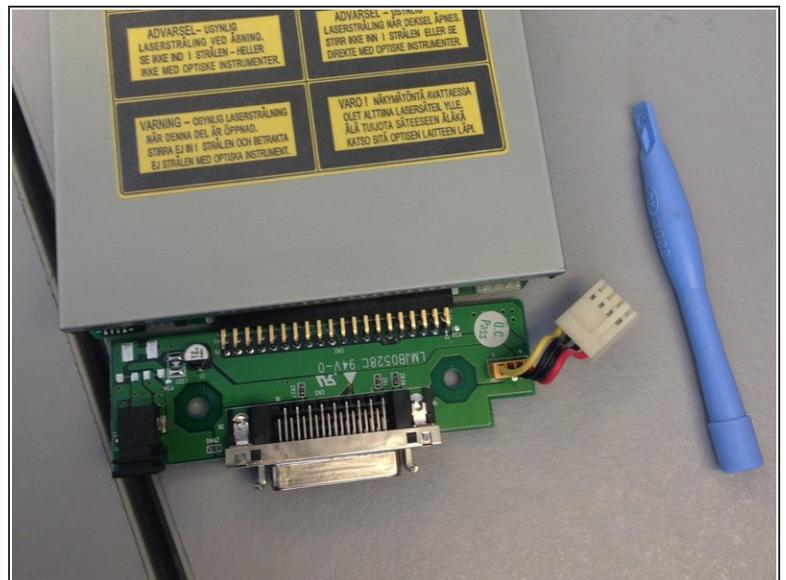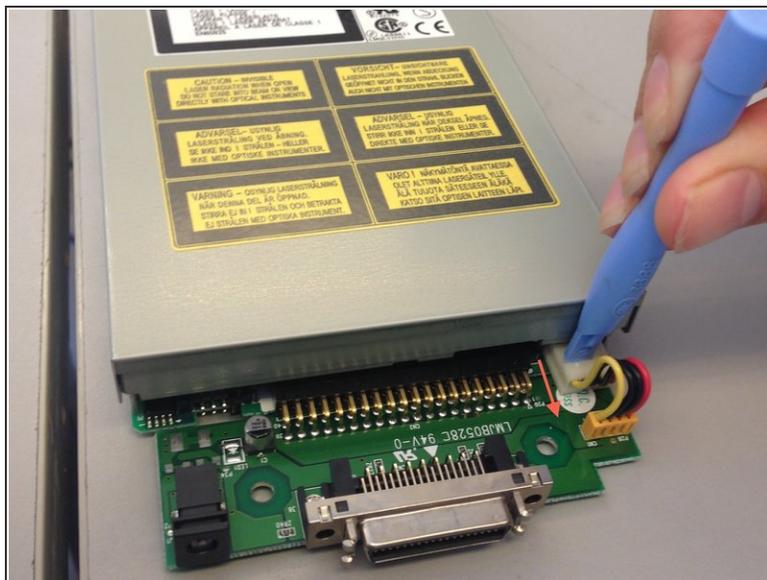

- Using an iPod opener put pressure on the white plug and pull backwards until the daughter board unplugs from the main unit.

## Step 11

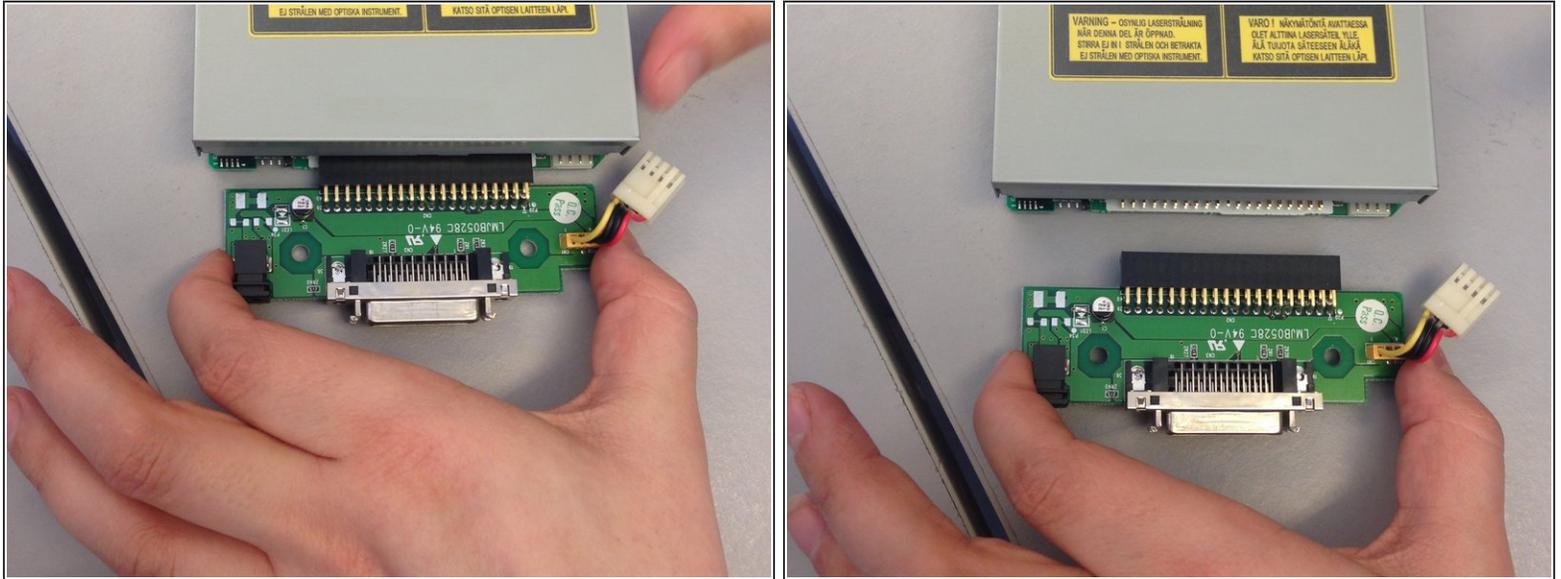

- Gently pull on the daughter board until it separates from the device.

To reassemble your device, follow these instructions in reverse order.