



Mr. Coffee DW13 Heating Plate Replacement

This guide will explain how to replace the coffee maker's heating plate.

Written By: Luke Kraemer



INTRODUCTION

Before replacing the heating plate, make sure that your machine is unplugged and dry, and that your work space is clean.




TOOLS:

- [Phillips #2 Screwdriver](#) (1)
 - [Large Needle Nose Pliers](#) (1)
-

Step 1 — Base



 Before performing this repair, be sure that your machine is unplugged and dry and that your work space is clean.


- Flip the Mr. Coffee DW13 over so that the lid is facing away from you and the base is facing toward you.

Step 2



- Remove the eight 11 mm screws that secure the base of the machine with a Phillips Head #2 screwdriver.

Step 3

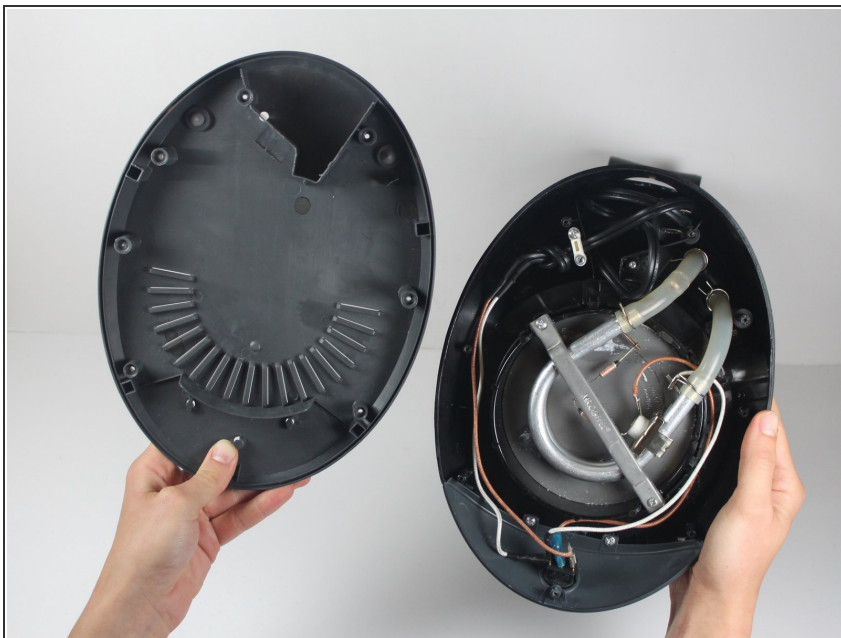

- Gently lift the base cover to expose the inside of the coffee machine.

Step 4 — Heating Plate




- Using the Phillips Head #2 screwdriver, remove the two 13 mm screws that secure the silver support bracket.

Step 5



- Gently lift the silver support bracket to free the heating plate from the heating coil.

Step 6

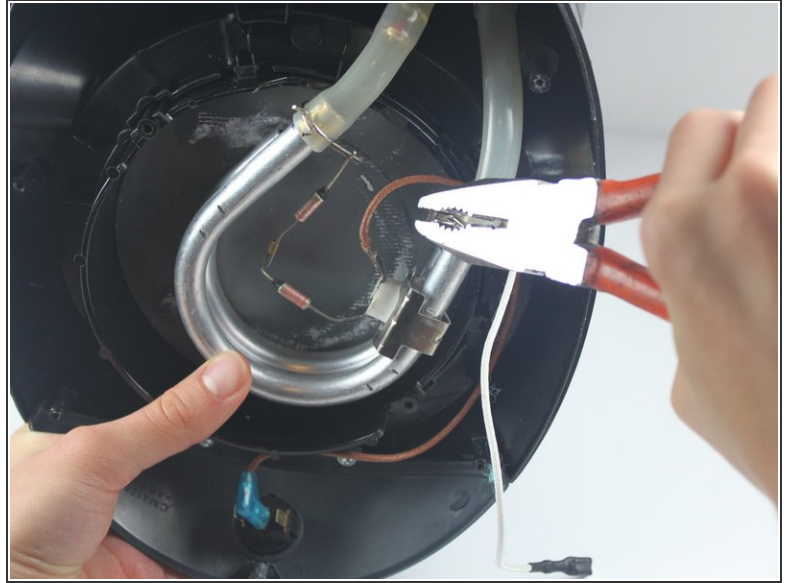


- Pinch and loosen the crimps with the needle-nose pliers.

Step 7



- Once the crimps are loosened, slide them down the tubing.

Step 8

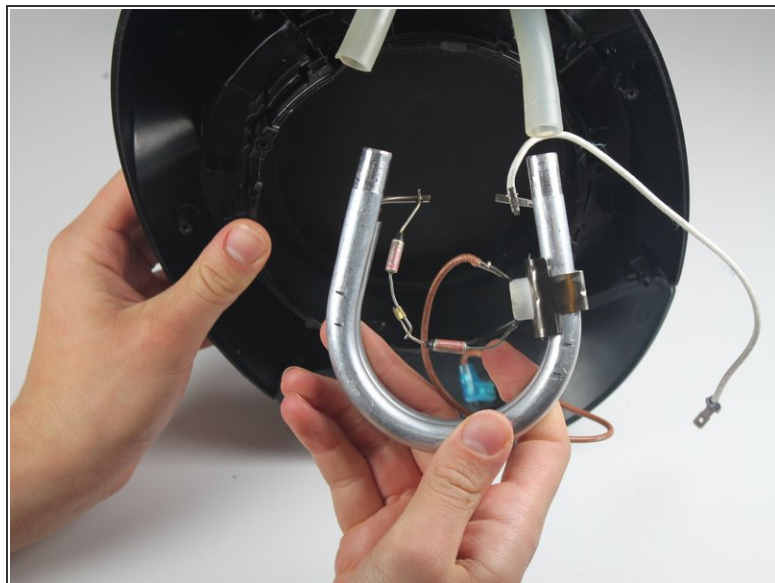

- Separate the tubing from the heating coil by grasping the tubing in one hand and the heating coil in the other. Gently pull them apart.

Step 9



- Place your hand on the front side of the heating plate and push towards the bottom of the coffee maker to pop the heating plate out of place.

To reassemble your device, follow these instructions in reverse order.