



Acer Aspire 5749 Fan/HeatSink Replacement

Does your laptop fan make noise even after cleaning? Here's how simple it is to change.

Written By: JeanChristophe



INTRODUCTION

Does your laptop fan make noise even after cleaning?

Here's how simple it is to change.



TOOLS:



- [Arctic Silver Thermal Paste](#) (1)
-

Step 1 — Fan/HeatSink






- Retrieve all Screw's from the bottom of the laptop and organize them into 2 different sets.
- When removing the back cover gently press on **audio connections** on the back right of the laptop.

Step 2

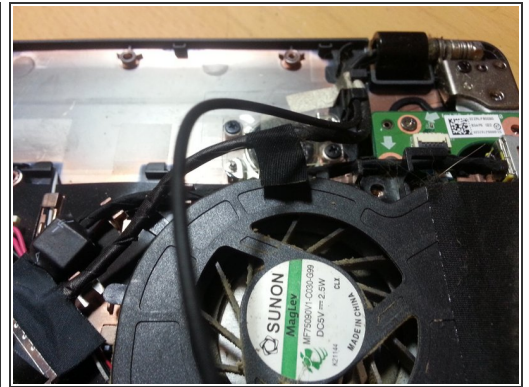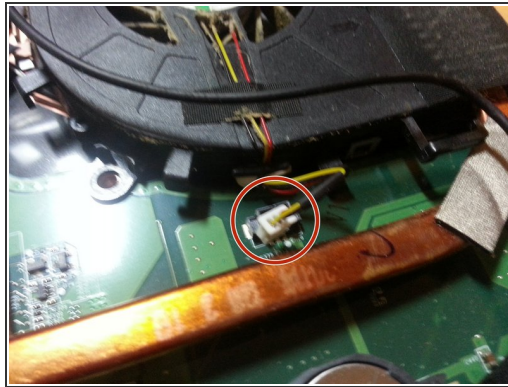

- Carefully release and unplug every wire that connects to the fan.

Step 3

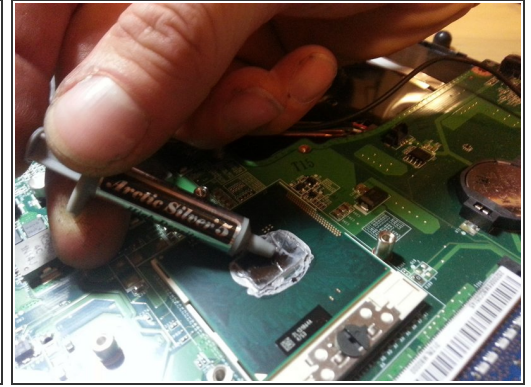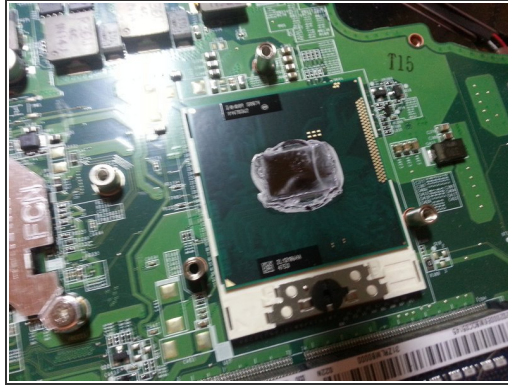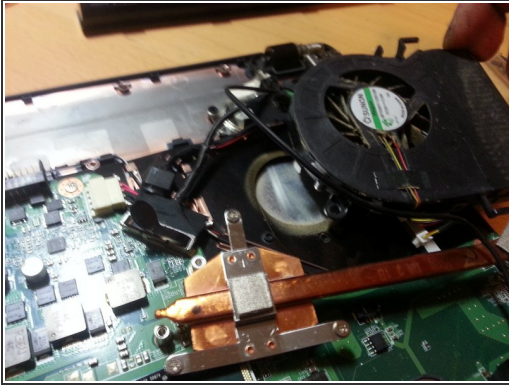

- Release the screw that connects the fan to the base of the laptop. Carefully remove your fan and heat sink.
- Apply heat paste to the center before replacing the fan and heat sink. Then reinsert the screw and plugs.

To reassemble your device, follow these instructions in reverse order.