




LG VX4500 Display Screen Replacement

How to replace LG VX4500 display screen.

Written By: David Foster

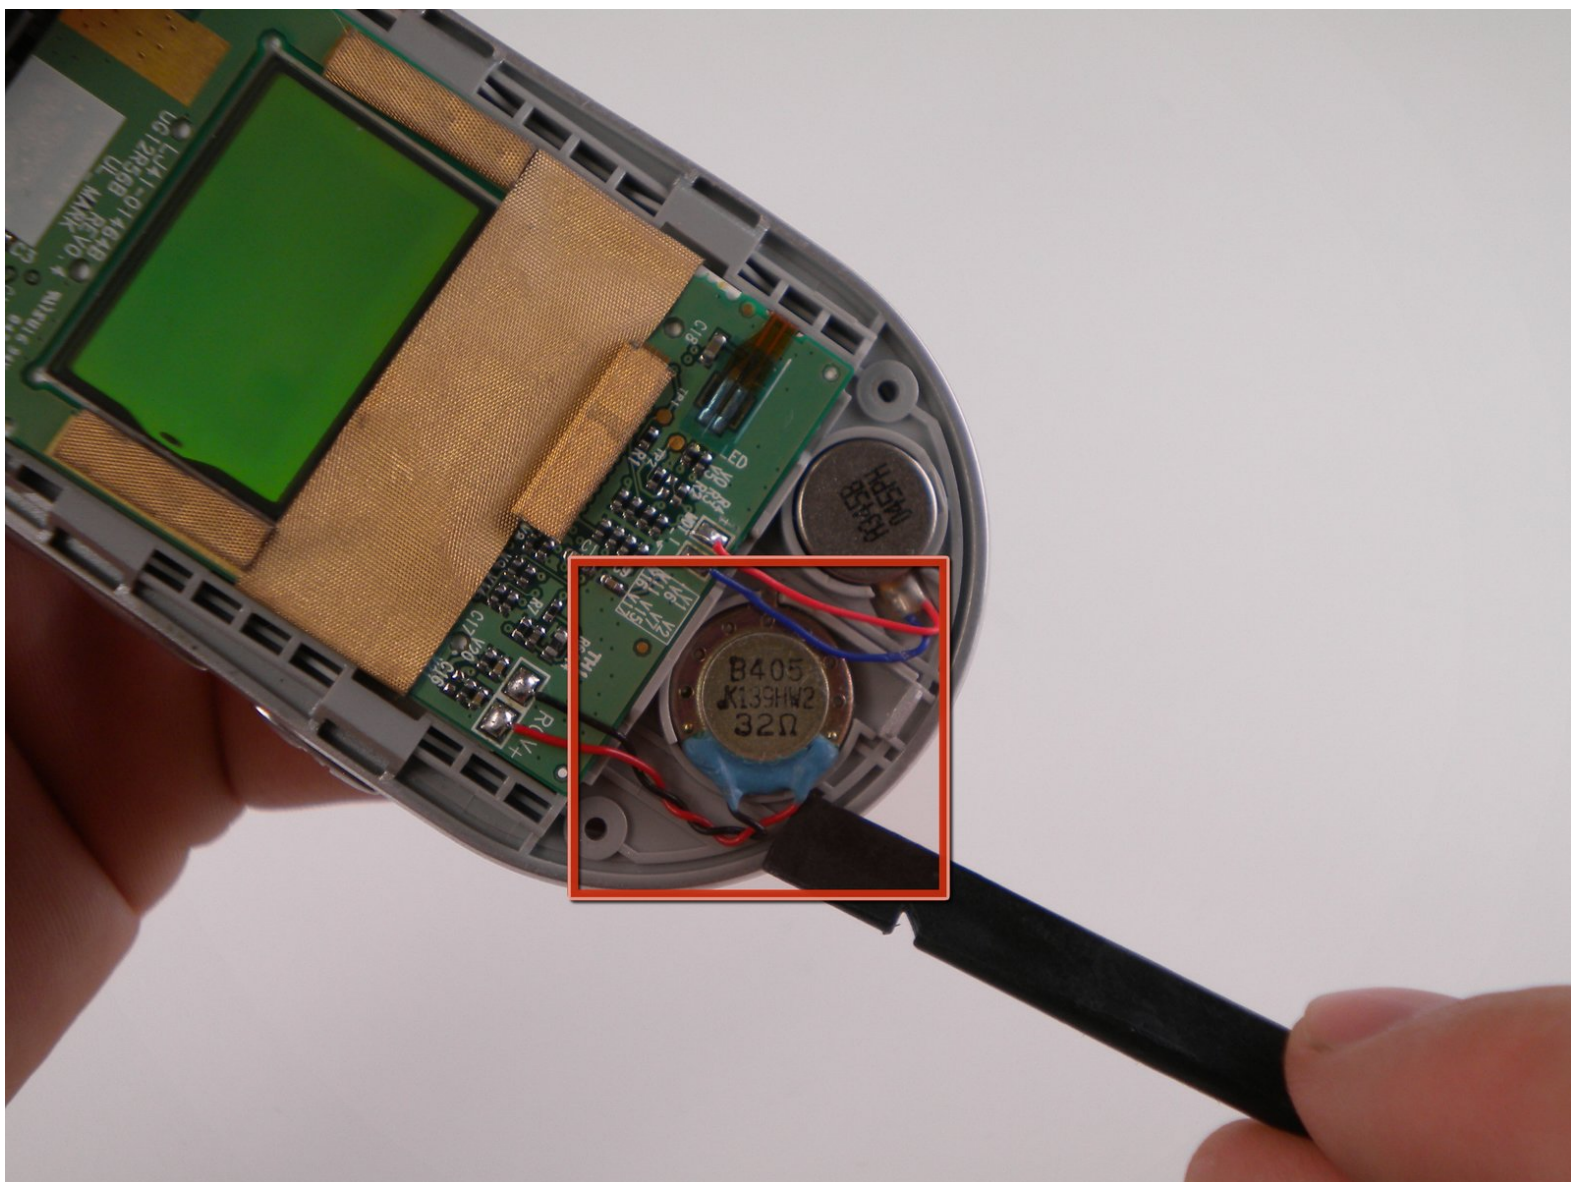

INTRODUCTION

- If your LG VX4500 screen does not operate properly due to being cracked, shattered, or dead, you may want to replace it.
- A properly functioning LCD display screen will clearly reveal text and photos without interruption.
- Steps 6 and 7 require the use of a spudger to remove the speaker and vibrator.
- Step 9 will require you to desolder the solder joint using a soldering iron.
- This guide is straightforward and will help you replace the display screen in less than an hour.
- Make sure the cell phone is turned off and unplugged before you begin.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Soldering Iron](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Turn the closed phone so that the back panel is facing you.
- Press down and forward firmly on the gray tab in the middle of the phone.

Step 2



- Now just lift up on the battery and remove it from the phone.

Step 3 — Outer Display Cover




- Remove 4 rubber grommets using the Spudger.

Step 4




- Remove 4 screws using the Phillips #00 Screwdriver.

Step 5

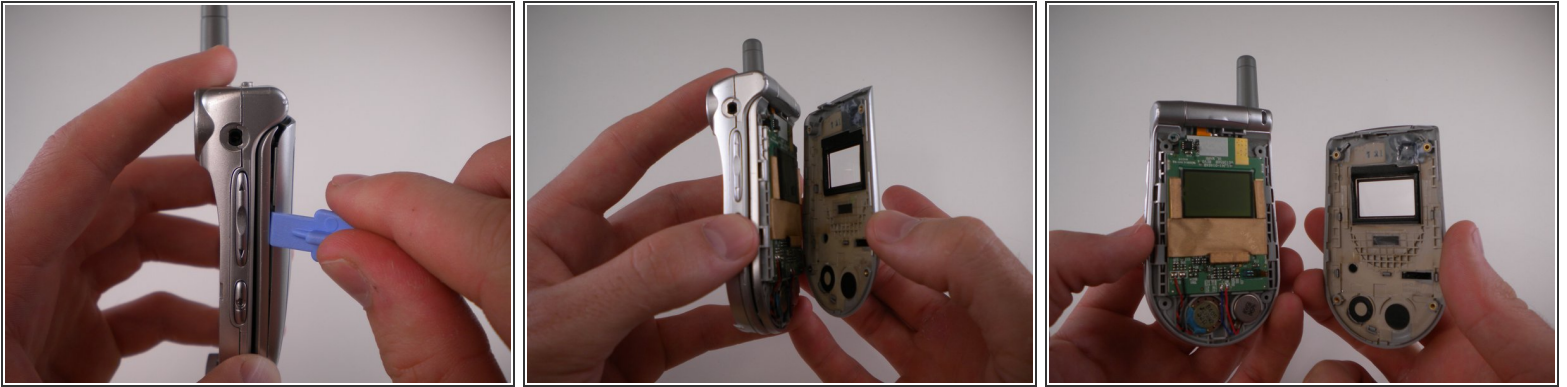



- Carefully pry off outer cover using iPod Opening Tool.

Step 6 — Display

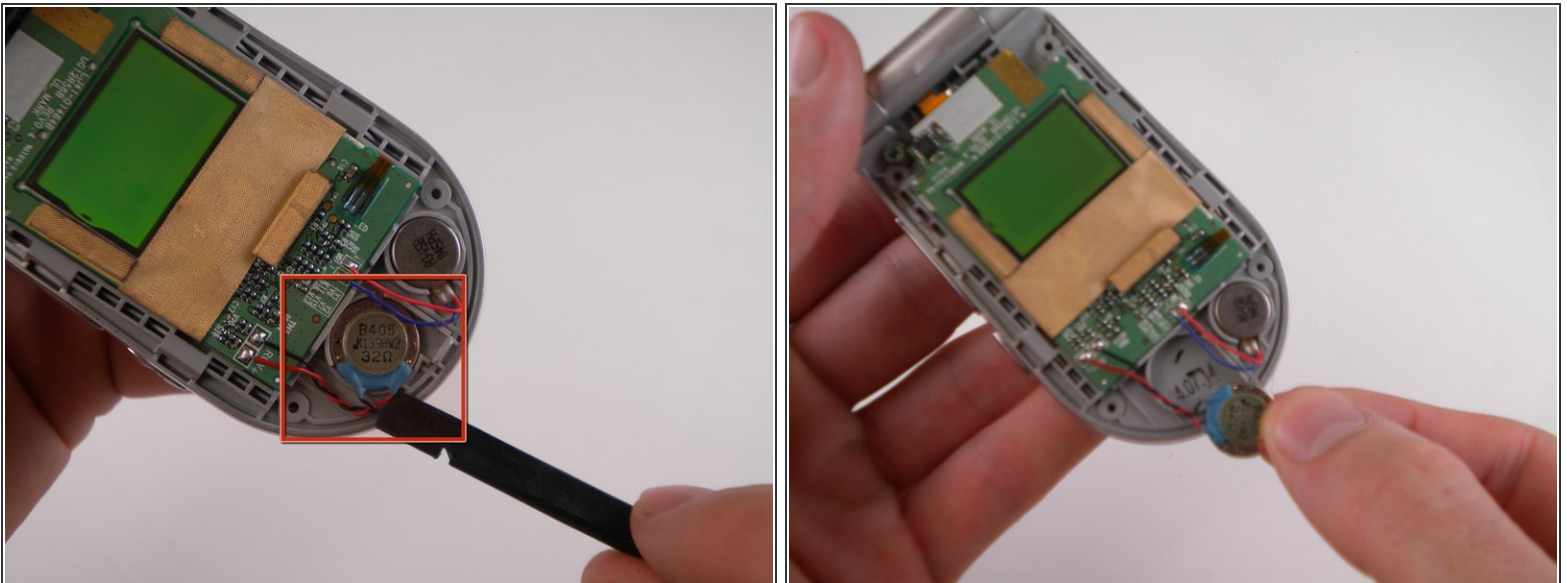



- Remove speaker using the Spudger.

Step 7

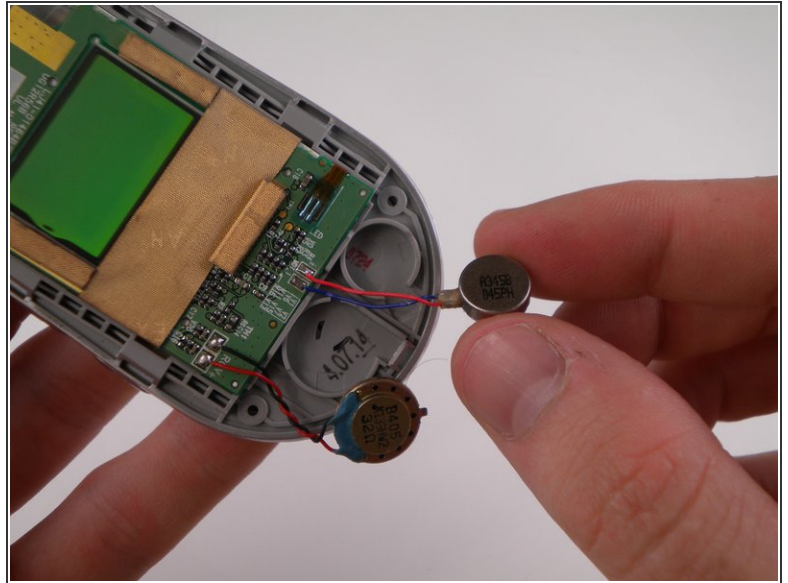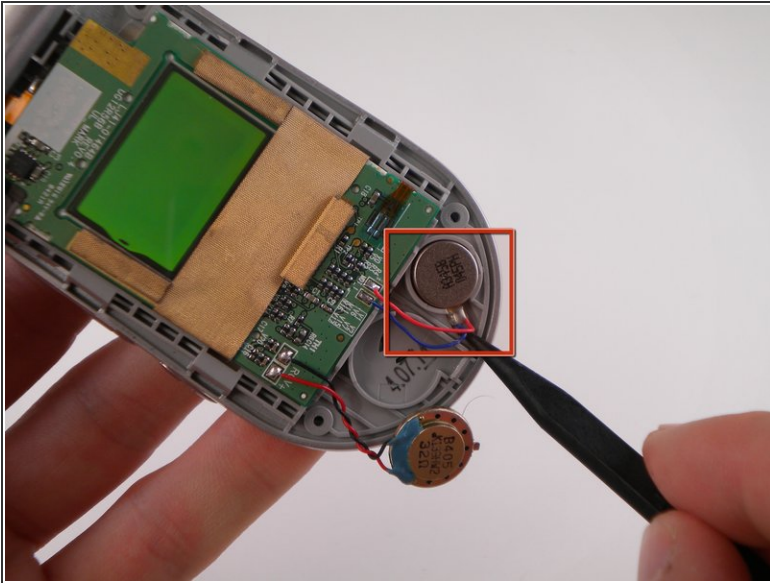

- Remove vibrator using the Spudger.

Step 8

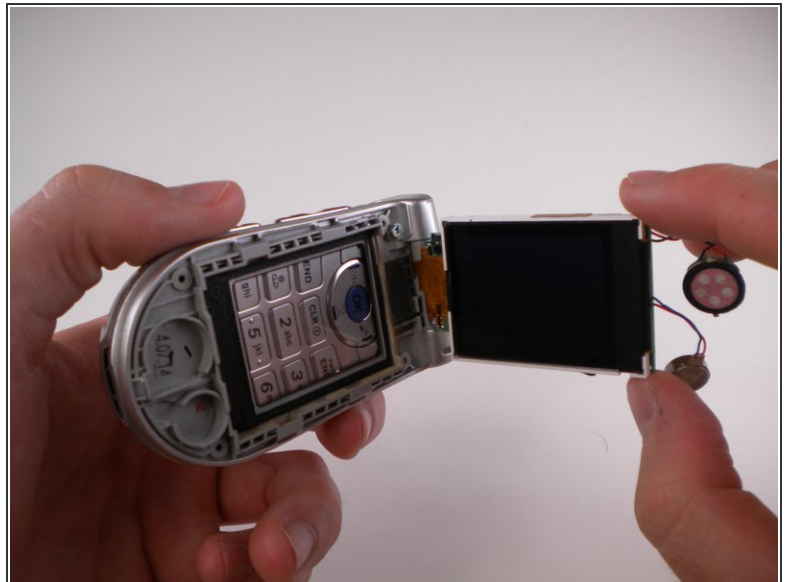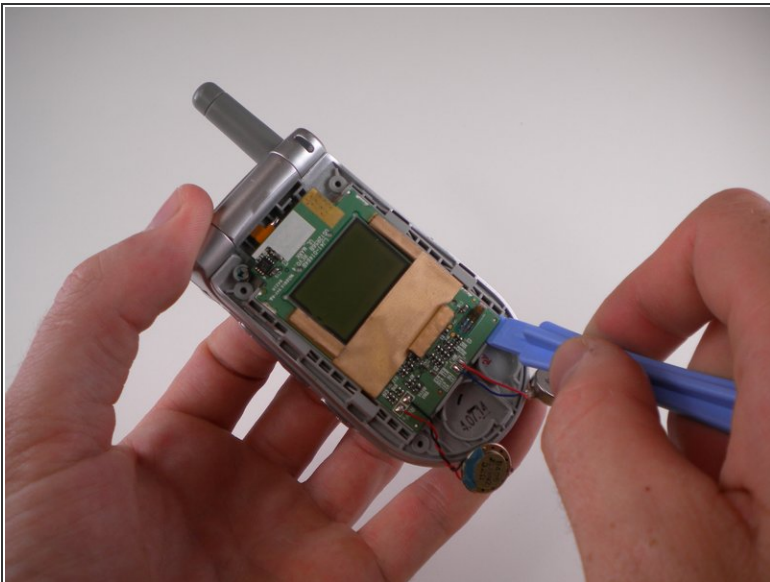

- Lift up LCD display using iPod Opening Tool.

Step 9



⚠ DO NOT TOUCH THE SOLDERING IRON. IT IS EXTREMELY HOT!

- De-solder solder joint using Soldering Iron.

Step 10



- Pry off ribbon cable using iPod Opening Tool.

To reassemble your device, follow these instructions in reverse order.