




LG VX7000 Charger Adapter Replacement

Phone won't charge, and the charger is...

Written By: Nichole Shaw

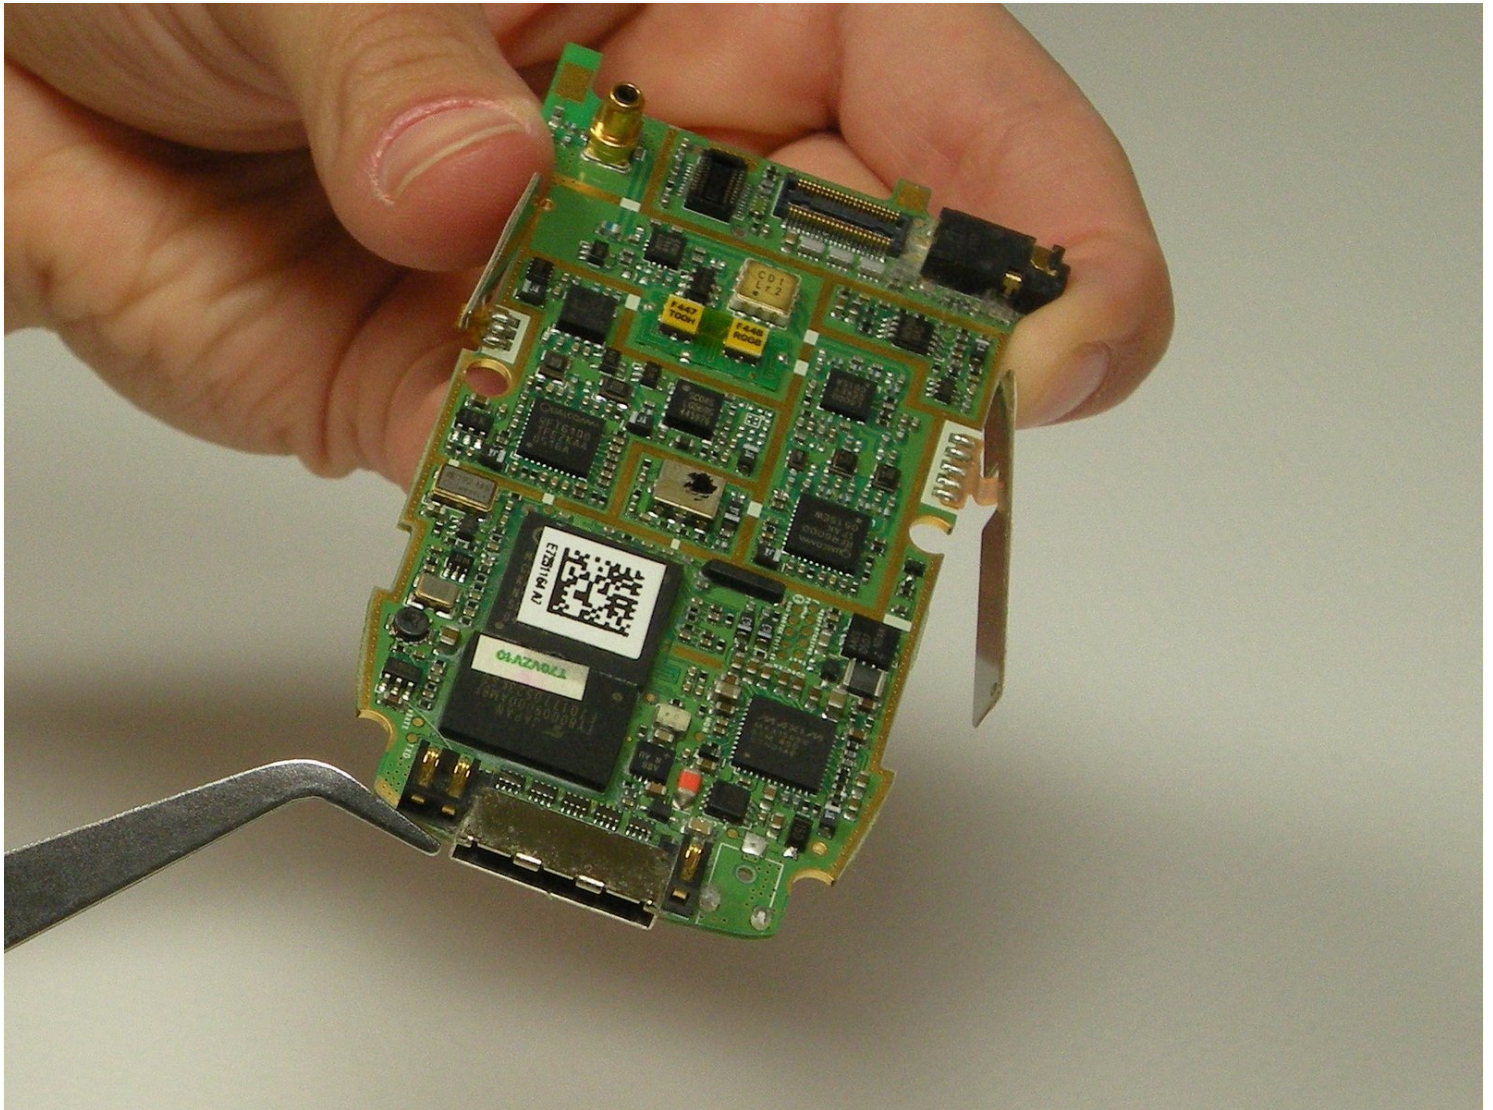

INTRODUCTION

Phone won't charge, and the charger is functional? Replace your phone's charging adapter.

NOTE: Charging adapter is attached to the logic board, so replacement requires replacing the logic board.

TOOLS:

Phillips #00 Screwdriver (1)

Tweezers (1)

Step 1 — Battery




- Lay the phone, screen side down, in your palm.
- Slide the grey button towards the top of the phone.

Step 2



- With the button unlocked, grab the battery on the sides and pull up, then slide the battery up to completely remove it from the phone.

Step 3 — Motherboard

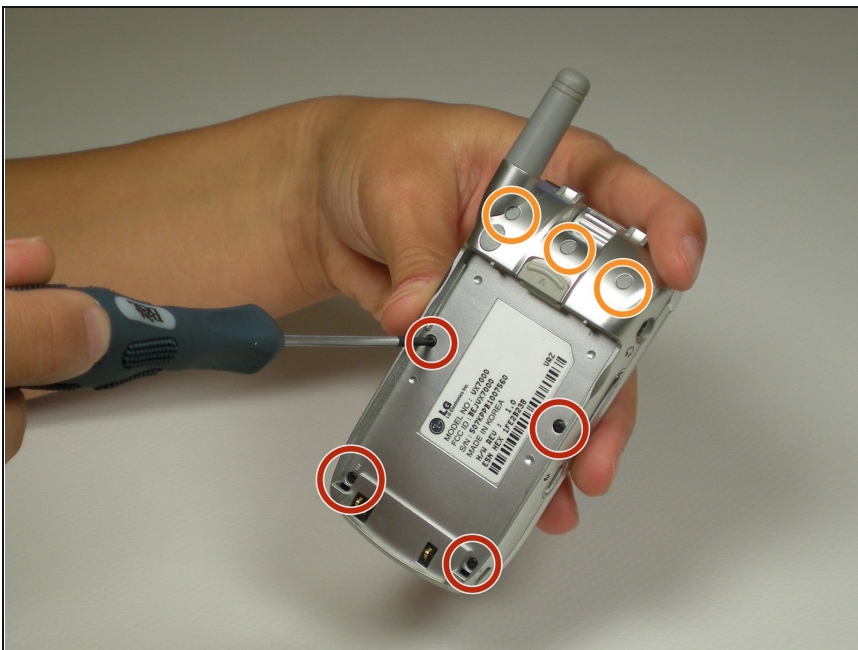


- Use the Phillips #00 and remove the four screws on the lower backside of the phone.
- Remove the three rubber screw covers with [tweezers](#) and then the three screws underneath using a Phillips #00 screwdriver.

Step 4




- Detach the outer casing from the back of the phone.
- ① There will be a significant amount of resistance to detaching the back casing.

Step 5

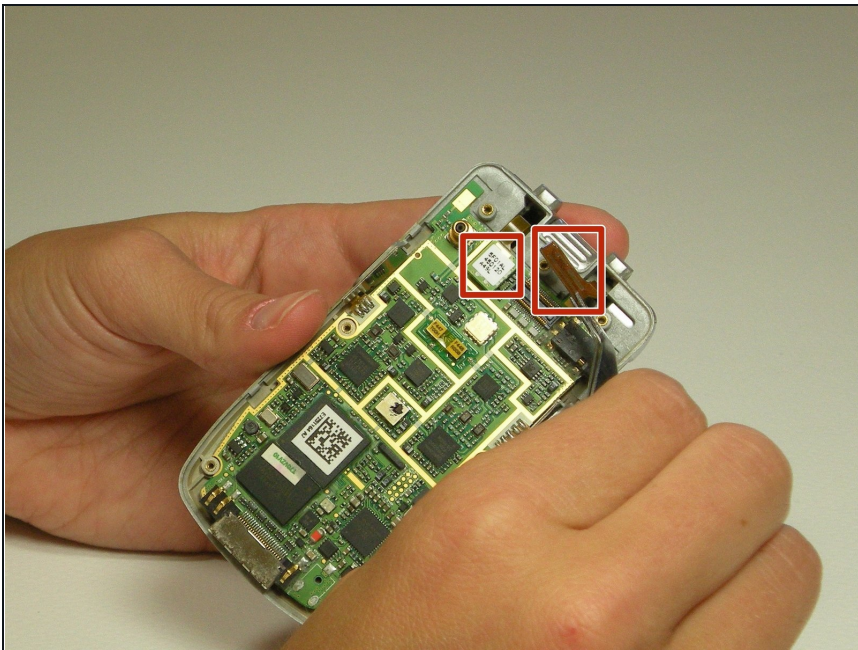


- Unsnap the gold rectangular connector and silver square connector from the motherboard.

Step 6

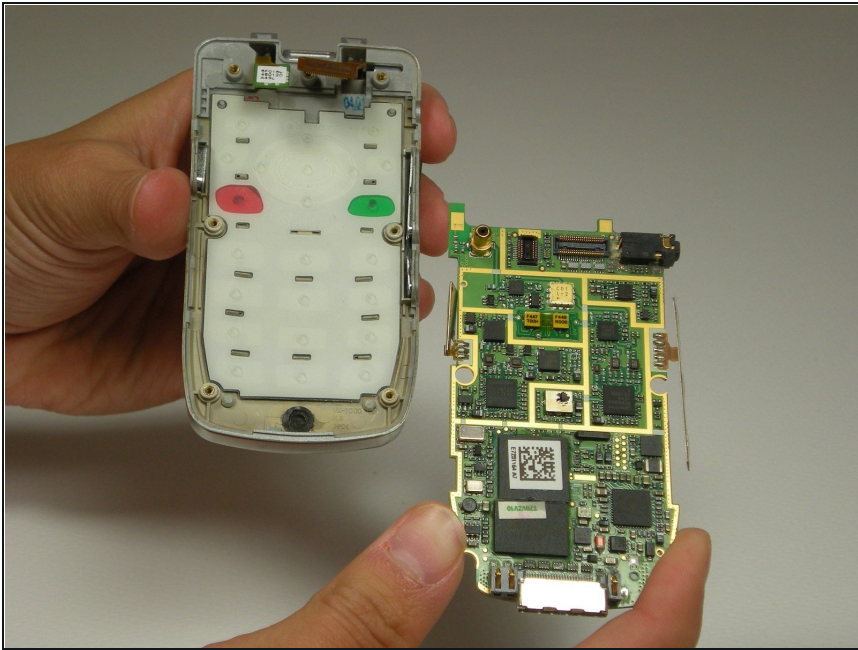

- Remove the motherboard. Do not remove other components.
- Insert the new motherboard with the white side facing down.
- ⓘ Make sure the side buttons on motherboard are correctly aligned to avoid future complications.

Step 7 — Charger Adapter

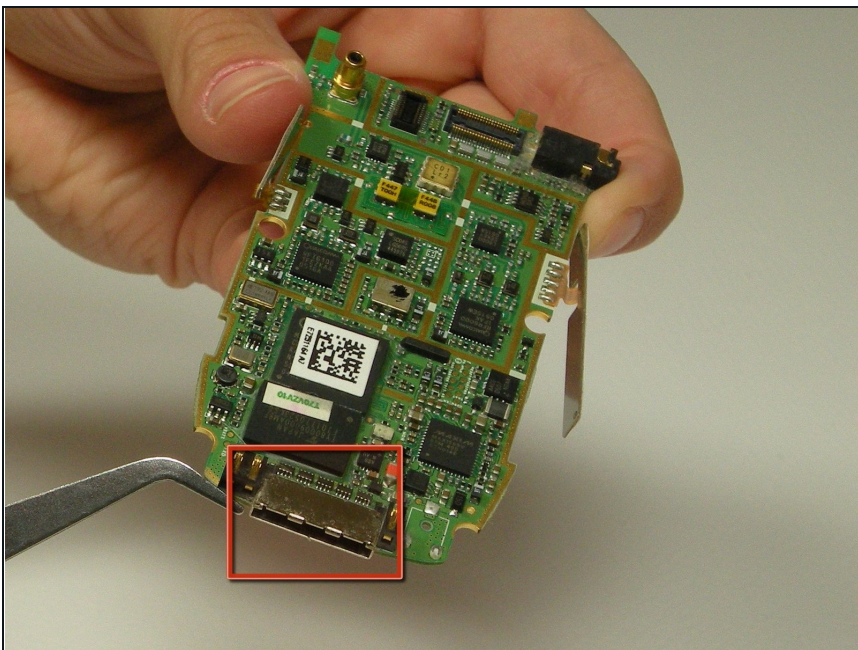

- Replace logic board to replace charging adapter.

To reassemble your device, follow these instructions in reverse order.

