



# Nokia 6086 Keypad Replacement

Written By: Caitlin Rahm



---

## INTRODUCTION

Replacing a faulty keypad.

---

### TOOLS:


- [iFixit Opening Tools](#) (1)
  - [Spudger](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Turn off the phone.
- Check if there is a microSD card in the slot behind the door on the side. If so, remove it by first pushing it in, then pulling it out.
- Position the phone so that the back side is in view.

## Step 2

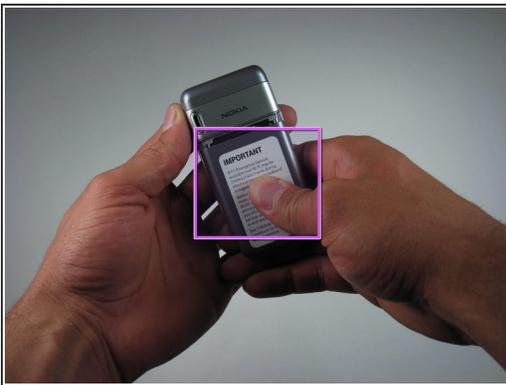

- Remove the back battery cover.
  - Apply pressure on the cover while simultaneously sliding the cover downward.

## Step 3



- Insert the iPod opening tool between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
  - ⓘ The battery lifts out of the phone fast and easily.
- Carefully lift the battery out of the phone.

## Step 4 — Upper Back Cover



- Turn the phone so that the back of the phone is facing forward.
- The picture to the left shows the location of the plastic tabs that attach to the upper cover of the phone.
  - ⓘ In this picture, the upper cover has already been removed.

## Step 5




- Place the iPod opening tool under the tabs near the top of the phone.
- Slide the iPod Opening Tool upwards.
  - This will pop the tabs and release the upper part of the phone.
- ⓘ Repeat for the left and the right sides.

## Step 6




- Place the iPod opening tool at the top area of the bottom section of the phone (indicated in picture).
- Lift the iPod opening tool to pop open the clips.
  - This will release the upper back cover of the phone.
- ⓘ Repeat for the left and the right sides.

## Step 7

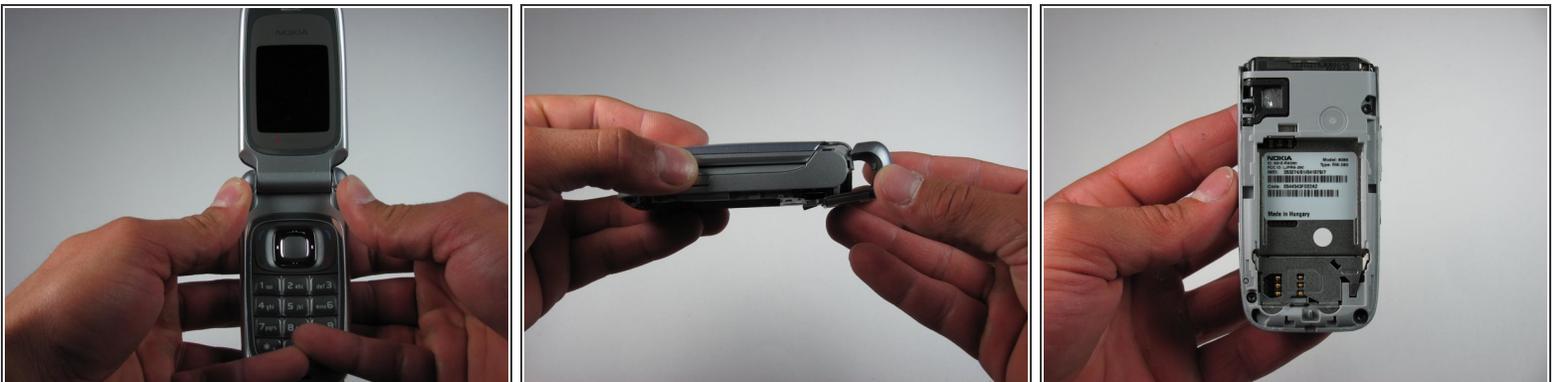


- Push upward on the top back cover using two thumbs.
  - This will remove the top back cover from the phone.

## Step 8 — Base of The Phone

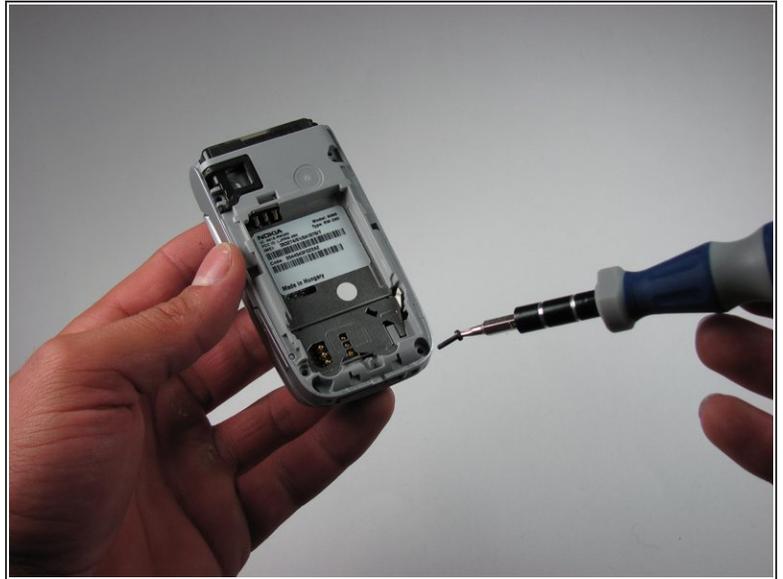

- Locate the four screws.
- Remove the screws using a T6 Torx screwdriver.

## Step 9

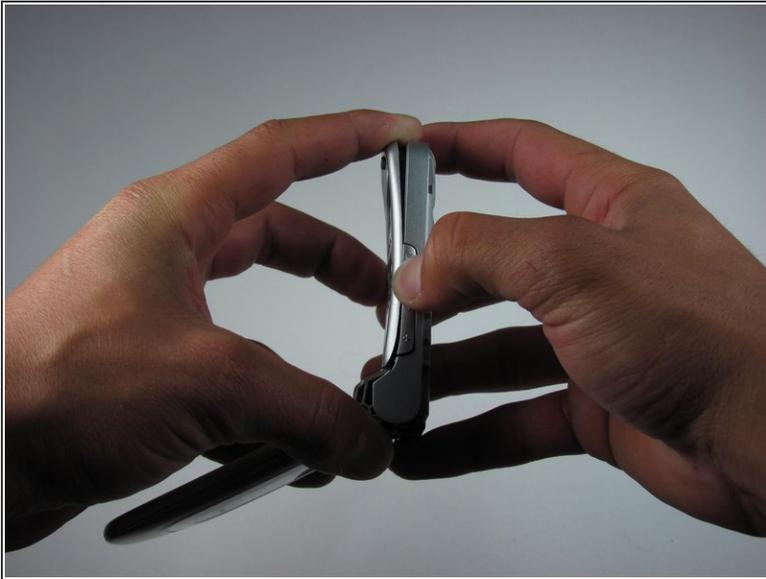

- Turn the phone over.
- Gently pull apart the phone.
  - Start at the bottom of the phone and pull outward.
  - There are plastic catches on the middle of each side. These should pop free as you pull.
- ⚠ Be careful, the phone will separate into two sections.

## Step 10



- The phone should now be in two different sections.
  - 1) The logic board and the back cover
  - 2) The keypad and the rest of the phone

## Step 11 — Keypad



- Place the keypad in view.

## Step 12



- Remove the keypad from the phone by lifting the keypad off the phone.

## Step 13



- The keypad should be detached.

To reassemble your device, follow these instructions in reverse order.