



# Nokia 3300B Keyboard Replacement.

Replace the keyboard of the Nokia 3300B.

Written By: Chris Colwell



# INTRODUCTION

Use this guide to replace the keyboard of the Nokia 3300B.

## Step 1 — Battery



- Flip the Nokia 3300B over with the back-side facing towards you.
- Gently press the button on the back of the battery cover to release the cover and slide up.

## Step 2



- Lift the battery out of the back of the phone.
- ❗ It is easiest to lift the battery out of the phone from the right-hand side, as seen in the picture.



## Step 3 — Keyboard




- Gently push the blue tabs on the top of the phone out of their slots.
- With the phone facing up, pop the blue faceplate off by using your fingernail (or some tweezers) and working your way around the phone.
- Note: If the blue cover does not detach easily use your finger nails to try and split it open, as seen in the picture.

## Step 4



- With the screen still facing you, lift and remove the blue faceplate.

## Step 5

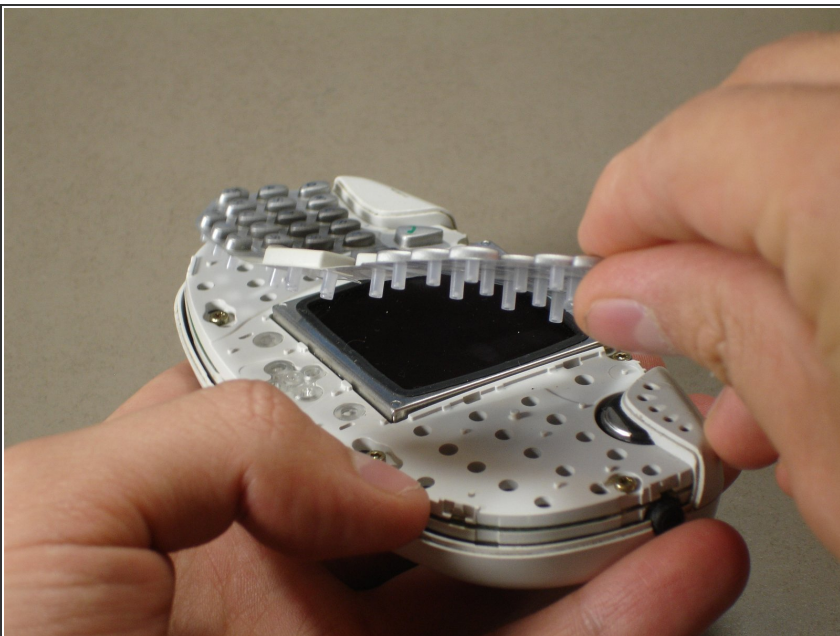

- Grab the sides of the keypad and lift each side up vertically, until the keypad is completely removed.
- ⓘ If you encounter resistance while removing the keypad, be sure to lift up evenly on both sides to ensure that the pins do not snap.
- ☑ When replacing the keypad, make sure that the plastic pegs all enter their proper holes.

To reassemble your device, follow these instructions in reverse order.