


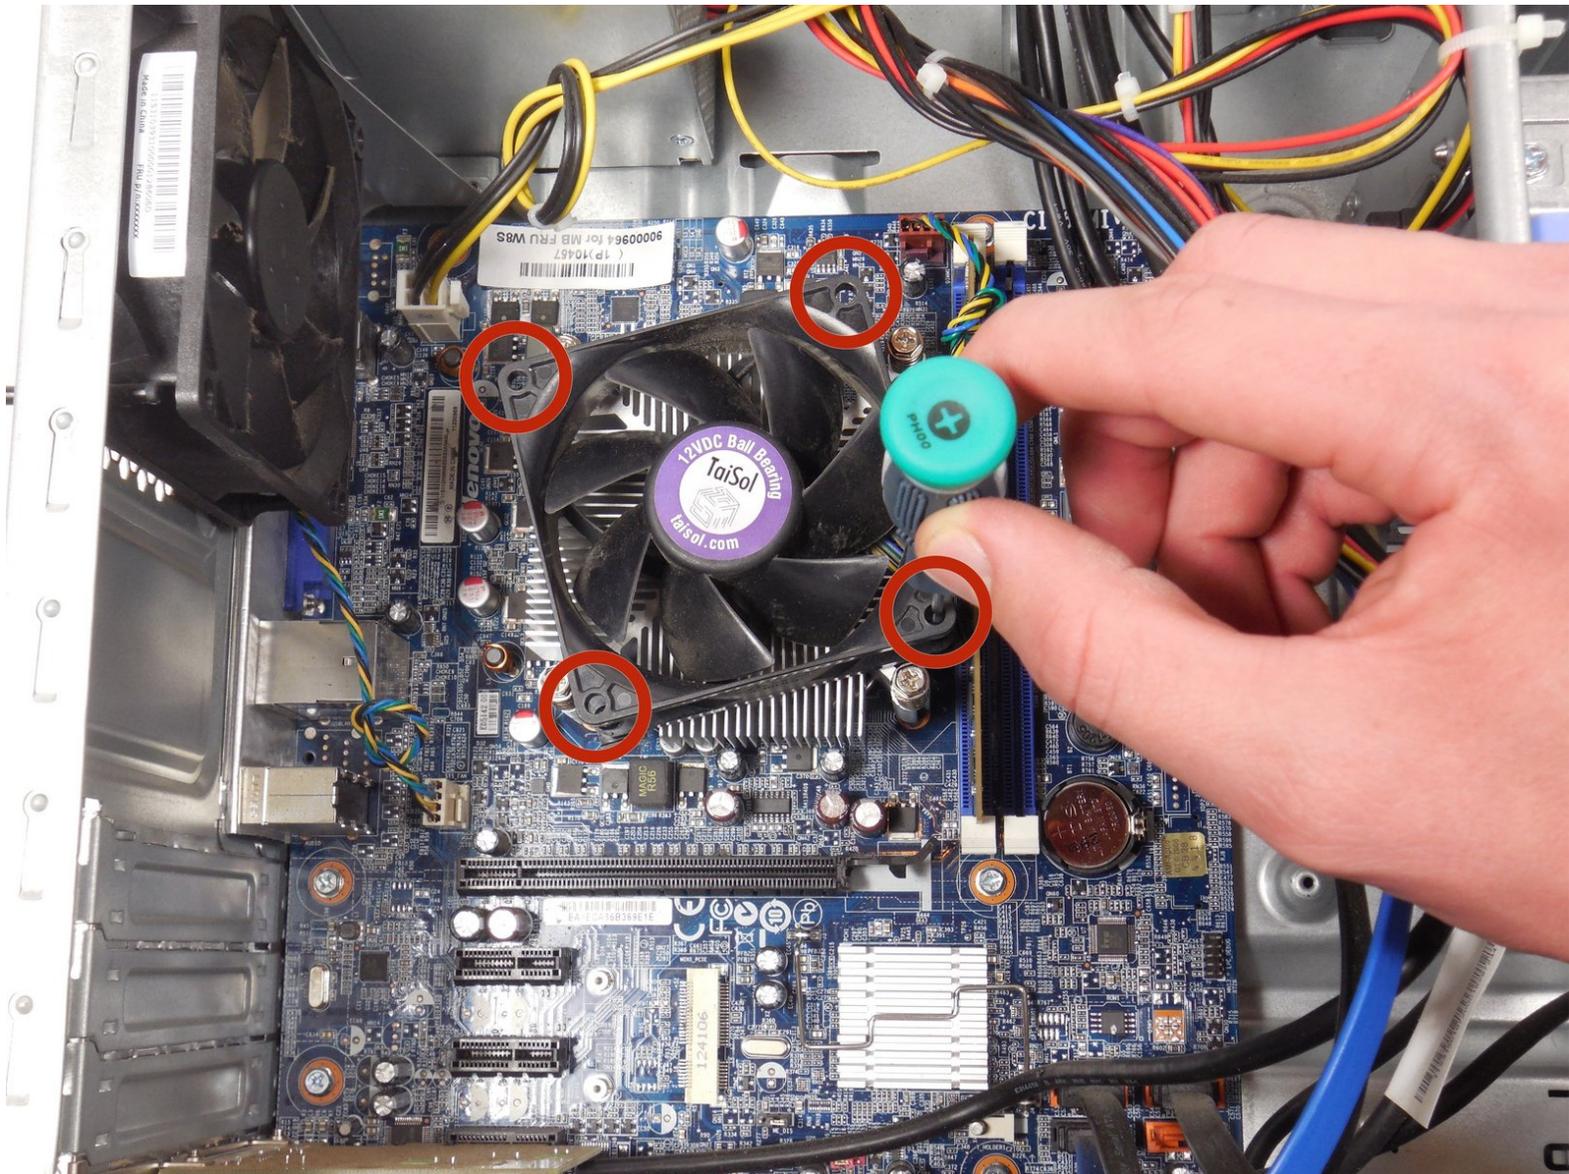

Lenovo IdeaCentre K410 CPU Fan Replacement

This guide will show how to remove the CPU fan.

Written By: Timothy Grebe



 **TOOLS:**


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Side Panel




- Lay the computer down on its side as shown.
- Remove the two 14mm screws shown. The screws are loose enough to unscrew with your hands.

Step 2

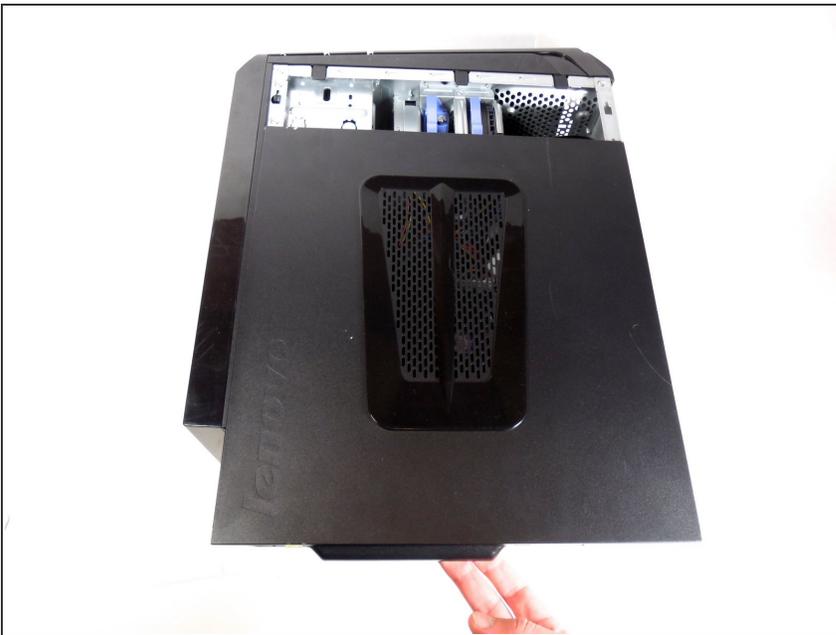


- Gently slide the side panel straight back and remove from the computer.

Step 3 — CPU Fan

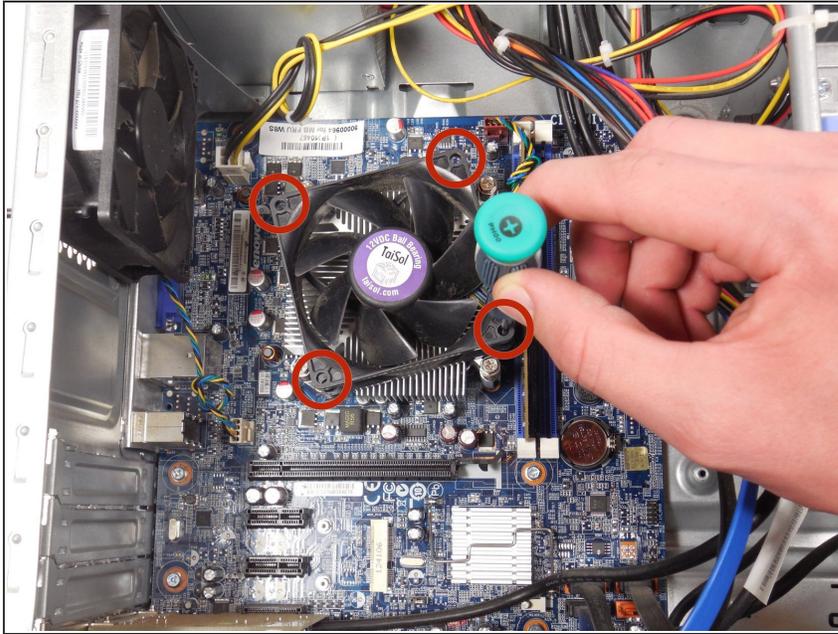

- Using the Phillips #00 Precision screwdriver, unscrew the four 12mm screws that hold the fan in place.
- ⓘ Be careful not to strip the screws.

Step 4

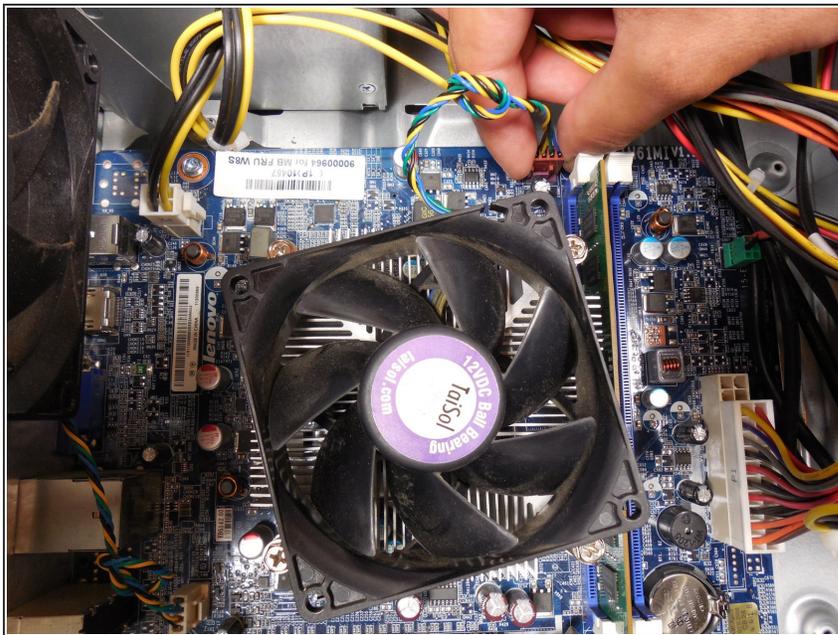

- Unplug the fan from the motherboard by gently pulling out the single plug. Then lift the fan up and out of the computer.

To reassemble your device, follow these instructions in reverse order.