

BLU Dash Music 4.0 Headphone Jack Replacement

This guide will teach you how to replace the headphone jack.

Written By: Lioma Terrero Soto



This document was generated on 2020-11-28 04:00:09 AM (MST).



TOOLS:

- iFixit Opening Tools (1)
- Phillips #0 Screwdriver (1)
- Soldering Iron (1)
- Solder (1)



PARTS:

Blu Dash 4.0 headphone jack (1)

Step 1 — Remove the Back Cover



 Use the plastic opening tool or your fingernail to pry off the back cover.

Step 2 — Remove the Battery



 Use the plastic opening tool or your fingernail to pry off the battery from the top right corner.


Step 3 — Remove the Screws





Use a screwdriver to remove each of the four screws.


Step 4 — Remove the Inner Cover

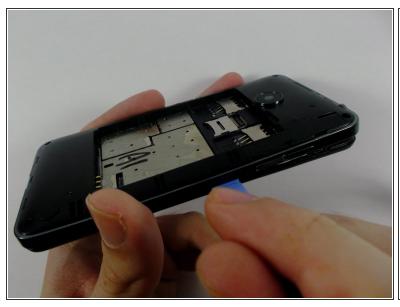



- Take the plastic opening tool and insert it in the crease between the front screen and the inner back cover.
- Slide the plastic opening tool along the edge of the phone to pry the two covers apart.


Step 5 — Remove the Black Pad

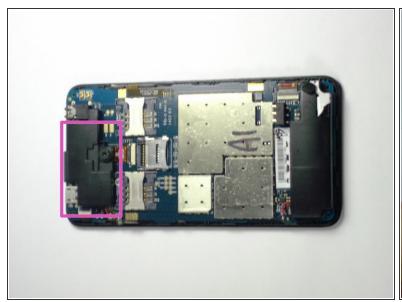




- Insert the plastic opening tool between the black pad and the circuit board. Then gently pry off the black pad.
- This will make the connections of the charging port more accessible.


Step 6 — Remove the Solder Connections

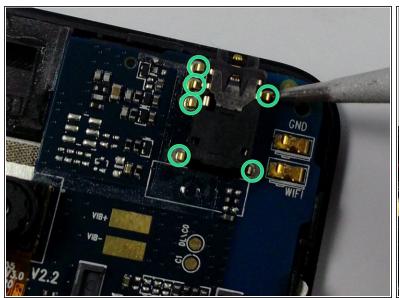

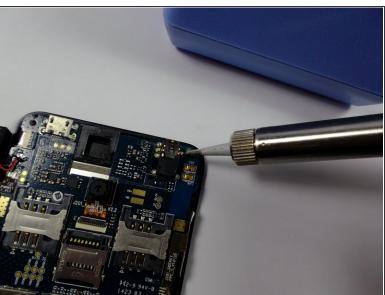

- Using a soldering iron and a pair of pliers, melt the soldering connections around the headphone jack.
- Quickly pull off the current headphone jack while the soldering connections are still soft.

Step 7 — **Mount the New Headphone Jack**

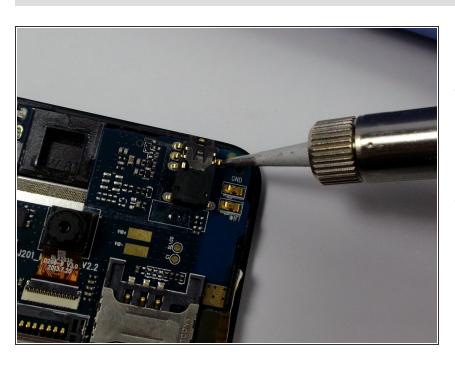

- Mount the new headphone jack such that the prongs of the headphone jack line up with the soldering connections.
- Using a soldering iron, solder the connections in place.

To reassemble your device, follow these instructions in reverse order.